# 3G TR 25.931 V2.0.0 (2000-05)

Technical Report

3rd Generation Partnership Project; Technical Specification Group RAN; UTRAN Functions, Examples on Signalling Procedures (Release 1999)



The present document has been developed within the 3<sup>rd</sup> Generation Partnership Project (3GPP<sup>TM</sup>) and may be further elaborated for the purposes of 3GPP.

Keywords

#### 3GPP

Postal address

3GPP support office address

650 Route des Lucioles - Sophia Antipolis Valbonne - FRANCE Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Internet

http://www.3gpp.org

#### **Copyright Notification**

No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

 $\ \, \odot$  2000, 3GPP Organizational Partners (ARIB, CWTS, ETSI, T1, TTA,TTC). All rights reserved.

# Contents

Forev	vord	5
1	Scope	<del>(</del>
2	References	
3	Definitions, abbreviations and notation	<i>6</i>
3.1	Definitions	
3.2	Abbreviations	
3.3	Notation for the signalling procedures	
4		
4	UTRAN and UE protocol Architecture	
4.1	Protocol Architecture	
4.2	RANAP Procedures & Messages	
4.3	SABP Procedures & Messages	
4.4 4.5	RNSAP Procedures & Messages	
4.5 4.6	NBAP Procedures & Messages	
4.6.1	Q2630.1 (Q.AAL 2)	
4.7	RRC Procedures & Messages	
4.8	BMC Procedures & Messages	
4.9	DSCH Frame Protocol Messages	
4.10	USCH Frame Protocol Messages	
5	UTRAN Signalling Procedures	
6	Procedures not related to a specific UE (global procedures)	
6.1	System Information Broadcasting	
6.2	Service Area Broadcast	19
7	Procedures related to a specific UE	20
7.1	Paging	
7.1.1	Paging for a UE in RRC Idle Mode and RRC connected mode (CELL_PCH and URA_PCH states).	
7.1.2	Paging for a UE in RRC Connected Mode (CELL_DCH and CELL_FACH states)	21
7.2	NAS Signalling Connection Establishment	
7.3	RRC Connection Establishment	22
7.3.1	DCH Establishment	22
7.3.2	RACH/FACH Establishment	
7.4	RRC Connection Release	
7.4.1	DCH Release	
7.4.2	Common Transport Channel Release	
7.5	RRC Connection Re-establishment	
7.5.1	DCH Re-establishment	
7.6	Radio Access Bearer Establishment	
7.6.1	DCH - DCH Establishment - Synchronised	
7.6.2	DCH - DCH Establishment - Unsynchronised (PS Core Network)	
7.6.3	RACH/FACH - DCH Establishment	
7.6.4	RACH/FACH - RACH/FACH Establishment	
7.7	Radio Access Bearer Release	
7.7.1 7.7.2	·	
7.7.4	DCH - DCH Release - Unsynchronised	
7.7. <del>4</del> 7.8	Radio Access Bearer Modification	
7.8.1	DCCH on DCH - Synchronised	
7.8.2	DCCH on RACH/FACH	
7.8.2 7.9	Physical Channel Reconfiguration	
7.9.1	Physical Channel Reconfiguration (DCH)	
7.9.2	Physical Channel Reconfiguration (CRNC Controlled)	
7.10	Soft Handover (FDD)	
7.10.1		

7.10.2	Radio link Deletion (Branch Deletion)	42
7.10.3	Radio link Addition & Deletion (Branch Addition & Deletion - simultaneously)	
7.11	Hard Handover	44
7.11.1	Backward Hard Handover	45
7.11.2	Forward Hard Handover	50
7.12	URA Update	54
7.12.1	Inter-RNS URA Update with SRNS Relocation	54
7.12.2	Inter-RNS URA Update via Iur without SRNS relocation	55
7.12.3	SRNS Relocation (UE connected to two CN nodes)	56
7.13	HO & Cell Reselection between UTRAN and GSM/BSS	58
7.13.1	$UTRAN \Rightarrow GSM/BSS$	58
7.13.2	$GSM/BSS \Rightarrow UTRAN$	59
7.13.3	GPRS ⇒ UMTS Cell Reselection	60
7.13.4	UMTS ⇒ GPRS Cell Reselection, UE Initiated	61
7.13.5	UMTS ⇒ GPRS Cell Reselection, Network Initiated	61
7.14	Transport Channel Reconfiguration(DCH to DCH)	62
7.14.1	Synchronised Transport Channel Reconfiguration	62
7.14.1	Unsynchronised Transport Channel Reconfiguration	63
7.15	Direct Transfer	65
7.15.1	Uplink Direct Transfer	65
7.15.2	Downlink Direct Transfer	
7.16	Downlink Power Control [FDD]	
7.17	USCH/DSCH Configuration and Capacity Allocation [TDD]	66
Annex	A: Change history	69

# Foreword

This Technical Report (TR) has been produced by the 3<sup>rd</sup> Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
  - 1 presented to TSG for information;
  - 2 presented to TSG for approval;
  - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

# 1 Scope

The present document describes the UTRAN functions by means of signalling procedure examples (Message Sequence Charts). The signalling procedure examples show the interaction between the UE, the different UTRAN nodes and the CN to perform system functions. This gives an overall understanding of how the UTRAN works in example scenarios.

# 2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies.
- [1] 25.990: "Vocabulary".
- [2] 25.401: "UTRAN Overall Description".
- [3] 25.413: "UTRAN Iu Interface RANAP Signalling".
- [4] 25.423: "UTRAN Iur Interface RNSAP Signalling".
- [5] 25.433: "UTRAN Iub Interface NBAP Signalling".
- [6] 25.832: "Manifestations of Handover and SRNS Relocation".
- [7] 25.301: "Radio Interface Protocol Architecture".
- [8] 25.331: "RRC Protocol Specification".
- [9] 25.419: "UTRAN Iu Interface: Service Area Broadcast Protocol SABP".
- [10] 25.324: "Radio Interface for Broadcast/Multicast Services".
- [11] 25.925: "Radio Interface for Broadcast/Multicast Services".
- [12] 23.041: "Technical realisation of Cell Broadcast Service (CBS)".
- [13] 25.425: "UTRAN Iur Interface User Plane Protocols for Common Transport Channel Data Streams"
- [14] 25.435: "UTRAN Iub Interface User Plane Protocols for Common Transport Channel Data Streams"
- [15] 25.427: "UTRAN Iub/Iur Interface User Plane Protocol for DCH Data Streams"

# 3 Definitions, abbreviations and notation

### 3.1 Definitions

For the purposes of the present document, the terms and definitions given in [1], [2] and [4] apply.

### 3.2 Abbreviations

For the purposes of the present document the following abbreviations apply:

NOTE: More extensive abbreviations on UMTS are provided in [1].

AAL2 ATM Adaptation Layer type 2

ACK Acknowledgement

AICH Acquisition Indicator CHannel
ALCAP Access Link Control Application Part

AM Acknowledged Mode AS Access Stratum

ATM Asynchronous Transfer Mode BCCH Broadcast Control Channel

BCFE Broadcast Control Functional Entity

BER Bit Error Rate
BLER Block Error Rate

BMC Broadcast/Multicast Control
BSS Base Station Sub-system

BSSMAP Base Station System Management Application Part

CCCH Common Control Channel

CCPCH Common Control Physical CHannel

CFN Connection Frame Number CM Connection Management

CN Core Network

CPCH Common Packet CHannel
CPICH Common Pilot Channel
CRNC Controlling RNC
C-RNTI Cell RNTI
CS Circuit Switched

DCA Dynamic Channel Allocation
DCCH Dedicated Control Channel

DCFE Dedicated Control Functional Entity

DCH Dedicated Channel
DC-SAP Dedicated Control SAP

DL Downlink

DPCCH Dedicated Physical Control Channel
DPCH Dedicated Physical Channel

DRAC Dynamic Resource Allocation Control

DRNC Drift RNC DRNS Drift RNS

DRX Discontinuous Reception
DSCH Downlink Shared Channel
DTCH Dedicated Traffic Channel
EP Elementary Procedure
FACH Forward Access Channel
FAUSCH Fast Uplink Signalling Channel
FDD Frequency Division Duplex

FFS For Further Study
FN Frame Number
FP Frame Protocol
ID Identifier

IE Information element

IMEI International Mobile Equipment Identity
IMSI International Mobile Subscriber Identity

IP Internet Protocol

ISCP Interference on Signal Code Power

L1 Layer 1 L2 Layer 2 L3 Layer 3

LAI Location Area Identity
MAC Medium Access Control

MCC Mobile Country Code
MM Mobility Management
MNC Mobile Network Code

MS Mobile Station

MSC Mobile services Switching Center

NAS Non Access Stratum

NBAP Node B Application Protocol

Nt-SAP Notification SAP

NW Network O Optional

ODMA Opportunity Driven Multiple Access

PCCH Paging Control Channel
PCH Paging Channel

PDCP Packet Data Convergence Protocol PDSCH Physical Downlink Shared Channel

PDU Protocol Data Unit

PLMN Public Land Mobile Network

PNFE Paging and Notification Control Functional Entity

PRACH Physical Random Access CHannel

PS Packet Switched

PSCH Physical Synchronisation Channel

P-TMSI Packet Temporary Mobile Subscriber Identity

PUSCH Physical Uplink Shared Channel

QoS Quality of Service
RAB Radio Access Bearer
RACH Random Access CHannel
RAI Routing Area Identity

RANAP Radio Access Network Application Part

RB Radio Bearer

RFE Routing Functional Entity

RL Radio Link

RLC Radio Link Control
RNC Radio Network Controller
RNS Radio Network Subsystem

RNSAP Radio Network Subsystem Application Part RNTI Radio Network Temporary Identifier

RRC Radio Resource Control
RSCP Received Signal Code Power
RSSI Received Signal Strength Indicator

SAI Service Area Identifier SAP Service Access Point

SCCP Signalling Connection Control Part SCFE Shared Control Function Entity

SF Spreading Factor
SFN System Frame Number
SGSN Serving GPRS Support Node
SHCCH Shared Control Channel
SIR Signal to Interference Ratio

SRNC Serving RNC
SRNS Serving RNS
S-RNTI SRNC - RNTI

SSDT Site Selection Diversity Transmission

TDD Time Division Duplex
TEID Tunnel Endpoint Identifier

TF Transport Format

TFCI Transport Format Combination Indicator
TFCS Transport Format Combination Set

TFS Transport Format Set
TME Transfer Mode Entity

TMSI Temporary Mobile Subscriber Identity

Tr Transparent Tx Transmission

UARFCN UMTS Absolute Radio Frequency Channel Number

UE User Equipment

UL Uplink

UM Unacknowledged Mode

UMTS Universal Mobile Telecommunication System

UNACK Unacknowledgement URA UTRAN Registration Area

U-RNTI UTRAN-RNTI
USCH Uplink Shared Channel

UTRAN UMTS Terrestrial Radio Access Network

# 3.3 Notation for the signalling procedures

Complex signalling procedures may involve several protocols in different nodes.

In order to facilitate the understanding of these procedures, the following rules in the drawing of Message Sequence Chart (MSC) are applied:

- Messages are always exchanged between nodes, i.e. the sender and the receiver of a message are nodes and not single protocol entities;
- The protocol entity inside a node that is sending/receiving a message is represented by means of an ellipse, containing the protocol entity name;
- Each message is numbered, so that a numbered list with explanations can be added below the figure;
- Message parameters may be specified as shown in Figure 1 only when required for a clear understanding of the procedures;
- Explicit signalling is represented by means of continuos arrows;
- Inband signalling is represented by means of dotted arrows;
- A description of the relevant actions may be included as shown in Figure 1;
- The Setup and Release of Iub/Iur and Iu Data Transport Bearer with the ALCAP protocol is represented as shown in Figure 1;
- The transport channel used by the MAC protocol or the logical channel used by the RLC and RRC protocols may be indicated before the message name as shown in Figure 1

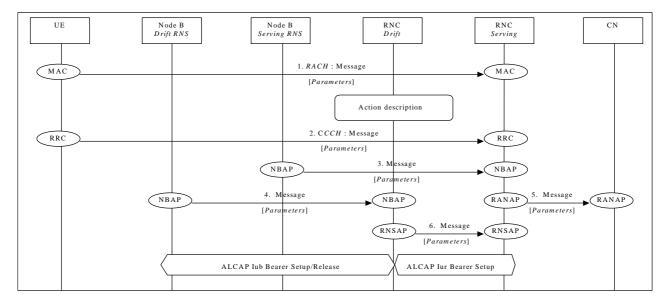


Figure 1: Example of signalling procedure notation

# 4 UTRAN and UE protocol Architecture

## 4.1 Protocol Architecture

For a detailed description of the Protocol Architecture and the Radio Protocol Architecture for the UTRAN and the UE refer to [2] and [7] respectively.

# 4.2 RANAP Procedures & Messages

For a detailed description of RANAP procedures and messages refer to [3]. Only Messages mentioned in the present document are shown. For each message is also given the list of example procedures where the message is used, as provided by this document.

Table 1

Message Name	UTRAN Procedure	Direction
Direct Transfer	Uplink Direct Transfer	$RNC \Rightarrow CN$
	Downlink Direct Transfer	$CN \Rightarrow RNC$
Initial UE Message	NAS Signalling Connection Establishment	$RNC \Rightarrow CN$
Iu Release Command	RRC Connection Release	$CN \Rightarrow RNC$
	Hard HO with switching in the CN	$CN \Rightarrow RNC$
	SRNS Relocation	$CN \Rightarrow RNC$
	UTRAN ⇒ GSM/BSS handover	$CN \Rightarrow RNC$
Iu Release Complete	RRC Connection Release	$RNC \Rightarrow CN$
	Hard HO with switching in the CN	$RNC \Rightarrow CN$
	SRNS Relocation	$RNC \Rightarrow CN$
	UTRAN ⇒ GSM/BSS handover	$RNC \Rightarrow CN$
Paging	Paging for a UE in RRC Idle Mode	$CN \Rightarrow RNC$
	Paging for a UE in RRC Connected Mode	$CN \Rightarrow RNC$
Radio Access Bearer Assignment	Radio Access Bearer Establishment	$CN \Rightarrow RNC$
Request	Radio Access Bearer Release	$CN \Rightarrow RNC$
	Radio Access Bearer Modification	$CN \Rightarrow RNC$
Radio Access Bearer Assignment	Radio Access Bearer Establishment	$RNC \Rightarrow CN$
Response	Radio Access Bearer Release	$RNC \Rightarrow CN$
	Radio Access Bearer Modification	$RNC \Rightarrow CN$
Relocation Command	Hard HO with switching in the CN	$CN \Rightarrow RNC$
	SRNS Relocation	$CN \Rightarrow RNC$
	UTRAN ⇒ GSM/BSS handover	$CN \Rightarrow RNC$
Relocation Complete	Hard HO with switching in the CN	$RNC \Rightarrow CN$
	SRNS Relocation	$RNC \Rightarrow CN$
	GSM/BSS handover ⇒ UTRAN	$RNC \Rightarrow CN$
Relocation Detect	Hard HO with switching in the CN	$RNC \Rightarrow CN$
	GSM/BSS handover ⇒ UTRAN	$RNC \Rightarrow CN$
Relocation Failure	SRNS Relocation	$RNC \Rightarrow CN$
Relocation Request	Hard HO with switching in the CN	$CN \Rightarrow RNC$
	SRNS Relocation	$CN \Rightarrow RNC$
	GSM/BSS handover ⇒ UTRAN	$CN \Rightarrow RNC$
Relocation Request Acknowledge	Hard HO with switching in the CN	$RNC \Rightarrow CN$
	SRNS Relocation	$RNC \Rightarrow CN$
	GSM/BSS handover ⇒ UTRAN	$RNC \Rightarrow CN$
Relocation Required	Hard HO with switching in the CN	$RNC \Rightarrow CN$
	SRNS Relocation	$RNC \Rightarrow CN$
	UTRAN ⇒ GSM/BSS handover	$RNC \Rightarrow CN$

# 4.3 SABP Procedures & Messages

For a detailed description of SABP procedures and messages refer to [9]. Only Messages mentioned in the present document are shown. For each message is also given the list of example procedures where the message is used, as provided by this document.

Table 2

Message Name	UTRAN Procedure	Direction
Write-replace	Service Area Broadcast	$CN \Rightarrow RNC$
Write-replace Complete	Service Area Broadcast	$RNC \Rightarrow CN$
Write-Replace Failure	Service Area Broadcast	$RNC \Rightarrow CN$

# 4.4 RNSAP Procedures & Messages

For a detailed description of RNSAP procedures and messages refer to [4]. Only Messages mentioned in the present document are shown. For each message is also given the list of example procedures where the message is used, as provided by this document.

Table 3

Message Name	UTRAN Procedure	Direction
Common Transport Channel	Cell Update	$SRNC \Rightarrow DRNC$
Resources Release		00110 00110
Common Transport Channel Resources Initialisation Request	Cell Update	SRNC ⇒ DRNC
Common Transport Channel Resources Initialisation Response	Cell Update	DRNC ⇒ SRNC
DL Power Control Request	Downlink Power Control	SRNC ⇒ DRNC
Downlink Signalling Transfer	RRC Connection Re-establishment	SRNC ⇒ DRNC
Request	URA Update	SRNC ⇒ DRNC
Radio Link Addition Request	RRC Connection Release	SRNC ⇒ DRNC
	Soft Handover	SRNC ⇒ DRNC
	Hard Handover	SRNC ⇒ DRNC
Radio Link Addition Response	RRC Connection Release	$DRNC \Rightarrow SRNC$
	Soft Handover	$DRNC \Rightarrow SRNC$
	Hard Handover	DRNC ⇒ SRNC
Radio Link Deletion Request	RRC Connection Re-establishment	SRNC ⇒ DRNC
	Soft Handover Hard Handover	SRNC ⇒ DRNC
Dadia Link Deletion Despense	RRC Connection Re-establishment	SRNC ⇒ DRNC
Radio Link Deletion Response	Soft Handover	DRNC ⇒ SRNC DRNC ⇒ SRNC
	Hard Handover	DRNC ⇒ SRNC
Radio Link Failure Indication	Hard Handover	DRNC ⇒ SRNC
Radio Link Reconfiguration	Radio Access Bearer Establishment	SRNC ⇒ DRNC
Request	Radio Access Bearer Release	SRNC ⇒ DRNC
'	Physical Channel Reconfiguration	SRNC ⇒ DRNC
	Transport Channel Reconfiguration	SRNC ⇒ DRNC
Radio Link Reconfiguration	Radio Access Bearer Establishment	$SRNC \Rightarrow DRNC$
Commit	Radio Access Bearer Release	$SRNC \Rightarrow DRNC$
	Physical Channel Reconfiguration	$SRNC \Rightarrow DRNC$
	Transport Channel Reconfiguration Radio Access Bearer Modification	SRNC ⇒ DRNC
Dadia Link Danasian matica		SRNC ⇒ DRNC
Radio Link Reconfiguration Prepare	Radio Access Bearer Establishment Radio Access Bearer Release	$SRNC \Rightarrow DRNC$ $SRNC \Rightarrow DRNC$
i Tepare	Physical Channel Reconfiguration	$SRNC \Rightarrow DRNC$
	Transport Channel Reconfiguration	$SRNC \Rightarrow DRNC$
	Radio Access Bearer Modification	$SRNC \Rightarrow DRNC$
Radio Link Reconfiguration	Radio Access Bearer Establishment	DRNC ⇒ SRNC
Ready	Radio Access Bearer Release	DRNC ⇒ SRNC
_	Physical Channel Reconfiguration	DRNC ⇒ SRNC
	Transport Channel Reconfiguration	DRNC ⇒ SRNC
	Radio Access Bearer Modification	DRNC ⇒ SRNC
Radio Link Reconfiguration	Radio Access Bearer Establishment	$DRNC \Rightarrow SRNC$
Response	Radio Access Bearer Release	$DRNC \Rightarrow SRNC$
	Physical Channel Reconfiguration Transport Channel Reconfiguration	DRNC ⇒ SRNC
Dodio Link Cotus Desweet		DRNC ⇒ SRNC
Radio Link Setup Request	RRC Connection Re-establishment Hard Handover	SRNC ⇒ DRNC
	USCH/DSCH Configuration and Capacity Allocation [TDD]	$SRNC \Rightarrow DRNC$ $SRNC \Rightarrow DRNC$
Radio Link Setup Response	RRC Connection Re-establishment	DRNC ⇒ SRNC
Tasio Ellik Gotap Rospoliso	Hard Handover	DRNC ⇒ SRNC
	USCH/DSCH Configuration and Capacity Allocation [TDD]	DRNC ⇒ SRNC
Relocation Commit	SRNS Relocation URA Update	Source RNC ⇒
	,	Target RNC
Uplink Signalling Transfer	RRC Connection Re-establishment	DRNC ⇒ SRNC
Indication	URA Update	DRNC ⇒ SRNC

# 4.5 NBAP Procedures & Messages

For a detailed description of NBAP procedures and messages refer to [5]. Only Messages mentioned in the present document are shown. For each message is also given the list of example procedures where the message is used, as provided by this document.

Table 4

Message Name	UTRAN Procedure	Direction
DL Power Control Request	Downlink Power Control	$RNC \Rightarrow Node B$
Paging	Paging	$RNC \Rightarrow Node B$
Physical Shared Channel Reconfiguration Request	USCH/DSCH Configuration and Capacity Allocation [TDD]	$RNC \Rightarrow Node\;B$
Physical Shared Channel Reconfiguration Request	USCH/DSCH Configuration and Capacity Allocation [TDD]	Node $B \Rightarrow RNC$
Radio Link Addition Request	Hard Handover Soft Handover	$RNC \Rightarrow Node B$ $RNC \Rightarrow Node B$
Radio Link Addition Response	Hard Handover Soft Handover	$RNC \Rightarrow Node B$ $RNC \Rightarrow Node B$
Radio Link Deletion	RRC Connection Release RRC Connection Re-establishment Hard Handover Soft Handover	$RNC \Rightarrow Node B$ $RNC \Rightarrow Node B$ $RNC \Rightarrow Node B$ $RNC \Rightarrow Node B$
Radio Link Deletion Response	RRC Connection Release RRC Connection Re-establishment Hard Handover Soft Handover	Node B $\Rightarrow$ RNC Node B $\Rightarrow$ RNC Node B $\Rightarrow$ RNC Node B $\Rightarrow$ RNC
Radio Link Failure Indication	Hard Handover	Node $B \Rightarrow RNC$
Radio Link Reconfiguration Commit	Radio Access Bearer Establishment Radio Access Bearer Release Physical Channel Reconfiguration Transport Channel Reconfiguration Radio Access Bearer Modification	$RNC \Rightarrow Node B$ $RNC \Rightarrow Node B$ $RNC \Rightarrow Node B$ $RNC \Rightarrow Node B$ $RNC \Rightarrow Node B$
Radio Link Reconfiguration Prepare	Radio Access Bearer Establishment Radio Access Bearer Release Physical Channel Reconfiguration Transport Channel Reconfiguration Radio Access Bearer Modification	RNC ⇒ Node B RNC ⇒ Node B RNC ⇒ Node B RNC ⇒ Node B RNC ⇒ Node B
Radio Link Reconfiguration Ready	Radio Access Bearer Establishment Radio Access Bearer Release Physical Channel Reconfiguration Transport Channel Reconfiguration Radio Access Bearer Modification	Node B $\Rightarrow$ RNC Node B $\Rightarrow$ RNC Node B $\Rightarrow$ RNC Node B $\Rightarrow$ RNC Node B $\Rightarrow$ RNC
Radio Link Reconfiguration Request	Radio Access Bearer Establishment Radio Access Bearer Release Physical Channel Reconfiguration Transport Channel Reconfiguration	$RNC \Rightarrow Node B$ $RNC \Rightarrow Node B$ $RNC \Rightarrow Node B$ $RNC \Rightarrow Node B$
Radio Link Reconfiguration Response	Radio Access Bearer Establishment Radio Access Bearer Release Physical Channel Reconfiguration Transport Channel Reconfiguration	Node B $\Rightarrow$ RNC Node B $\Rightarrow$ RNC Node B $\Rightarrow$ RNC Node B $\Rightarrow$ RNC
Radio Link Setup Request	RRC Connection Establishment RRC Connection Re-establishment Hard Handover Soft Handover USCH/DSCH Configuration and Capacity Allocation [TDD]	$RNC \Rightarrow Node B$ $RNC \Rightarrow Node B$ $RNC \Rightarrow Node B$ $RNC \Rightarrow Node B$ $RNC \Rightarrow Node B$
Radio Link Setup Response	RRC Connection Establishment RRC Connection Re-establishment Hard Handover Soft Handover USCH/DSCH Configuration and Capacity Allocation [TDD]	Node B $\Rightarrow$ RNC Node B $\Rightarrow$ RNC Node B $\Rightarrow$ RNC Node B $\Rightarrow$ RNC Node B $\Rightarrow$ RNC
System Information Broadcast Request	System Information Broadcasting Service Area Broadcast	$RNC \Rightarrow Node B$ $RNC \Rightarrow Node B$
System Information Broadcast Response	System Information Broadcasting Service Area Broadcast	Node B $\Rightarrow$ RNC Node B $\Rightarrow$ RNC

### 4.6 ALCAP

ALCAP is a generic name to indicate the protocol(s) used to establish data transport bearers on the Iu, Iur and Iub interfaces. Q.2630.1 (Q AAL2) is one of the selected protocols to be used as ALCAP.

The following should be noted:

- data transport bearers may be dynamically established using ALCAP or preconfigured;
- transport bearers may be established before or after allocation of radio resources.

## 4.6.1 Q2630.1 (Q.AAL 2)

The following figure is showing an example of use of Q.2630.1 in the UTRAN context, for the different interfaces.

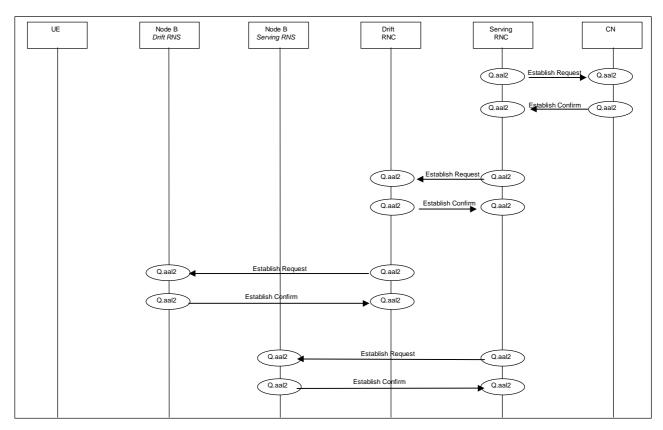


Figure 2: Example on Q.2630.1

# 4.7 RRC Procedures & Messages

For a detailed description of RRC procedures and messages refer to [8]. Only Messages mentioned in the present document are shown. For each message is also given the list of example procedures where the message is used, as provided by this document.

Table 5

Message Name	UTRAN Procedure	Direction
Active Set Update	Soft Handover	$RNC \Rightarrow UE$
Active Set Update Complete	Soft Handover	$UE \Rightarrow RNC$
Cell Update	Cell Update	$UE \Rightarrow RNC$
Cell Update Confirm	Cell Update	RNC ⇒ UE
Direct Transfer	NAS Signalling Conn. Establishment	UE ⇔ RNC
Downlink Direct Transfer	Downlink Direct Transfer	RNC ⇒ UE
Initial Direct Transfer	NAS Signalling Connection Establishment	UE ⇒ RNC
Measurement Control	Downlink Power Control	RNC ⇒ UE
Measurement Report	Downlink Power Control	UE ⇒ RNC
Paging Type 1	Paging for a UE in RRC Idle Mode and RRC connected mode (CELL_PCH and URA_PCH states)Paging for a UE in RRC Connected Mode	RNC ⇒ UE
Paging Type 2	Paging for a UE in RRC Connected Mode (CELL_DCH and CELL_FACH states)	$RNC \Rightarrow UE$
Physical Channel Reconfiguration	Physical Channel Reconfiguration	$RNC \Rightarrow UE$
- -	Hard Handover	$RNC\RightarrowUE$
Physical Channel Reconfiguration Allocation	USCH/DSCH Configuration and Capacity Allocation [TDD]	$RNC \Rightarrow UE$
Physical Channel Reconfiguration	Physical Channel Reconfiguration	$UE \Rightarrow RNC$
Complete	Hard Handover	$UE \Rightarrow RNC$
PUSCH Capacity Request	USCH/DSCH Configuration and Capacity Allocation [TDD]	$UE \Rightarrow RNC$
RB Reconfiguration	USCH/DSCH Configuration and Capacity Allocation [TDD]	$RNC \Rightarrow UE$
RB Reconfiguration Complete	USCH/DSCH Configuration and Capacity Allocation [TDD]	$UE \Rightarrow RNC$
RB Release	Radio Access Bearer Release	$RNC \Rightarrow UE$
RB Release Complete	Radio Access Bearer Release	$UE \Rightarrow RNC$
RB Setup	Radio Access Bearer Establishment	$RNC \Rightarrow UE$
RB Setup Complete	Radio Access Bearer Establishment	$UE \Rightarrow RNC$
RNTI Reallocation Complete	Cell Update URA Update	UE ⇒ RNC UE ⇒ RNC
RRC Connection Re-establishment	RRC Connection Re-establishment	RNC ⇒ UE
RRC Connection Re-establishment Complete	RRC Connection Re-establishment	UE ⇒ RNC
RRC Connection Re-establishment Request	RRC Connection Re-stablishment	UE ⇒ RNC
RRC Connection Release	RRC Connection Release	RNC ⇒ UE
RRC Connection Release Complete	RRC Connection Release	UE ⇒ RNC
RRC Connection Request	RRC Connection Establishment.	UE ⇒ RNC
RRC Connection Setup	RRC Connection Establishment	RNC ⇒ UE
RRC Connection Setup Complete	RRC Connection Establishment	UE ⇒ RNC
System Information	System Information Broadcasting	Node B ⇒ UE
Transport Channel Reconfiguration	Physical Channel Reconfiguration	RNC ⇒ UE
Transport Channel Reconfiguration Complete	Physical Channel Reconfiguration	UE ⇒ RNC
UE Capability Information	NAS Signalling Conn. Establishment.	UE ⇒ RNC
Uplink Direct Transfer	Uplink Direct Transfer	UE ⇒ RNC
URA Update	Cell Update	UE ⇒ RNC
URA Update Confirm	Cell Update	RNC ⇒ UE

# 4.8 BMC Procedures & Messages

For a detailed description of BMC procedures and messages refer to [11] and [12]. Only Messages mentioned in the present document are shown. For each message is also given the list of example procedures where the message is used, as provided by this document.

#### Table 6

Message Name	UTRAN Procedure	Direction
CBS Message	Service Area Broadcast	Node $B \Rightarrow UE$

# 4.9 DCH Frame Protocol Messages

For a detailed description of DCH Frame protocol messages refer to [15]. Only Messages mentioned in the present document are shown. For each message is also given the list of example procedures where the message is used, as provided by this document.

#### Table 7

Message Name	UTRAN Procedure	Direction
Downlink Synchronisation	RRC Connection Establishment	$SRNC \Rightarrow Node B$
	Radio Access Bearer Establishment	$SRNC \Rightarrow Node B$
	Soft Handover	$SRNC \Rightarrow Node B$
Uplink Synchronisation	RRC Connection Establishment	Node B $\Rightarrow$ SRNC
	Radio Access Bearer Establishment	Node B $\Rightarrow$ SRNC
	Soft Handover	Node $B \Rightarrow SRNC$

# 4.10 DSCH Frame Protocol Messages

For a detailed description of DSCH Frame protocol messages refer to [13]. Only Messages mentioned in the present document are shown. For each message is also given the list of example procedures where the message is used, as provided by this document.

#### Table 8

Message Name	UTRAN Procedure	Direction
DSCH Capacity Allocation	USCH/DSCH Configuration and Capacity Allocation [TDD]	$DRNC \Rightarrow SRNC$
DSCH Capacity Request	USCH/DSCH Configuration and Capacity Allocation [TDD]	SRNC ⇒ DRNC

# 4.11 USCH Frame Protocol Messages

For a detailed description of DSCH Frame protocol messages refer to [14]. Only Messages mentioned in the present document are shown. For each message is also given the list of example procedures where the message is used, as provided by this document.

#### Table 9

Message Name	UTRAN Procedure	Direction
Dynamic PUSCH Assign	USCH/DSCH Configuration and Capacity Allocation [TDD]	$RNC \Rightarrow Node B$

# 5 UTRAN Signalling Procedures

The signalling procedures shown in the following sections do not represent the complete set of possibilities, nor do they mandate this kind of operation. The standard will specify a set of elementary procedures for each interface, which may be combined in different ways in an implementation. Therefore these sequences are merely examples of a typical implementation.

The list of parameters is not be complete, but should only be seen as help for the understanding of the examples.

# 6 Procedures not related to a specific UE (global procedures)

This clause presents some signalling procedures not related to a specific UE.

# 6.1 System Information Broadcasting

This example shows an example of System Information broadcasting.

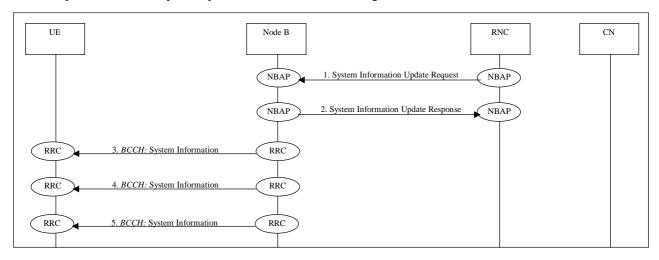


Figure 3: System Information Broadcasting

- 1. The RNC forwards the request to the pertinent node(s) B for via NBAP message **System Information Update Request**.
  - Parameters: Master/Segment Information Block(s) (System information to be broadcasted), BCCH modification time.
- 2. The Node B confirm the ability to broadcast the information sending **System Information Update Response** message to the RNC via NBAP. (If the Node B can not Broadcast the information as requested, System Information Update Failure is return to the RNC).
- 3./4./5. The information is broadcasted on the air interface by RRC message **System Information**. Parameters: Master/Segment Information Block(s) (System information).

## 6.2 Service Area Broadcast

This example shows an example of broadcasting of Cell Information. UTRAN transports this broadcast information transparently.

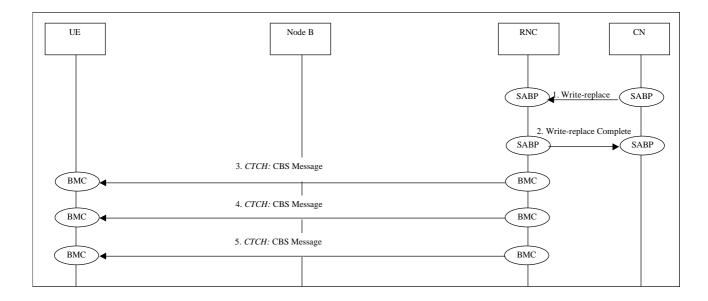


Figure 4: Service Area Broadcast

- 1. The CN asks the RNC for an information Broadcast via SABP message **Write-replace**. Parameters: Broadcast-Message-Content, Service-Area-List.
- 2. The RNC confirm the ability to broadcast the information sending **Write-Replace Complete** message to the CN via SABP. (If the RNC can not Broadcast the information as requested, Write-replace Failure message is return to the CN).
- 3./4./5. The information is broadcasted on the air interface by BMC message <u>CBS Message</u>. carried over CTCH channel.

Parameters: Message ID, CB Data.

Note that the Node B is transparent to this messaging because (as mentioned in [10],[11] and [12]) the BMC protocol is terminated in RNC (see also [7]).

# 7 Procedures related to a specific UE

This clause presents a number of signalling procedures related to a specific UE.

# 7.1 Paging

This subclause presents two examples of Paging procedures for both the cases of a UE in RRC Idle Mode and RRC Connected Mode.

# 7.1.1 Paging for a UE in RRC Idle Mode and RRC connected mode (CELL\_PCH and URA\_PCH states)

This example shows how paging is performed for a UE in RRC Idle Mode. The UE may be paged for a CS or PS service. Since the UE is in RRC Idle Mode, the location is only known at CN level and therefore paging is distributed over a defined geographical area (e.g. LA).

NOTE: Example below illustrates scenario where LA spans across 2 RNCs.

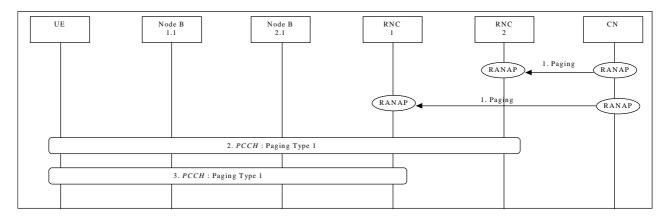


Figure 5: Paging for a UE in RRC Idle Mode

- 1. CN initiates the paging of a UE over a LA spanning two RNCs (i.e. RNC1 and RNC2) via RANAP message **Paging**.
  - Parameters: CN Domain Indicator, Permanent NAS UE Identity, Temporary UE Identity, Paging Cause.
- 2. Paging of UE performed by cell1 using **Paging Type 1** message.
- 3. Paging of UE performed by cell2 using **Paging Type 1** message.

The UE detects page message from RNC1 (as example) and the procedure for NAS signalling connection establishment follows. NAS message transfer can now be performed.

This procedure described for RRC idle mode, applies also to the RRC connected mode in the case of CELL\_PCH and URA PCH states.

# 7.1.2 Paging for a UE in RRC Connected Mode (CELL\_DCH and CELL\_FACH states)

This can occur in case of two core network domains, with the mobility management independent of each other. Two possible solutions exists:

- The UTRAN coordinates the paging request with the existing RRC connection.
- The UE coordinates the paging request with the existing RRC connection.

The following example shows how paging is performed for a UE in RRC Connected Mode (CELL\_DCH and CELL\_FACH states) when the UTRAN coordinates the paging request with the existing RRC connection using DCCH.

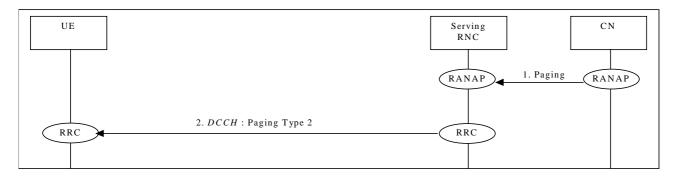


Figure 6: Paging for a UE in RRC Connected Mode (CELL\_DCH and CELL\_FACH states)

- 1. CN initiates the paging of a UE via RANAP message **Paging**. Parameters: CN Domain Indicator, Permanent NAS UE Identity, Temporary UE Identity, Paging Cause.
- 2. SRNC sends RRC message Paging Type 2.

# 7.2 NAS Signalling Connection Establishment

This example shows establishment of a NAS Signalling Connection.

This establishment could be request by the terminal by itself (for example to initiate a service) or could be stimulated by a paging from the CN.

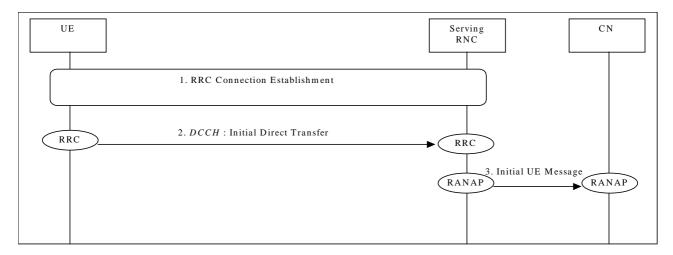


Figure 7: NAS Signalling Connection Establishment

- 1. RRC Connection is established (see 7.3.1 or 7.3.2).
- UE sends RRC Initial Direct Transfer to SRNC.
   Parameters: Initial NAS Message (could for a GSM based CN be e.g. CM Service Request, Location Update Request etc.) CN node indicator (it indicates the correct CN node into which the NAS message shall be forwarded).
- 3. SRNC initiates signalling connection to CN, and sends the RANAP message **Initial UE Message**. Parameters: NAS PDU (could for a GSM based CN be e.g. CM Service Request, Location Update Request etc.), CN domain indicator (indicating the CN domain towards which this message is sent).

The NAS signalling connection between UE and CN can now be used for NAS message transfer.

## 7.3 RRC Connection Establishment

The following examples show establishment of a RRC connection either in dedicated transport channel (DCH) state or in common transport channel (RACH/FACH) state.

#### 7.3.1 DCH Establishment

This example shows establishment of an RRC connection in dedicated transport channel (DCH) state.

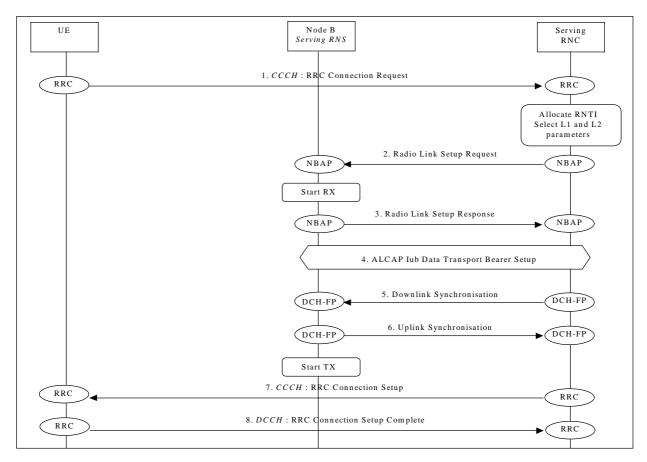


Figure 8: RRC Connection Establishment - DCH Establishment

- 1. The UE initiates set-up of an RRC connection by sending RRC message **Connection Request** on CCCH. Parameters: Initial UE Identity, Establishment cause, Initial UE Capability.
- 2. The SRNC decides to use a DCH for this RRC connection, allocates RNTI and radio resources for the RRC connection. When a DCH is to be set-up, NBAP message **Radio Link Setup Request** is sent to Node B. Parameters: Cell id, Transport Format Set, Transport Format Combination Set, frequency, UL scrambling code(FDD only), Time Slots (TDD only), User Codes (TDD only), Power control information.
- 3. Node B allocates resources, starts PHY reception, and responses with NBAP message Radio Link Setup Response.
  - Parameters: Signalling link termination, Transport layer addressing information (AAL2 address, AAL2 Binding Identity) for the Iub Data Transport Bearer.
- 4. SRNC initiates set-up of Iub Data Transport bearer using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iub Data Transport Bearer to the DCH. The request for set-up of Iub Data Transport bearer is acknowledged by Node B.
- 5./6.The Node B and SRNC establish synchronism for the Iub and Iur Data Transport Bearer by means of exchange of the appropriate DCH Frame Protocol frames **Downlink Synchronisation** and **Uplink Synchronisation**. Then Node B starts DL transmission.
- 7. Message **RRC Connection Setup** is sent on CCCH from SRNC to UE.

  Parameters: Initial UE Identity, RNTI, Capability update Requirement, Transport Format Set, Transport Format Combination Set, frequency, DL scrambling code (FDD only), Time Slots (TDD only), User Codes (TDD only), Power control information.
- 8. Message **RRC Connection Setup Complete** is sent on DCCH from UE to SRNC. Parameters: Integrity information, ciphering information.

#### 7.3.2 RACH/FACH Establishment

An Example of procedure for establishment of an RRC connection in common transport channel (RACH/FACH) state is specified in subclause 8.2.1 of [5]. A prerequisite for this example is that the necessary Iub Data Transport bearer for the RACH/FACH is established prior to this procedure.

## 7.4 RRC Connection Release

The following examples show RRC connection release either of a dedicated channel (DCH) or of a common transport channel (RACH/FACH).

#### 7.4.1 DCH Release

This example shows RRC Connection release of a dedicated channel, in the case of macrodiversity on two nodes B, the first one connected to the Serving RNC, the second one to the Drift RNC.

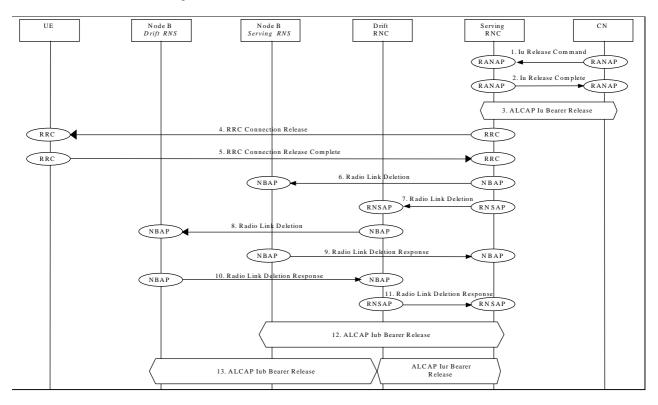


Figure 9: RRC Connection release of a dedicated channel

- The CN initiates the release of a dedicated Channel by sending the message Iu Release Command to the SRNC.
  Parameters: Cause.
- 2. The SRNC confirms the release by sending a **Iu Release Complete** message to the CN Parameters: Data volume Report (if data volume reporting to PS is required).
- 3. The SRNC initiates release of Iu Data Transport bearer using ALCAP protocol.
- 4. Message **RRC Connection Release** from SRNC to UE to initiate the RRC connection release. Parameters: Cause.
- 5. Message RRC Connection Release Complete from UE to SRNC to confirm the RRC connection release.
- 6. The SRNC initiates the release of the link by sending the **Radio Link Deletion** to the Node B (SRNC).
- 7. The SRNC initiates the release of the link by sending the **Radio Link Deletion** to the Drift RNC.
- 8. The Drift RNC initiates the release of the link by sending the **Radio Link Deletion** to the Node B (Drift RNC).
- 9. The Node B (SRNC) confirms the release of the link by sending the **Radio Link Deletion Response** to the SRNC.
- The Node B (Drift RNC) confirms the release of the link by sending the Radio Link Deletion Response to the Drift RNC.
- 11. The Drift RNC confirms the release of the link by sending the Radio Link Deletion Response to the SRNC.
- 12. The Node B (SRNC) initiates release of Iub Data Transport bearer using ALCAP protocol.
- 13. The Node B (Drift RNC) initiates release of Iub Data Transport bearer using ALCAP protocol.
- 14. The Drift RNC initiates release of Iur Data Transport bearer using ALCAP protocol.

## 7.4.2 Common Transport Channel Release

This example shows RRC Connection release of a common transport channel.

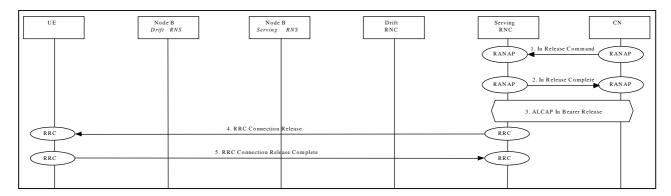


Figure 10: RRC Connection release of a common transport channel

- The CN initiates the release of a dedicated Channel by sending the message Iu Release Command to the SRNC. Parameters: Cause.
- 2. The SRNC confirms the release by sending a **Iu Release Complete** message to the CN. Parameters: Data volume Report (if data volume reporting to PS is required).
- 3. The SRNC initiates release of Iu Data Transport bearer using ALCAP protocol.
- 4. Message **RRC Connection Release** from SRNC to UE to initiate the RRC connection release. Parameters: Cause.
- 5. Message **RRC Connection Release Complete** from UE to SRNC to confirm the RRC connection release.

### 7.5 RRC Connection Re-establishment

The following examples show re-establishment of a RRC connection either on a dedicated channel (DCH) or on a common transport channel.

#### 7.5.1 DCH Re-establishment

#### 7.5.1.1 RRC connection Re-establishment (Anchor approach) – DCH Re-establishment

This example shows re-establishment of a RRC connection in dedicated transport channel (DCH) state.

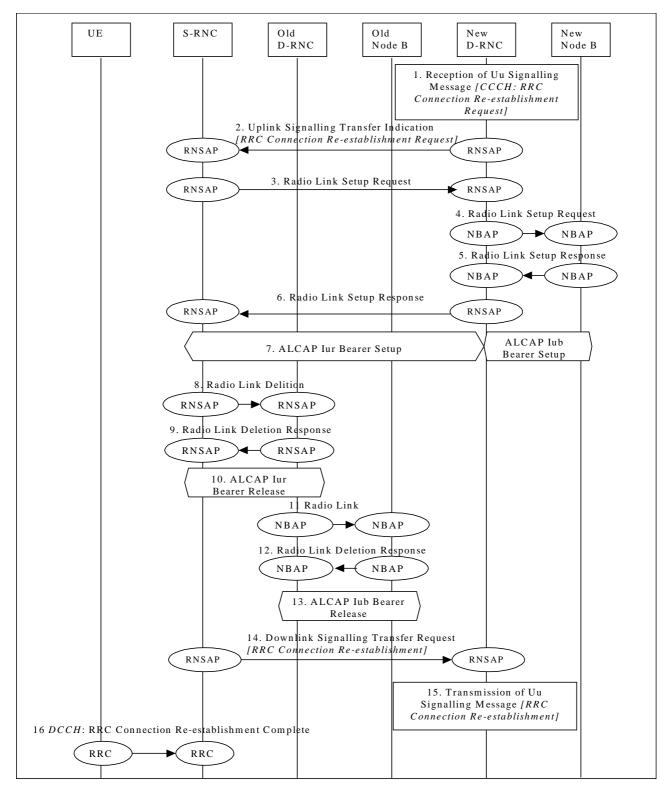


Figure 11: RRC connection Re-establishment (Anchor approach) - DCH Re-establishment

- 1. The UE initiates the re-establishment of the RRC connection with the new cell by sending **RRC Connection Re-establishment Request** message on CCCH.
- 2. The new RNC delivers this message transparently as **Uplink Signalling Transfer Indication** message to the serving RNC, the RNSAP delivers it to the RRC.
- 3. The serving RNC allocates radio resources for the RRC connection on Iur, and sends the RNSAP message **Radio Link Setup Request** to the target RNC.
- 4. The target RNC sends the NBAP message **Radio Link Setup Request** to the target Node B.
- 5. Node B allocates resources, and responses with NBAP message Radio Link Setup Response.
- 6. Target RNC responses with RNSAP message Radio Link Setup Response.

- 7. Serving RNC initiates set-up of Iur / Iub Data Transport bearer using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iur / Iub Data Transport Bearer to the DCH. The request for set-up of Iur / Iub Data Transport bearer is acknowledged by target RNC / Node B.
- 8./9./10./11./12./13. The SRNC initiates release of Iur/Iub Data Transport bearer using ALCAP protocol and also release of Iur/Iub Radio resource using RNSAP / NBAP protocols.
- 14. The RRC in the serving RNC prepare a RRC Connection Re-establishment message and the RNSAP sends it in the transparent message **Downlink Signalling Transfer Request** to the new CRNC.
- 15. The New CRNC delivers the **RRC Connection Re-establishment message** on CCCH.
- 16. Message **RRC Connection Re-establishment Complete** is sent on the new DCCH from the UE to the serving RNC.

#### 7.5.1.2 RRC Connection Re-establishment with SRNC Relocation - DCH Reestablishment

This subclause shows an example for the RRC Connection Re-establishment procedure, in dedicated transport channel (DCH) state.

It is assumed that a signalling link is available on the Iur, but no DCH is established on this interface.

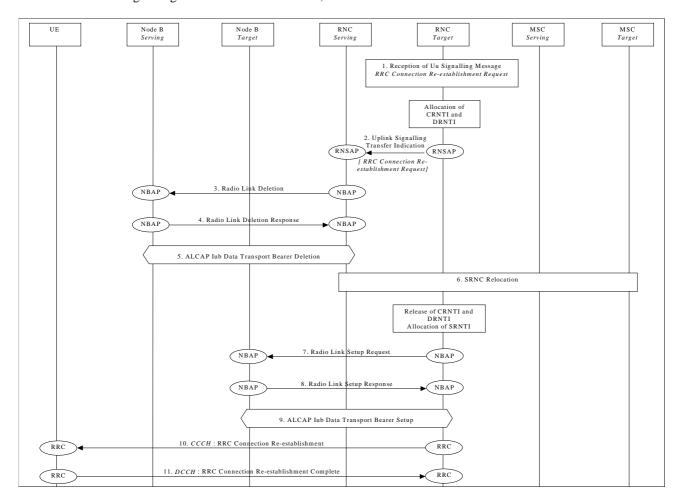


Figure 12: RRC Connection Re-establishment with SRNC Relocation - DCH Re-establishment

- 1. The UE initiates the re-establishment of the RRC connection with the new cell by sending **RRC Connection Re-establishment Request** message on CCCH. The message is received by the Target RNC.
- 2. The target RNC delivers the received message transparently as **Uplink Signalling Transfer Indication** message to the serving RNC.
- 3. The Serving RNC sends NBAP message **Radio Link Deletion** to Node B. Parameters: Cell id, Transport layer addressing information.
- 4. Node B deallocates radio resources. Successful outcome is reported in NBAP message **Radio Link Deletion Response**.

- 5. The SRNC initiates release of Iub Data Transport bearer using ALCAP protocol.
- 6. SRNC relocation procedure is triggered by the reception of the message **RRC Connection Re-establishment Request** embedded in the RNSAP **Uplink Signalling Transfer Indication** message (relocation is performed in parallel with Radio Link release).
- 7. The target RNC (new SRNC) allocates RNTI and radio resources for the RRC connection, and sends the NBAP message **Radio Link Setup Request** to the target Node B.
  - Parameters: Cell id, Transport Format Set, Transport Format Combination Set, frequency, UL scrambling code (FDD only), Time Slots (TDD only), User Codes (TDD only), Power control information.
- 8. Target Node B allocates resources, starts PHY reception, and responses with NBAP message **Radio Link Setup Response**.
  - Parameters: Signalling link termination, Transport layer addressing information for the Iub Data Transport Bearer.
- 9. Target RNC (new SRNC) initiates set-up of Iub Data Transport bearer using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iub Data Transport Bearer to the DCH. The request for set-up of Iub Data Transport bearer is acknowledged by Node B.
- 10. Message **RRC Connection Re-establishment** is sent on CCCH from target RNC (new SRNC) to UE. Parameters: Old RNTI, New RNTI, Transport Format Set, Transport Format Combination Set, frequency, DL scrambling code (FDD only), Time Slots (TDD only), User Codes (TDD only)
- 11. Message **RRC Connection Re-establishment Complete** is sent on the new DCCH from the UE to the Target RNC (new SRNC).

NOTE: SRNC Relocation execution is performed asynchronously respect to the RL deletion procedure (step 3/4).

## 7.6 Radio Access Bearer Establishment

The following examples show establishment of a radio access bearer on a dedicated channel (DCH) or on a common transport channel (RACH/FACH) when the RRC connection already support a radio access bearer either on a dedicated channel (DCH) or on a common transport channel (RACH/FACH).

## 7.6.1 DCH - DCH Establishment - Synchronised

This example shows establishment of a radio access bearer (DCH) in dedicated transport channel (DCH) RRC state.

[FDD-The UE communicates via two Nodes B. One Node B is controlled by SRNC, one Node B is controlled by DRNC].

[TDD – The Nodes B shown in the figure are mutually exclusive in TDD mode.].

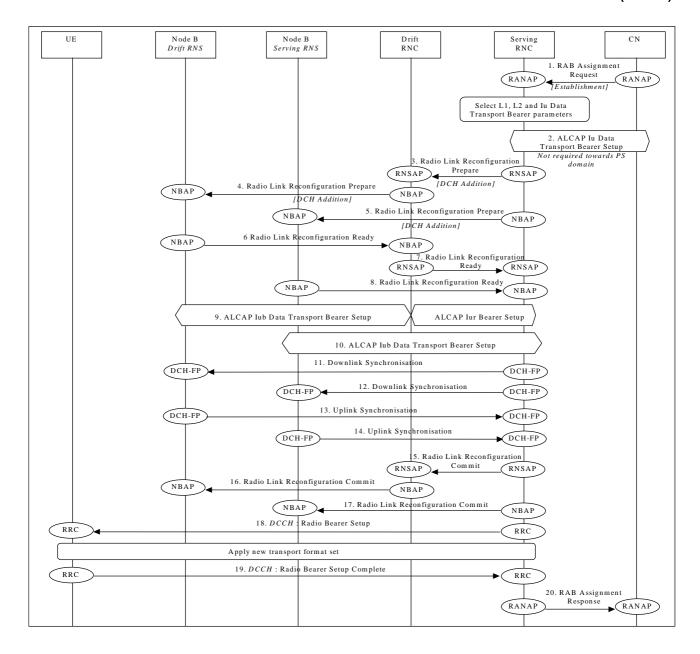


Figure 13: Radio Access Bearer Establishment - DCH - DCH Establishment - Synchronised

- 1. CN initiates establishment of the radio access bearer with RANAP message **Radio Access Bearer Assignment Request**.
  - Parameters: Radio Access Bearer parameters, User Plane Mode, Transport Address, Iu Transport Association.
- SRNC initiates set-up of Iu Data Transport bearer using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iu Data Transport Bearer to the Radio Access Bearer (this step is not required towards PS domain).
- SRNC requests DRNC to prepare establishment of DCH to carry the radio access bearer (Radio Link Reconfiguration Prepare).
  - Parameters: Transport Format Set, Transport Format Combination Set, Power control information, instructions for DCH mapping on Iub Data Transport Bearers.
- 4. DRNC requests its Node B to prepare establishment of DCH to carry the radio access bearer (**Radio Link Reconfiguration**Prepare).
  - Parameters: Transport Format Set, Transport Format Combination Set, Power control information.
- (TDD only), User Codes (TDD only).6. Node B allocates resources and notifies DRNC that the preparation is ready (Radio Link Reconfiguration Ready).

- Parameters: Transport layer addressing information (AAL2 address, AAL2 Binding Id) for Iub Data Transport Bearer.
- DRNC notifies SRNC that the preparation is ready (Radio Link Reconfiguration Ready).
   Parameters: Transport layer addressing information (AAL2 address, AAL2 Binding Id) for Iub Data Transport Bearer
- 8. Node B allocates resources and notifies SRNC that the preparation is ready (**Radio Link Reconfiguration Ready**). Parameters: Transport layer addressing information (AAL2 address, AAL2 Binding Id) for Iub Data Transport Bearer
- 9. SRNC initiates setup of Iur/Iub Data Transport Bearer using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iur/Iub Data Transport Bearer to DCH.
- 10. SRNC initiates setup of Iub Data Transport Bearer using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iub Data Transport Bearer to DCH.
- 11./12./13./14. The Nodes B and SRNC establish synchronism for the Iub and Iur Data Transport Bearer by means of exchange of the appropriate DCH Frame Protocol frames **Downlink Synchronisation** and **Uplink Synchronisation**.
- 15. RNSAP message Radio Link Reconfiguration Commit is sent from SRNC to DRNC. Parameters:
- 16. NBAP message Radio Link Reconfiguration Commit is sent from DRNC to Node B. Parameters:
- 17. NBAP message **Radio Link Reconfiguration Commit** is sent from SRNC to Node B. Parameters:
- 18. RRC message **Radio Access Bearer Setup** is sent by SRNC to UE.

  Parameters: Transport Format Set, Transport Format Combination Set, Time Slots (TDD only), User Codes (TDD only).
- 19. UE sends RRC message Radio Access Bearer Setup Complete to SRNC.
- 20. SRNC sends RANAP message Radio Access Bearer Assignment Response to CN.

## 7.6.2 DCH - DCH Establishment - Unsynchronised (PS Core Network)

This example shows the establishment of a radio access bearer (DCH) in dedicated transport channel (DCH) RRC state. The UE communicates via two Nodes B. One Node B is controlled by SRNC, one Node B is controlled by DRNC. The reconfiguration time does not require to be synchronised among Node-Bs, SRNC and UE.

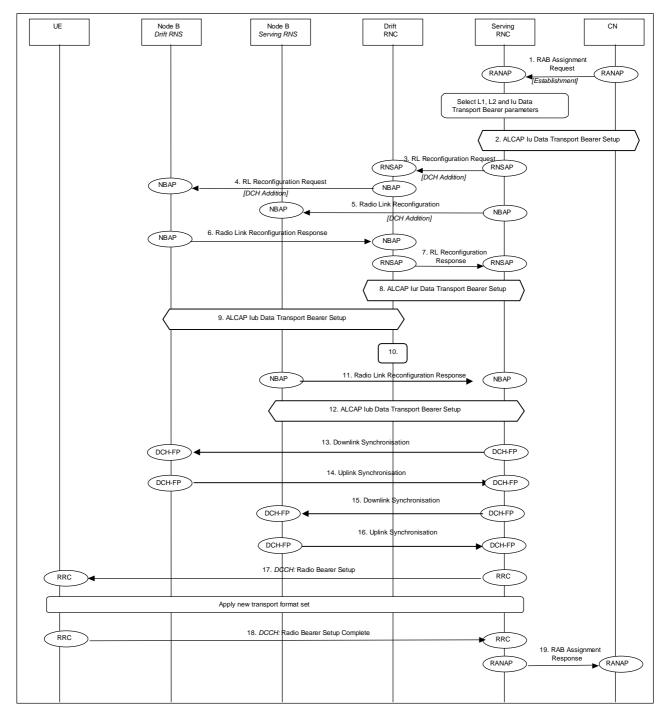


Figure 14: Radio Access Bearer Establishment - DCH - DCH Establishment - Unsynchronised

- 1. CN initiates establishment of the radio access bearer with RANAP Radio Access Bearer Assignment Request message.
  - Parameters: radio access bearer parameters, User Plane Mode, Transport Address, Iu Transport Association.
- 2. SRNC performs mapping of the radio access bearer QoS parameters to AAL2 link characteristics and initiates setup of Iu Data Transport bearer using ALCAP protocol.
  - Parameters: Served User Generated Reference, AAL2 link characteristics ...
- 3. SRNC decided that there are no need for a synchronous RL reconfiguration, and requests DRNC to setup a new DCH sending the **RL Reconfiguration Request** message. The modification shall be done immediately without waiting for the command message.
  - Parameters: Bearer ID, , Transport Format Set, Transport Format Combination Set, Power control information.
- 4. DRNC requests its Node B to establish of a new DCH in the existing Radio Link sending the **RL Reconfiguration Request** message.
  - Parameters: Bearer ID, Transport Format Set, Transport Format Combination Set, Power control information.

- SRNC requests its Node B setup a new DCH in the existing Radio Link sending the RL Reconfiguration Request message.
  - Parameters: Bearer ID, Transport Format Set, Transport Format Combination Set, Power control information.
- Node B allocates resources and notifies DRNC that the setup is done sending the RL Reconfiguration Response message.
  - Parameters: Transport layer addressing information (AAL2 address, AAL2 Binding Id) for Iub Data Transport Bearer.
- DRNC notifies SRNC that the setup is done sending the RL Reconfiguration Response message.
   Parameters: Transport layer addressing information (AAL2 address, AAL2 Binding Id) for Iub Data Transport Bearer.
- 8. SRNC initiates setup of Iur Data Transport Bearer using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iur Data Transport Bearer to DCH.
- 9. SRNC initiates setup of Iub Data Transport Bearer using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iub Data Transport Bearer to DCH.
- 10. DRNC performs bridging of Iub and Iur Data Transport bearers.
- 11. Node B allocates resources and notifies SRNC that the setup is sending the **RL Reconfiguration Response**. Parameters: Transport layer addressing information (AAL2 address, AAL2 Binding Id) for Iub Data Transport Bearer.
- 12. SRNC initiates setup of Iub Data Transport Bearer using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iub Data Transport Bearer to DCH.
- 13./14./15./16. The Nodes B and SRNC establish synchronism for the Iub and Iur Data Transport Bearer by means of exchange of the appropriate DCH Frame Protocol frames **Downlink Synchronisation** and **Uplink Synchronisation**.
- 17. RRC message **Radio Bearer Setup** is sent by SRNC to UE. Parameters: Transport Format Set, Transport Format Combination Set.
- 18. UE sends RRC message Radio Bearer Setup Complete to SRNC.
- 19. SRNC sends RANAP message Radio Access Bearer Assignment Response to CN.
  Parameters: Transport Address (Always for PS domain; for CS domain only if modified), Iu Transport Association (Always for PS domain; for CS domain only if modified).

#### 7.6.3 RACH/FACH - DCH Establishment

This example shows the establishment of a radio access bearer (DCH) in common transport channel (RACH/FACH) RRC State.

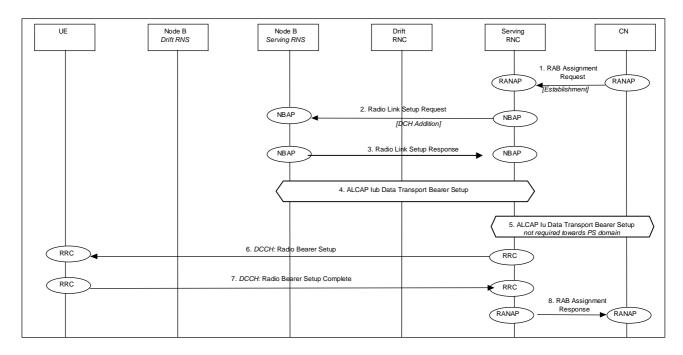


Figure 15: Radio Access Bearer Establishment – RACH/FACH - DCH Establishment – Unsynchronised

- CN initiates establishment of the radio access bearer with RANAP Radio Access Bearer Assignment Request
  message.
  - Parameters: radio access bearer parameters, User Plane Mode, Transport Address, Iu Transport Association.
- 2. DRNC requests its Node B to establish of a new DCH in the existing Radio Link sending the **Radio Link Setup Request** message.
  - Parameters: Transport Format Set, Transport Format Combination Set, Power control information.
- 3. Node B allocates resources and notifies SRNC that the setup is sending the **Radio Link Setup Response**. Parameters: Transport layer addressing information (AAL2 address, AAL2 Binding Id) for Iub Data Transport Bearer.
- 4. SRNC initiates setup of Iub Data Transport Bearer using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iub Data Transport Bearer to DCH.
- 5. SRNC performs mapping of the radio access bearer QoS parameters to AAL2 link characteristics and initiates setup of Iu Data Transport bearer using ALCAP protocol (this step is not required towards PS domain)
- 6. RRC message **Radio Bearer** Setup is sent by SRNC to UE. Parameters: Transport Format Set, Transport Format Combination Set.
- 7. UE sends RRC message Radio Bearer Setup Complete to SRNC.
- 8. SRNC sends RANAP message Radio Access Bearer Assignment Response to CN.

#### 7.6.4 RACH/FACH - RACH/FACH Establishment

This example shows the establishment of a radio access bearer (RACH/FACH) in common transport channel (RACH/FACH) RRC state.

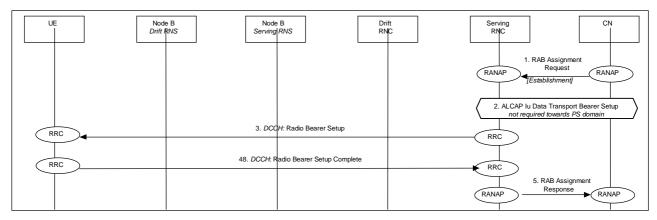


Figure 16: Radio Access Bearer Establishment – RACH/FACH – RACH/FACH Establishment – Unsynchronised

- CN initiates establishment of the radio access bearer with RANAP Radio Access Bearer Assignment Request message.
  - Parameters: radio access bearer parameters, User Plane Mode, Transport Address, Iu Transport Association.
- 2. SRNC performs mapping of the radio access bearer QoS parameters to AAL2 link characteristics and initiates setup of Iu Data Transport bearer using ALCAP protocol (this step is not required towards PS domain).
- 3. RRC message **Radio Bearer** Setup is sent by SRNC to UE. Parameters: Transport Format Set, Transport Format Combination Set.
- 4. UE sends RRC message Radio Bearer Setup Complete to SRNC.
- 5. SRNC sends RANAP message **Radio Access Bearer Assignment Response** to CN.

## 7.7 Radio Access Bearer Release

The following examples show release of a radio access bearer either on a dedicated channel (DCH) or on a common transport channel (RACH/FACH) when the RRC connection already uses a dedicated channel (DCH) or a common transport channel (RACH/FACH).

# 7.7.1 DCH - DCH Release - Synchronised

This example shows release of a radio access bearer on a dedicated channel (DCH) when the RRC connection still uses a dedicated channel (DCH) after the release.

[FDD - The UE communicates via two Nodes B. One Node B is controlled by SRNC, one Node B is controlled by DRNC.]

[TDD – The Nodes B shown in the figure are mutually exclusive in TDD mode.]

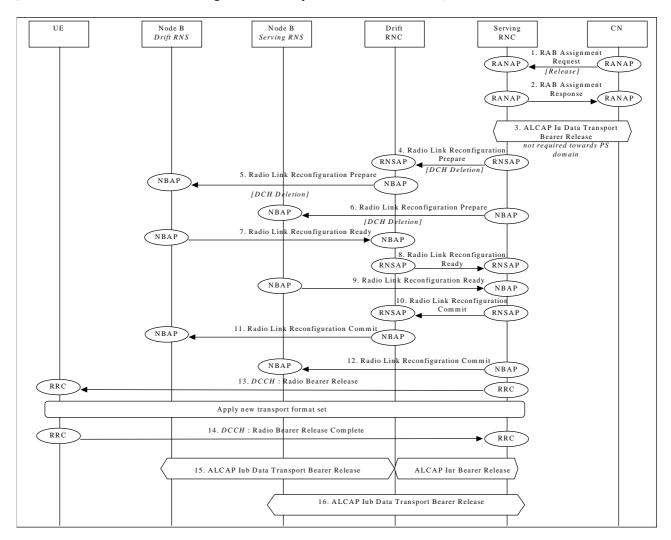


Figure 17: Radio Access Bearer Release - DCH - DCH Release - Synchronised

- 1. CN initiates release of the radio access bearer with RANAP message Radio Access Bearer Assignment Request.
- SRNC acknowledges the release of radio access bearer (Radio Access Bearer Assignment Response).
- 3. SRNC initiates release of the Iu Data Transport bearer between the CN and the SRNC using the ALCAP protocol (this step is not required towards PS domain).
- 4. SRNC requests DRNC to prepare release of DCH carrying the radio access bearer (**Radio Link Reconfiguration Prepare**).
  - Parameters: Transport Format Combination Set, UL scrambling code.
- DRNC requests its Node B to prepare release of DCH carrying the radio access bearer (Radio Link Reconfiguration Prepare).
  - Parameters: Transport Format Combination Set, UL scrambling code.

Codes (TDD only).

- 7. Node B notifies DRNC that release preparation is ready (Radio Link Reconfiguration Ready).
- 8. DRNC notifies SRNC that release preparation is ready (Radio Link Reconfiguration ready).
- 9. Node B notifies SRNC that release preparation is ready (Radio Link Reconfiguration Ready).
- 10. RNSAP message Radio Link Reconfiguration Commit is sent from SRNC to DRNC.
- 11. NBAP message Radio Link Reconfiguration Commit is sent from DRNC to Node B.
- 12. NBAP message Radio Link Reconfiguration Commit is sent from SRNC to Node B.

- RRC message Radio Bearer Release is sent by SRNC to UE.
   Parameters: Transport Format Set, Transport Format Combination Set, Time Slots (TDD only), User Codes (TDD only).
- 14. UE sends RRC message Radio Bearer Release Complete to SRNC.
- 15. Not used resources in-DRNC and Node B (Drift RNS) are released. DRNC initiates release of Iur and Iub (Drift RNS) Data Transport bearer using ALCAP protocol
  - 16. Not used resources in SRNC and Node B (Serving RNS, if any) are released. SRNC initiates release of Iub (Serving RNS) Data Transport bearer using ALCAP protocol.

## 7.7.2 DCH - DCH Release - Unsynchronised

This example shows release of a radio access bearer on a dedicated channel (DCH) when the RRC connection still uses a dedicated channel (DCH) after the release. The UE communicates via two Nodes B. One Node B is controlled the SRNC, one Node B is controlled by DRNC. The reconfiguration does not require to be synchronised among Node-Bs, SRNC and UE.

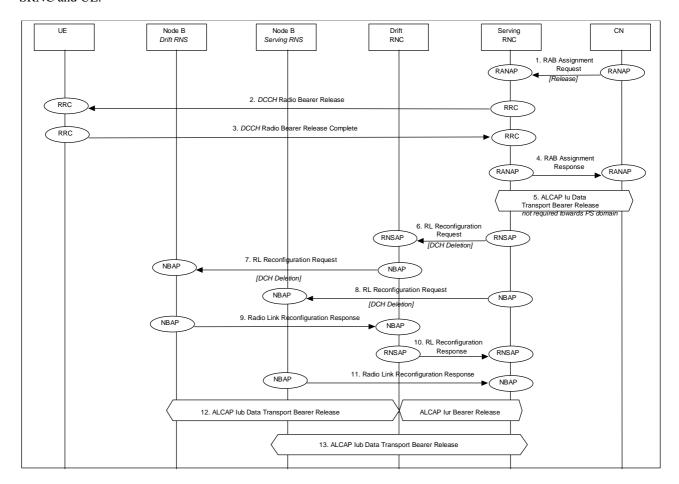


Figure 18: Radio Access Bearer Release - DCH - DCH Release - Unsynchronised

- 1. CN initiates release of the radio access bearer with RANAP Radio Access Bearer Assignment Request message.
- 2. RRC message Radio Bearer Release is sent by SRNC to UE.
- 3. UE sends RRC message Radio Bearer Release Complete to SRNC.
- 4. SRNC acknowledges the release of radio access bearer to CN.
- 5. SRNC initiates release of the Iu Data Transport bearer between the CN and the SRNC using the ALCAP protocol (this step is not required towards PS domain).
- SRNC requests DRNC to release of DCH carrying the radio access bearer. Parameters: DCH ID,, TFCS.
- 7. DRNC requests its Node B to release of DCH carrying the radio access bearer. Parameters: DCH ID, TFCS.
- 8. SRNC requests its Node B to prepare release of DCH carrying the radio access bearer. Parameters: DCH ID, TFCS.
- Node B acknowledges DRNC.
- 10. DRNC acknowledges SRNC.

- 11. Node B acknowledges SRNC.
- 12. SRNC initiates release of Iur Data Transport bearer using ALCAP protocol. Note: the release of the Iur link may be done before step 10.
- 13. SRNC initiates release of Iub Data Transport bearer using ALCAP protocol. Note: the release of the Iub link may be done before step 10.

#### 7.7.4 RACH/FACH - RACH/FACH Release

This example shows release of a radio access bearer on a common transport channel (RACH/FACH) when the RRC connection still uses a common transport channel (RACH/FACH) after the release (RACH/FACH to RACH/FACH).

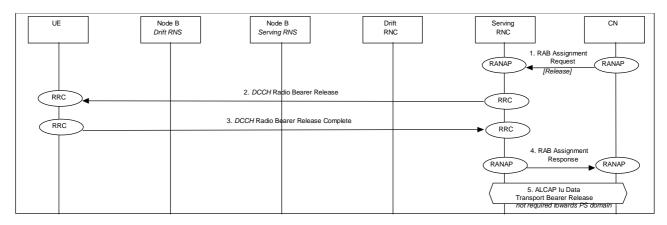


Figure 19: Radio Access Bearer Release - RACH/FACH - RACH/FACH Release

- CN initiates release of the radio access bearer with RANAP Radio Access Bearer Assignment Request message.
- 2. RRC message Radio Bearer Release is sent by SRNC to UE.
- UE sends RRC message Radio Bearer Release Complete to SRNC.
- 4. SRNC acknowledges the release of radio access bearer to CN.
- 5. SRNC initiates release of the Iu Data Transport bearer between the CN and the SRNC using the ALCAP protocol (this step is not required towards PS domain).

### 7.8 Radio Access Bearer Modification

The following examples show modification of a radio access bearer established either on a dedicated channel (DCH) or on a common transport channel (RACH/FACH). The procedure starts from a radio access bearer assignment because does not exist a special message to modify a radio access bearer, instead an "assignment" message is used.

## 7.8.1 DCCH on DCH - Synchronised

This example shows modification of a radio access bearer established on a dedicated channel (DCH) with UE in macrodiversity between two RNCs. A NSAP synchronised procedure is used and a successful case is shown. For an unsuccessful case it's important to note that a failure message can be sent in any point of the Message Sequence Chart (MSC); in particular could be in RRC reconfiguration response (# 16).

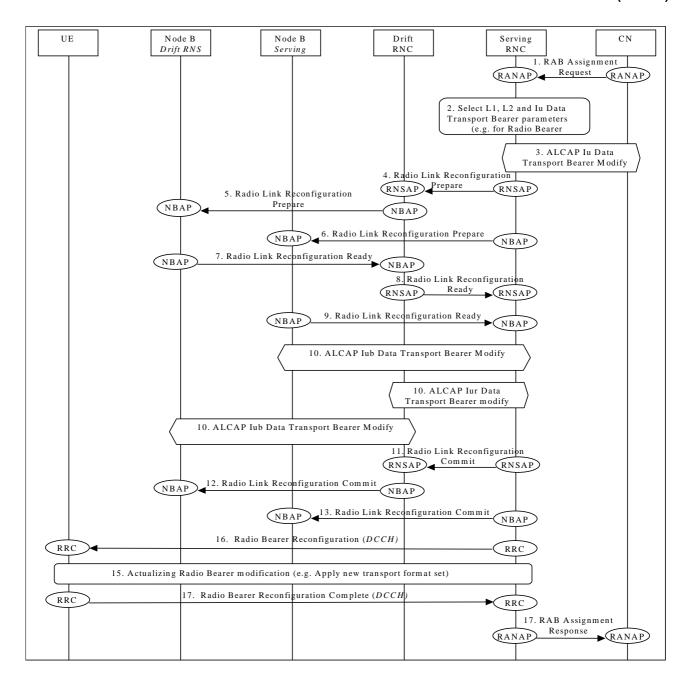


Figure 20: Radio Access Bearer Modification - DCH Modification - Synchronised

- CN initiates modification of the radio access bearer with RANAP message Radio Access Bearer Assignment Request.
  - Parameters: parameters to be modified at lower level e.g. Maximum Bit Rate.
- 2. Interworking functions. SRNC chooses which parameters (lower level) ought to be modified and what kind of procedure has to start up (i.e Radio Bearer Reconfiguration for RRC).
- 3. SRNC starts an Iu Data Transport Bearer Modification between the CN and the SRNC using the ALCAP protocol with AAL2 bindings carried by radio access bearer assignment message (this step is not required towards PS domain). This has to be done before Radio Reconfiguration itself because the transport channel must be ready when the radio channel will be ready.
- 4. SRNC requests DRNC to prepare modification of DCH carrying the radio access bearer (**Radio Link Reconfiguration**Prepare).
  - Parameters: Transport Format Combination Set, UL scrambling code, etc.
- 5. DRNC requests its Node B to prepare modification of DCH related to the radio access bearer (Radio Link Reconfiguration Prepare).
- SRNC requests its Node B to prepare modification of DCH carrying the radio access bearer (Radio Link Reconfiguration

  Prepare).

Parameters: Transport Format Combination Set, UL scrambling code (FDD only), Time Slots (TDD only), User Codes (TDD only).

- 7. Node B (drift) notifies DRNC that modification preparation is ready (Radio Link Reconfiguration Ready).
- 8. DRNC notifies SRNC that modification preparation is ready (Radio Link Reconfiguration ready).
- 9. Node B (serving) notifies SRNC that modification preparation is ready (**Radio Link Reconfiguration Ready**). Note: here a **Radio Link Reconfiguration Failure** could occur.
- 10. SRNC initiates modify of Iub (Serving RNS) Data Transport bearer. The same does DRNC with its own Iub. SRNC initiates modify of Iur (Serving RNS) Data Transport bearer. In the case that ALCAP is implemented by Q.AAL2 (Q.2361.1) it implies the release of the existing bearer and the establishment of a new one.
- 11. RNSAP message Radio Link Reconfiguration Commit is sent from SRNC to DRNC.
- 12. NBAP message Radio Link Reconfiguration Commit is sent from DRNC to Node B (drift).
- 13. NBAP message Radio Link Reconfiguration Commit is sent from SRNC to Node B (serving).
- 14. RRC message Radio Bearer Reconfiguration is sent by controlling RNC (here SRNC) to UE.
- 15. Both UE and Nodes B actualise modification of DCH (i.e. applying a new transport format).
- 16. UE sends RRC message Radio Bearer Reconfiguration Complete to SRNC.
- SRNC acknowledges the modification of radio access bearer (Radio Access Bearer Assignment Response) towards CN.

A radio access bearer modification procedure (via radio access bearer assignment message) is shown with mapping to Radio Bearer reconfiguration. Note that this is not possible if we want to change what transport channel or logical channel you use, because RB reconfiguration does not permit a change in type of channel (see [8]).

#### 7.8.2 DCCH on RACH/FACH

This example shows reconfiguration of a radio access bearer using a common transport channel (RAH/FACH). The difference with respect to the previous example is that here there is no macrodiversity because with a physical common channel (e.g. PRACH) it's impossible to be on macrodiversity

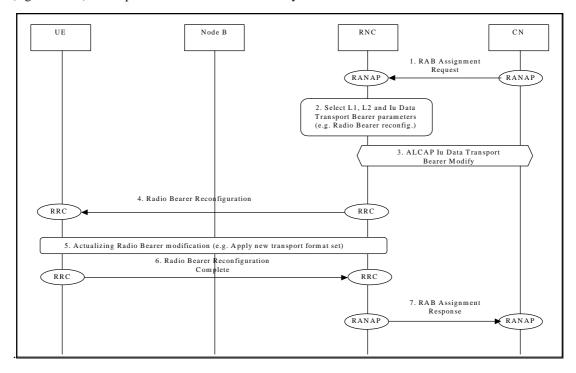


Figure 21: Radio Access Bearer Modification - RACH/FACH Modification

- 1. CN initiates modification of the radio access bearer with RANAP message Radio Access Bearer Assignment Request
- 2. Interworking functions. SRNC chooses which parameters (lower level) ought to be modified and what kind of procedure has to start up (i.e Radio Bearer Reconfiguration for RRC).
- 3. RNC starts an Iu Data Transport Bearer Modification between the CN and the RNC using the ALCAP protocol with AAL2 bindings carried by radio access bearer assignment message (this step is not required towards PS domain). This has to be done before Radio Reconfiguration itself because the transport channel must be ready when the radio channel will be ready.

- 4. RRC message **Radio Bearer Reconfiguration** is sent by controlling RNC (here RNC) to UE. UE actualises modification of common transport channel (e.g. applying a new transport format).
- 5. Both UE and Nodes B actualise modification of DCH (i.e. applying a new transport format).
- 6. UE sends RRC message Radio Bearer Reconfiguration Complete to RNC.
- RNC acknowledges the modification of radio access bearer (Radio Access Bearer Assignment Response) towards CN.

A radio access bearer modification procedure (via radio access bearer assignment message) is mapped with Radio Bearer reconfiguration. Note that this is not possible if we want to change what transport channel or logical channel you use, because Radio Bearer reconfiguration does not permit a change in type of channel (see [8]).

## 7.9 Physical Channel Reconfiguration

## 7.9.1 Physical Channel Reconfiguration (DCH)

The following example shows an example for the Physical Channel Reconfiguration in dedicated channel (DCH) RRC state.

This procedure can be used, for example, to change the UL scrambling code of a UE.

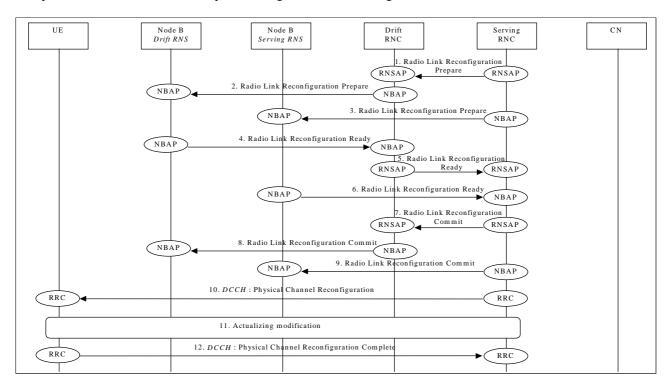


Figure 22: Physical Channel Reconfiguration (DCH)

- SRNC decided that there is a need for a Physical Channel Reconfiguration and requests DRNC to prepare reconfiguration of DCH (Radio Link Reconfiguration Prepare).
   Parameters: UL scrambling code (FDD only), Power control information.
- 2. DRNC requests its Node B to prepare reconfiguration of physical channel (Radio Link Reconfiguration Prepare).
  - Parameters: Power control information, UL scrambling code (FDD only), Time Slots (TDD only), User Codes (TDD only).
- 3. SRNC requests its Node B to prepare reconfiguration of physical channel (**Radio Link Reconfiguration Prepare**). Parameters: Power control information, UL scrambling code (FDD only), Time Slots (TDD only), User Codes (TDD only).
- 4. Node B allocates resources and notifies DRNC that the reconfiguration is ready (Radio Link Reconfiguration Ready).
  - Parameters: Transport layer addressing information (AAL2 address, AAL2 Binding Id) for Iub Data Transport Bearer.

- 5. DRNC notifies SRNC that the reconfiguration is ready (**Radio Link Reconfiguration Ready**). Parameters: Transport layer addressing information (AAL2 address, AAL2 Binding Id) for Iur Data Transport Bearer.
- Node B allocates resources and notifies SRNC that the reconfiguration is ready (Radio Link Reconfiguration Ready).
  - Parameters: Transport layer addressing information (AAL2 address, AAL2 Binding Id) for Iub Data Transport Bearer
- RNSAP message Radio Link Reconfiguration Commit is sent from SRNC to DRNC. Parameters: CFN.
- 8. NBAP message **Radio Link Reconfiguration Commit** is sent from DRNC to Node B. Parameters: CFN.
- NBAP message Radio Link Reconfiguration Commit is sent from SRNC to Node B. Parameters: CFN.
- 10. RRC message **Physical Channel Reconfiguration** is sent by SRNC to UE. Parameters: UL scrambling code (FDD only), Time Slots (TDD only), User Codes (TDD only), CFN.
- 11. Both UE and Nodes B actualise modification of the physical channel.
- 12. UE sends RRC message Physical Channel Reconfiguration Complete to SRNC.

#### 7.9.2 Physical Channel Reconfiguration (CRNC Controlled)

This procedure shall be used to reconfigure the Physical Channel in the CRNC; in case of FDD it corresponds to the Down Link Code Reconfiguration Procedure, while in TDD it allows to change either TS or User Code.

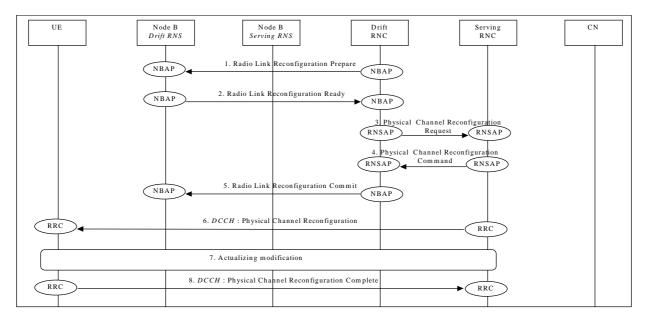


Figure 23: Physical Channel Reconfiguration (CRNC Controlled)

- 1. DRNC requests its Node B to reconfigure the physical channel (**Radio Link Reconfiguration Prepare**). Parameters: Power control information, Time Slots (TDD only), User Codes (TDD only).
- Node B allocates resources and notifies DRNC that the reconfiguration is ready (Radio Link Reconfiguration Ready).
  - Parameters: Transport layer addressing information (AAL2 address, AAL2 Binding Id) for Iub Data Transport Bearer.
- 3. DRNC decides that a Physical Channel Reconfiguration is needed and sends the RNSAP message **Physical Channel Reconfiguration Request** to the SRNC.
- 4. SRNC determines the CFN in which to perform the physical channel reconfiguration and sends the message **Physical Channel Reconfiguration Command.**
- 5. NBAP message **Radio Link Reconfiguration Commit** is sent from DRNC to Node B. Parameters: CFN.
- 6. RRC message **Physical Channel Reconfiguration** is sent by SRNC to UE. Parameters: Time Slots (TDD only), User Codes (TDD only), CFN.
- 7. Both UE and Nodes B actualise modification of the physical channel.
- 8. After the reconfiguration, the UE sends RRC message **Physical Channel Reconfiguration Complete** to SRNC.

## 7.10 Soft Handover (FDD)

This subclause presents some examples of soft handover procedures. The following cases are considered:

- Radio Link Addition (Branch Addition);
- Radio link Deletion (Branch Deletion);
- Radio link Addition & Deletion (Branch Addition & Deletion simultaneously).

Soft Handover applies only to FDD mode.

#### 7.10.1 Radio Link Addition (Branch Addition)

This example shows establishment of a radio link via a Node B controlled by another RNC than the serving RNC. This is the first radio link to be established via this RNS, thus macro-diversity combining/splitting with already existing radio links within DRNS is not possible.

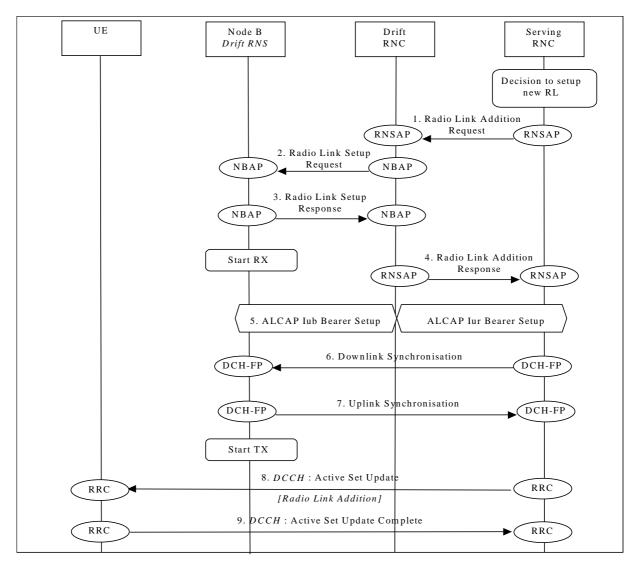


Figure 24: Soft Handover - Radio Link Addition (Branch Addition)

SRNC decides to setup a radio link via a new cell controlled by another RNC. SRNC requests DRNC for radio
resources by sending RNSAP message Radio Link Addition Request. If this is the first radio link via the DRNC
for this UE, a new Iur signalling connection is established. This Iur signalling connection will be used for all
RNSAP signalling related to this UE.

- Parameters: Cell id, Transport Format Set per DCH, Transport Format Combination Set, frequency, UL scrambling code.
- If requested resources are available, DRNC sends NBAP message Radio Link Setup Request to Node B. Parameters: Cell id, Transport Format Set per DCH, Transport Format Combination Set, frequency, UL scrambling code.
- 3. Node B allocates requested resources. Successful outcome is reported in NBAP message Radio Link Setup Response.

Parameters: Signalling link termination, Transport layer addressing information (AAL2 address, AAL2 Binding Identitie(s)) for Data Transport Bearer(s).

Then Node B starts the UL reception.

- 4. DRNC sends RNSAP message **Radio Link Addition Response** to SRNC.
  Parameters: Transport layer addressing information (AAL2 address, AAL2 Binding Identity) for Data Transport Bearer(s), Neighbouring cell information.
- 5. SRNC initiates setup of Iur/Iub Data Transport Bearer using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iub Data Transport Bearer to DCH.

  This may be repeated for each Iur/Iub Data Transport Bearer to be setup.
- 6./7.Node B and SRNC establish synchronism for the Data Transport Bearer(s) by means of exchange of the appropriate DCH Frame Protocol frames **Downlink Synchronisation** and **Uplink Synchronisation**, relative already existing radio link(s). Then Node B starts DL transmission.
- 8. SRNC sends RRC message **Active Set Update** (Radio Link Addition) to UE on DCCH. Parameters: Update type, Cell id, DL scrambling code, Power control information, Ncell information.
- 9. UE acknowledges with RRC message **Active Set Update Complete**.

#### 7.10.2 Radio link Deletion (Branch Deletion)

This example shows deletion of a radio link belonging to a Node B controlled by another RNC than the serving RNC.

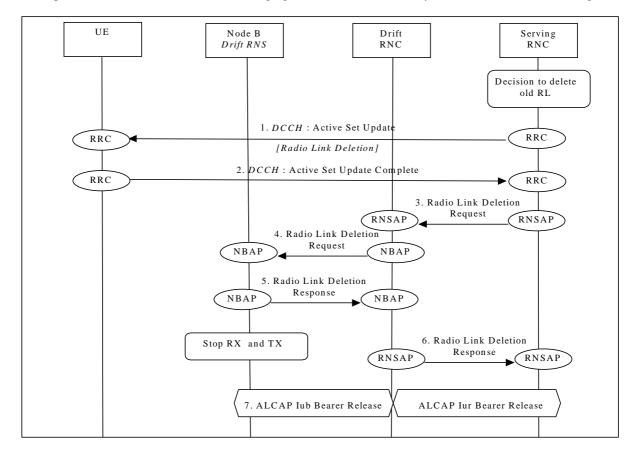


Figure 25: Soft Handover - Radio Link Deletion (Branch Deletion)

- 1. SRNC decides to remove a radio link via an old cell controlled by another RNC. SRNC sends RRC message **Active Set Update** (Radio Link Deletion) to UE on DCCH.
- Parameters: Update type, Cell id.
- 2. UE deactivates DL reception via old branch, and acknowledges with RRC message Active Set Update Complete.
- 3. SRNC requests DRNC to deallocate radio resources by sending RNSAP message **Radio Link Deletion Request**. Parameters: Cell id, Transport layer addressing information.
- 4. DRNC sends NBAP message **Radio Link Deletion Request** to Node B. Parameters: Cell id, Transport layer addressing information.
- 5. Node B deallocates radio resources. Successful outcome is reported in NBAP message **Radio Link Deletion Response**.
- 6. DRNC sends RNSAP message Radio Link Deletion Response to SRNC.
- 7. SRNC initiates release of Iur/Iub Data Transport Bearer using ALCAP protocol.

# 7.10.3 Radio link Addition & Deletion (Branch Addition & Deletion - simultaneously)

This example shows simultaneous deletion of a radio link belonging to a Node B controlled by the serving RNC and the establishment of a radio link via a Node B controlled by another RNC than the serving RNC. This is the first radio link to be established via this RNS, thus macro-diversity combining/splitting with already existing radio links within DRNS is not possible.

This procedure is needed when the maximum number of branches allowed for the macrodiversity set has already been reached.

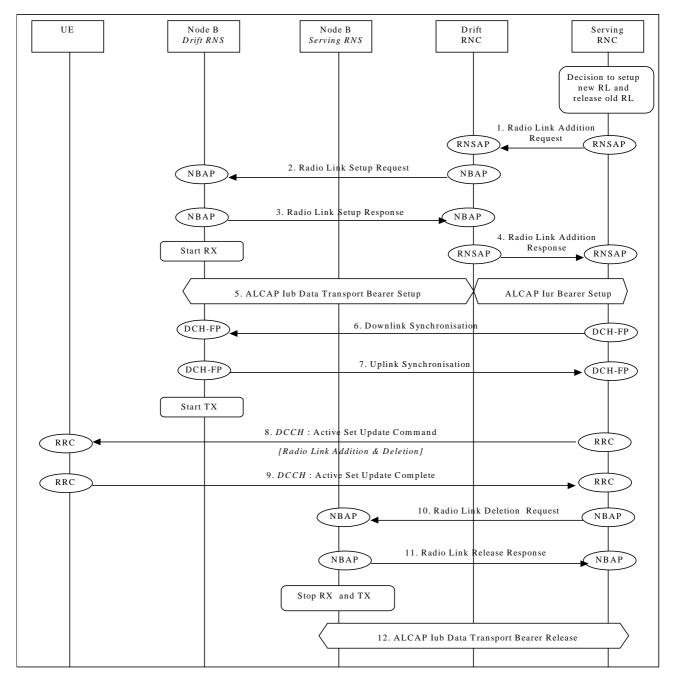


Figure 26: Soft Handover - Radio link Addition & Deletion (Branch Addition & Deletion - simultaneously)

- 1.  $\Rightarrow$  7. See description 1.  $\Rightarrow$  7. in subclause 7.10.1.
- 8. SRNC sends RRC message **Active Set Update** (Radio Link Addition & Deletion) to UE on DCCH. Parameters: Update type, Cell id, DL scrambling code, Power control information, Ncell information.
- 9. UE deactivates DL reception via old branch, activates DL reception via new branch and acknowledges with RRC message **Active Set Update Complete**.
- 10.  $\Rightarrow$  12. See description 3.  $\Rightarrow$  7. in subclause 7.10.2.

## 7.11 Hard Handover

This subclause presents some examples of hard handover procedures. These procedures are for both dedicated and common channels and may be applied in the following cases:

- intra-frequency Hard Handover (TDD mode);
- inter-frequency Hard Handover (FDD and TDD mode).

## 7.11.1 Backward Hard Handover

This subclause shows some examples of hard handover in the case of network initiated backward handovers.

#### 7.11.1.1 Hard Handover via Iur (DCH State)

This subclause shows an example of Hard Handover via Iur, when the mobile is in DCH state, for both successful and unsuccessful cases.

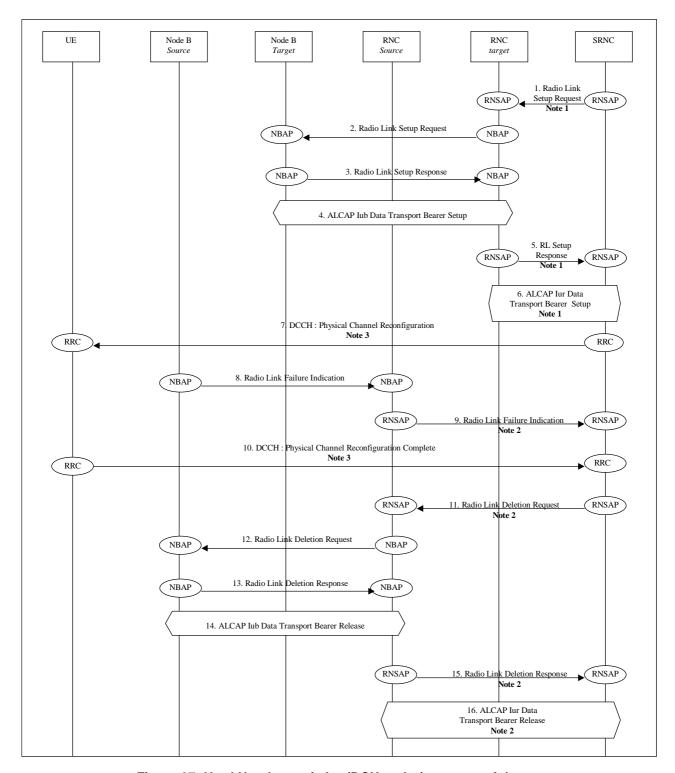


Figure 27: Hard Handover via lur (DCH on lur) - successful case

- SRNC sends Radio Link Setup Request message to the target RNC.
   Parameters: target RNC identifier, s-RNTI, Cell id, Transport Format Set, Transport Format Combination Set. (Note 1).
- 2. The target RNC allocates RNTI and radio resources for the RRC connection and the Radio Link(s) (if possible), and sends the NBAP message **Radio Link Setup Request** to the target Node-B.

  Parameters: Cell id, Transport Format Set, Transport Format Combination Set, frequency, UL scrambling code (FDD only), Time Slots (TDD only), User Codes (TDD only), Power control information etc.
- 3. Node B allocates resources, starts PHY reception, and responds with NBAP message **Radio Link Setup Response**. Parameters: Signalling link termination, Transport layer addressing information for the Iub Data Transport Bearer.

- 4. Target RNC initiates set-up of Iub Data Transport bearer using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iub Data Transport Bearer to the DCH. The request for set-up of Iub Data Transport bearer is acknowledged by Node B.
- 5. When the Target RNC has completed preparation phase, **Radio Link Setup Response** is sent to the SRNC (*Note 1*).
- 6. SRNC initiates set-up of Iur Data Transport bearer using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iur Data Transport Bearer to the DCH. The request for set-up of Iur Data Transport bearer is acknowledged by Target RNC (*Note 1*).
- 7. SRNC sends a RRC message **Physical Channel Reconfiguration** to the UE.
- 8. When the UE switches from the old RL to the new RL, the source Node B detects a failure on its RL and sends a NBAP message **Radio Link Failure Indication** to the source RNC.
- 9. The source RNC sends a RNSAP message Radio Link Failure Indication to the SRNC (Note 2).
- 10. When the RRC connection is established with the target RNC and necessary radio resources have been allocated, the UE sends RRC message **Physical Channel Reconfiguration Complete** to the SRNC.
- 11. The SRNC sends a RNSAP message Radio Link Deletion Request to the source RNC (Note 2).
- 12. The source RNC sends NBAP message **Radio Link Deletion Request** to the source Node B. Parameters: Cell id, Transport layer addressing information.
- 13. The source Node B de-allocates radio resources. Successful outcome is reported in NBAP message **Radio Link Deletion Response**.
- 14. The source RNC initiates release of Iub Data Transport bearer using ALCAP protocol.
- 15. When the source RNC has completed the release the RNSAP message Radio Link Deletion Response is sent to the SRNC (*Note 2*).
- 16. SRNC initiates release of Iur Data Transport bearer using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iur Data Transport Bearer to the DCH. The request for release of Iur Data Transport bearer is acknowledged by the Source RNC (*Note 2*).
  - NOTE 1: This message is not necessary when the target RNC is the SRNC.
  - NOTE 2: This message is not necessary when the source RNC is the SRNC.
  - NOTE 3: The messages used are only one example of the various messages which can be used to trigger a handover, to confirm it or to indicate the handover failure. The different possibilities are specified in the RRC specification (25.331), subclause 8.3.5.2.

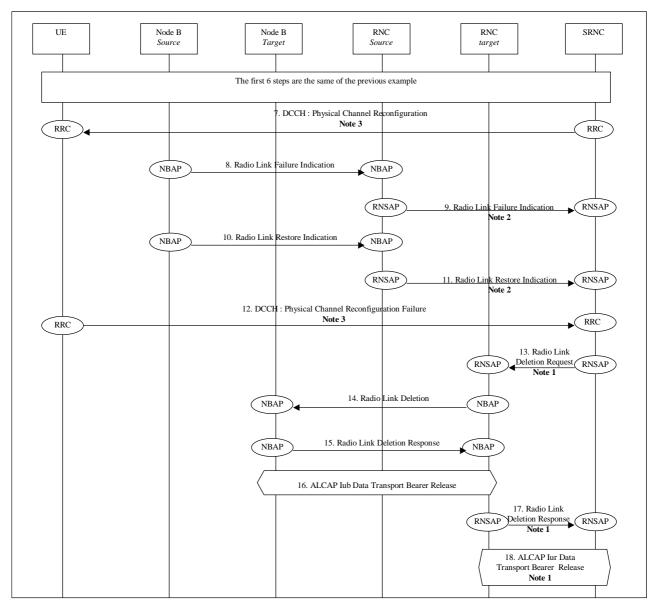


Figure 28: Hard Handover via lur (DCH on lur) - unsuccessful case.

The first 6 steps are the same of the previous example.

- 7. SRNC sends a RRC message Physical Channel Reconfiguration to the UE.
- 8. When the UE switch from the old RL to the new RL, the source Node B detect a failure on its RL and send a NBAP message **Radio Link Failure Indication** to the source RNC.
- 9. The SRNC sends a RNSAP message message Radio Link Failure Indication to the source RNC. See note 2.
- 10. UE cannot access the target cell and switch back to the new. The source Node B detects a RL restoration and send a NBAP message **Radio Link Restoration Indication** to the source RNC.
- 11. The SRNC sends a RNSAP message message Radio Link Restoration Indication to the source RNC. See note 2.
- 12. When the RRC connection is re-established with the source RNC the UE sends RRC message **Physical Channel Reconfiguration Failure** to the SRNC.
- 13. The SRNC sends a RNSAP message Radio Link Deletion Request to the target RNC. See note 1.
- 14. The target RNC sends NBAP message **Radio Link Deletion Request** to the target Node B. Parameters: Cell id, Transport layer addressing information.
- 15. The target Node B de-allocates radio resources. Successful outcome is reported in NBAP message **Radio Link Deletion Response**.
- 16. The target RNC initiates release of Iub Data Transport bearer using ALCAP protocol.
- 17. When the target RNC has completed the release the RNSAP message **Radio Link Deletion Response** is sent to the SRNC. *See note 1*.

- 18. SRNC initiates release of Iur Data Transport bearer using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iur Data Transport Bearer to the DCH. The Target RNC acknowledges the request for release of Iur Data Transport bearer. *See note 1*.
  - NOTE 1: This message is not necessary when the target RNC is the SRNC.
  - NOTE 2: This message is not necessary when the source RNC is the SRNC.
  - NOTE 3: The messages used are only one example of the various messages which can be used to trigger a handover, to confirm it or to indicate the handover failure. The different possibilities are specified in the RRC specification (25.331), subclause 8.3.5.2.

## 7.11.1.2 Hard Handover with switching in the CN (UE connected to two CN nodes, DCH state)

This example shows Inter-RNS Hard Handover with switch in CN, in a situation in which the UE is connected to two CN nodes simultaneously node and will be using one node B directly under the target RNC after the hard handover.

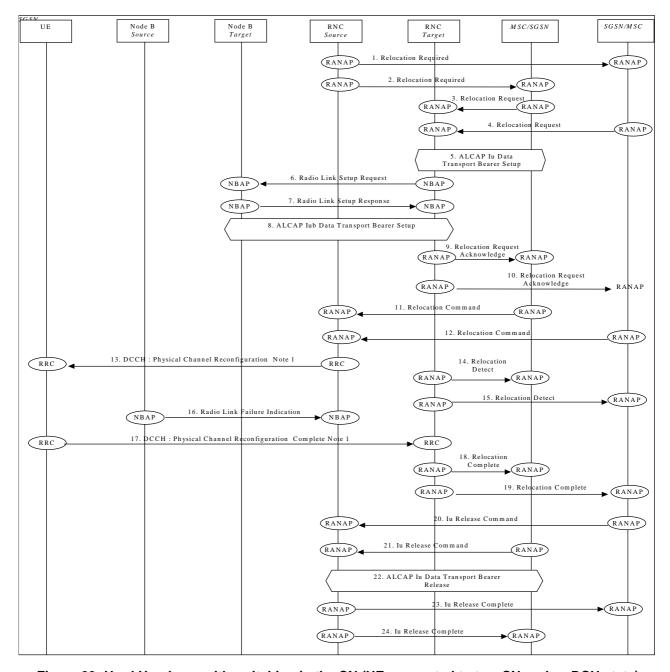


Figure 29: Hard Handover with switching in the CN (UE connected to two CN nodes, DCH state)

Serving RNC makes the decision to perform the Hard Handover via CN. Serving RNC also decides into which RNC (Target RNC) the Serving RNC functionality is to be relocated.

- 1./2. SRNC sends **Relocation Required** messages to both CN nodes.
  - Parameters: target RNC identifier, Information field transparent to the CN node and to be transmitted to the target RNC.
  - Upon reception of **Relocation Required** message CN element prepares itself for the switch and may also suspend data traffic between UE and itself for some bearers.
- 3./4. When CN is aware of preparation, CN node conveys a **Relocation Request** message to the target RNC to allocate resources.
  - Parameters: bearer ID's requested to be rerouted towards the CN node, from which the **Relocation Request** originated.
  - CN indicates in the message whether it prefers point to multipoint type of connections within CN or hard switch in CN. In this example the latter is assumed.
  - Target RNC allocates necessary resources within the UTRAN to support the radio links to be used after completion of the Hard Handover procedure.
- 5. Target RNC and CN node establish the new Iu transport bearers for each Radio Access Bearer related to the CN node.
- 6./7./8. The target RNC allocates RNTI and radio resources for the RRC connection and the Radio Link, then sends the NBAP message Radio Link Setup Request to the target Node-B.
  Parameters: Cell id, Transport Format Set, Transport Format Combination Set, frequency, UL scrambling code (FDD only), Time Slots (TDD only), User Codes (TDD only), Power control information etc.
  Node B allocates resources, starts PHY reception, and responds with NBAP message Radio Link Setup Response. Target RNC initiates set-up of Iub Data Transport bearer using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iub Data Transport Bearer to the DCH.
- 9./10. When RNC has completed preparation phase, **Relocation Request Acknowledge** is sent to the CN elements. Parameters: transparent field to the CN that is to be transmitted to the Source RNS.
- 11./12. When CN is ready for the change of SRNC, CN node sends a **Relocation Command** to the RNC. Message contains the transparent field provided by Target RNC.

  Parameters: information provided in the Information field from the target RNC.
- 13. Source RNC sends a RRC message **Physical Channel Reconfiguration** to the UE.
- 14./15. When target RNC has detected the UE, Relocation Detect message is sent to the CN nodesTarget RNC switches also the connection towards the new Iu, when UE is detected. After the switch UL traffic from node-B's is routed via the newly established MDC to the new MAC/RLC entities and finally to the correct Iu transport bearer. DL data arriving from the new Iu link is routed to newly established RLC entities, to the MAC and to the MD-splitter and Nodes B16. When the UE switch from the old RL to the new RL, the source Node B detect a failure on its RL and send a NBAP message **Radio Link Failure Indication** to the source RNC.
- 17. When the RRC connection is established with the target RNC and necessary radio resources have been allocated the UE sends RRC message **Physical Channel Reconfiguration Complete** to the target RNC.
- 18./19 After a successful switch and resource allocation at target RNC, RNC sends **Relocation Complete** messages to the involved CN nodes.
  - At any phase, before the **Relocation Complete** message is sent, the old communication link between the CN and UE is all the time existing and working and the procedure execution can be stopped and original configuration easily restored. If any such unexceptional thing occurs a **Relocation Failure** message may be sent instead of any message numbered 3-10 and 13-14 described in this above.
- 20./21. The CN node initiates the release of the Iu connections to the source RNC by sending RANAP message Iu Release Command.
- 22. Upon reception of the release requests from the CN nodes the old SRNC executes all necessary procedures to release all visible UTRAN resources that were related to the RRC connection in question.
- 23./24. SRNC confirm the IU release to the CN nodes sending the message **Iu Release Complete.**
- NOTE 1: The messages used are only one example of the various messages which can be used to trigger a handover, to confirm it or to indicate the handover failure. The different possibilities are specified in the RRC specification (25.331), subclause 8.3.5.2.

#### 7.11.2 Forward Hard Handover

This subclauses shows some examples of hard handover in the case of mobile initiated forward handovers.

Some examples of Cell Update procedures are shown, i.e. those procedures that update the position of the UE when a RRC connection exists and the position of the UE is known on cell level in the UTRAN. The UE is in CELL\_PCH or CELL\_FACH.

#### 7.11.2.1 Cell Update with SRNS relocation

This example shows Inter-RNS Cell Update with switching in the CN (therefore with SRNS relocation) and RNTI reallocation.

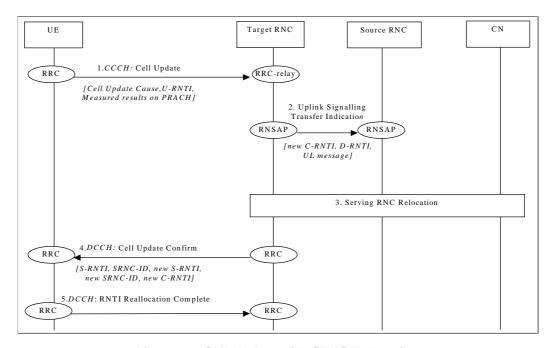


Figure 30: Cell Update with SRNS Relocation

- 1. UE sends a RRC message **Cell Update** to the UTRAN, after having made cell re-selection. Upon reception of a CCCH message from a UE, target RNC allocates a C-RNTI for the UE.
- 2. Controlling target RNC forward the received message (on CCCH) via **Uplink Signalling Transfer Indication** RNSAP message towards the SRNC. Message includes, besides target RNC-ID, also the allocated C-RNTI, which is to be used as UE identification within the C-RNC, and the D-RNTI. Upon reception of the RNSAP message SRNC decides to perform SRNS Relocation towards the target RNC.
- 3. Serving RNC relocation procedure is executed as defined in subclause 'SRNS Relocation Relocation (UE connected to a single CN node)'. After completing SRNS Relocation, target RNC allocates new S-RNTI for the UE, UE becoming the new serving RNC.
- 4. Target RNC responds to UE by RRC **Cell Update Confirm**, including old S-RNTI and SRNC ID as UE identifiers. Message contains also the new S-RNTI, SRNC-ID and C-RNTI.
- 5. UE acknowledges the RNTI reallocation by sending the RRC message RNTI Reallocation Confirm

#### 7.11.2.2 Cell Update via lur without SRNS relocation

This example shows an Inter RNS cell update in DRNS without SRNS relocation when no Iur RACH/FACH transport bearer exists. In this example target DRNS, source DRNS and serving RNS are all located separately from each other. Other scenarios can be easily derived from this most comprehensive signalling procedure.

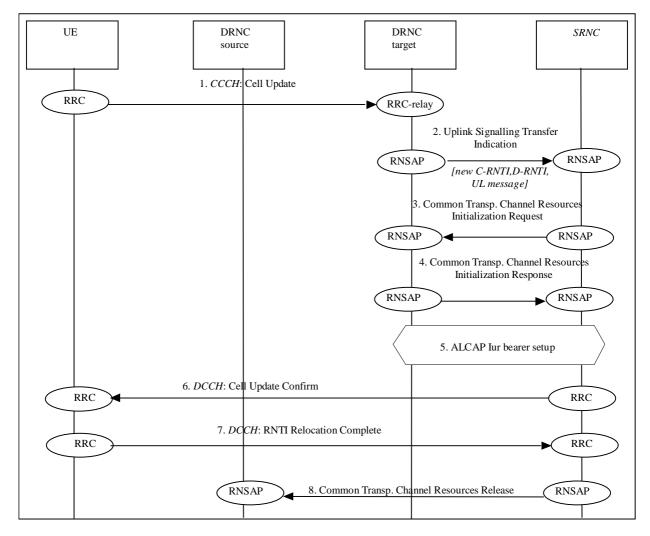


Figure 31: Cell Update via lur without SRNS Relocation

- 1. UE sends an RRC message Cell Update to the UTRAN (Target DRNC), after having made cell re-selection.
- 2. Upon reception of a CCCH message from a UE, the target DRNC decodes the SRNC-ID and the S-RNTI. The UE is not registered in the target DRNC, thus the target DRNC allocates C-RNTI and D-RNTI for the UE. The target DRNC forwards the received uplink CCCH message towards the SRNC in the RNSAP Uplink Signalling Transfer Indication message. The Uplink Signalling Transfer message includes also the cell-ID of the cell from which the CCCH message was received, the D-RNC ID and the allocated C-RNTI and D-RNTI.
- 3. Upon reception of the Uplink Signalling Transfer message the SRNC decides not to perform an SRNS Relocation towards the target RNC. The SRNC initialises the UE context in the target RNC with the RNSAP Common Transport Channel Resources Initialisation Request message. The message includes the D-RNTI and the cell identity previously received in the Uplink Signalling Transfer indication message, as well as a request for transport layer address and binding identity if there exists no appropriate Iur transport bearer to be used for the UE.
- 4. The target DRNC sends the transport layer address, binding identity and optionally PHY parameters (FACH code, ) to the SRNC with the RNSAP **Common Transport Channel Resources Initialisation Response** message
- 5. If there does not already exist an appropriate Iur transport bearer to be used for the UE, a transport bearer is established from the SRNC
- 6. The SRNC sends RRC **Cell Update Confirm** to the UE. The message is sent in the Iur user plane. It will be sent by the target DRNC to the UE on the FACH coupled to the RACH. Subsequent FACH data may be sent on a different FACH if so decided by the target DRNC.
- 7. UE acknowledges the RNTI reallocation by sending the RRC message RNTI Reallocation Confirm.
- 8. The SRNC releases the UE context in the source DRNC by sending a **Common Transport Channel Resources Release** message. The source DRNC releases the D-RNTI.

#### 7.11.2.3 Cell Update via lur without SRNS relocation (with C-RNTI reallocation)

This example is similar to the previous one (7.11.2.2) with minor changes. It shows a cell update in DRNS without SRNS relocation when an Iur RACH/FACH transport bearer exists and the UE is already known in the DRNS. The DRNC decides to allocate a new C-RNTI for the UE but not a new D-RNTI because D-RNC does not change. Therefore the two columns DRNC of picture 31 merge themselves to represent this case.

#### 7.11.2.4 Cell Update via Iur with USCH/DSCH, without SRNS relocation

This example shows an inter-RNS cell update without SRNS relocation, when the UE is in Cell\_FACH state and has been allocated DSCH and USCH (TDD) before the Cell Update and when no Iur RACH/FACH transport bearer exists. In this example target RNS, source RNS and serving RNS are all located separately from each other. The procedure includes an implicit release of the USCH and DSCH, which includes release of the Radio Link in the old cell. A potential restoration of USCH and DSCH after the cell update, triggered by the SRNC, is not shown.

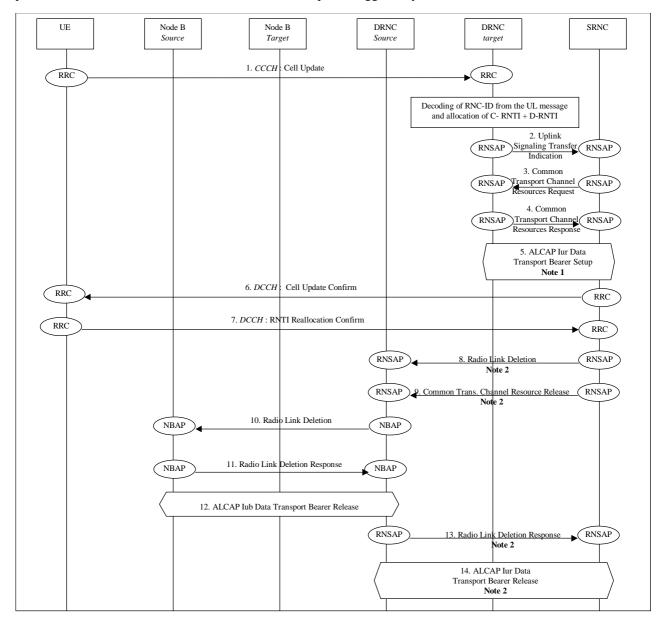


Figure 32: Backward Cell Update via lur (Cell\_FACH State with USCH/DSCH) - successful case.

Note 1: These messages are not necessary if the Target RNC and the SRNC are identical.

Note 2: These messages are not necessary if the Source RNC and the SRNC are identical.

1. When the UE decides that a cell update is necessary, it sends an RRC message **Cell Update** to the Target RNC. This is a *CCCH* message carried on the *RACH* in the new cell. Upon reception of a CCCH message from a UE, the

- target DRNC decodes the SRNC ID and the S-RNTI. Supposing that the UE is not registered in the target DRNC (RNC ID and SRNTI unknown), the target DRNC allocates a C-RNTI and a D-RNTI for the UE.
- 2. The Target RNC forwards the **Cell Update** to the SRNC via an RNSAP **Uplink Signaling Transfer** message. (*Note 1*). The Uplink Signalling Transfer message includes also the cell-ID of the cell from which the CCCH message was received, the D-RNTI and the allocated C-RNTI. Upon reception of the Uplink Signalling Transfer message the SRNC decides not to perform a SRNS Relocation towards the target RNC.
- 3. The SRNC initialises the UE context in the target RNC with the **RNSAP Common Transport Channel Resource Request** message. The message includes the D-RNTI and the cell identity previously received in the Uplink Signalling Transfer indication message, as well as a request for transport layer address and binding identity if there exists no appropriate Iur transport bearer to be used for the UE. (*Note 1*)
- 4. The Target RNC responds with an RNSAP message **Common Transport Channel Resources Response** including the transport layer address, binding identity and optionally PHY parameters (FACH code, ..) (*Note 1*).
- 5. If there does not already exist an appropriate Iur transport bearer to be used for the UE, a transport bearer is established from the SRNC (*Note 1*).
- 6. The SRNC sends an RRC message **Cell Update Confirm** within the *DCCH* on *FACH* to the UE. The message is sent in the Iur user plane. It will be sent by the target DRNC to the UE on the FACH coupled to the RACH. Subsequent FACH data may be sent on a different FACH if so decided by the target DRNC.
- 7. UE acknowledges the RNTI reallocation by sending the RRC message RNTI Reallocation Confirm.
- 8. The SRNC releases the UE context in the source DRNC by sending a **Common Transport Channel Resource Release** message. The source DRNC releases the D-RNTI (*Note 2*).
- 9. The SRNC sends an RNSAP message **Radio Link Deletion** to the source RNC(*Note 2*).
- 10. The source RNC sends NBAP message **Radio Link Deletion** to the source Node B. Parameters: Cell id, Transport layer addressing information.
- 11. The source Node B deletes the previous Radio link and the Communication Context. Successful outcome is reported in NBAP message **Radio Link Deletion Response**.
- 12. The source RNC initiates release of the corresponding Iub Data Transport bearers using ALCAP protocol.
- 13. When the source RNC has completed the release, the RNSAP message **Radio Link Deletion Response** is sent to the SRNC (*Note 2*).
- 14. SRNC initiates release of Iur Data Transport bearer using ALCAP protocol. The request for release of Iur Data Transport bearer is acknowledged by the Source RNC (*Note 2*).

## 7.12 URA Update

This subclause presents some examples of URA Update procedures, i.e. those procedures that update the UTRAN registration area of a UE when a RRC connection exists and the position of the UE is known on URA level in the UTRAN.

## 7.12.1 Inter-RNS URA Update with SRNS Relocation

This example shows Inter-RNS URA Update with switching in the CN (SRNS relocation).

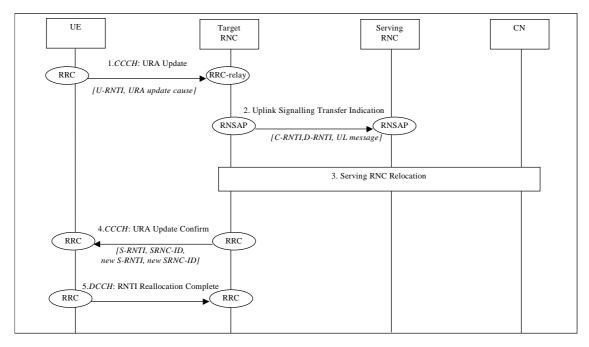


Figure 33: Inter RNS URA Update with switching in CN.

- UE sends a RRC message URA Update to the UTRAN, after having made cell re-selection. Upon reception of a CCCH message from an unknown UE, the target RNC becomes a controlling RNC and it allocates a new C-RNTI and a new D-RNTI for the UE.
- 2. The target RNC forwards the received uplink CCCH message towards the SRNC by RNSAP **Uplink Signalling Transfer Indication** message to the old Source/Controller RNC. Message includes, besides target RNC-ID, also the allocated C-RNTI, which is to be used as UE identification within the C-RNC, and the D-RNTI. Upon reception of the RNSAP message SRNC decides to perform SRNS Relocation towards the target RNC.
- Serving RNC relocation procedure is executed as defined in subclause 'SRNS Relocation (UE connected to a single CN node)'. After having completed SRNS Relocation, target RNC allocates new S-RNTI for the UE becoming the new serving RNC. New SRNC also deletes the allocated C-RNTI, since it is not needed for an UE in URA\_PCH state.
- 4. Serving RNC acknowledges the message by RRC **URA Update Confirm**, including old S-RNTI and SRNC ID as UE identifiers. Message contains also the new S-RNTI and RNC-ID.
- 5. UE acknowledges the RNTI reallocation by sending the RRC message RNTI Reallocation Confirm on DCCH.

## 7.12.2 Inter-RNS URA Update via Iur without SRNS relocation

This example shows an Inter RNS URA update in DRNS without SRNS relocation. In this example target RNS, source RNS and serving RNS are all located separately from each other. Other scenarios can be easily derived from this most comprehensive signalling procedure.

Please note that this example shows the case when no ciphering is requires; for this case no channels on Iur are required and therefore the message flow 5 (Cell Update Confirm) is sent on CCCH. In the case that ciphering is required, that message must be sent on the DCCH (ciphering is performed at MAC-d level) and the flow becomes similar to the one shown for the Cell Update in section "Cell Update via Iur without RNS relocation".

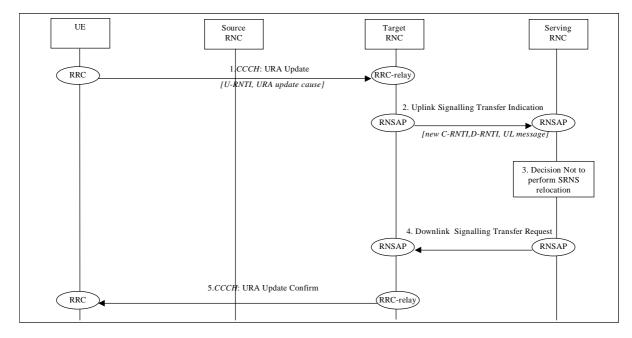


Figure 34: Inter-RNS URA Update via lur without SRNS relocation

- 1. UE sends a RRC message URA Update to the UTRAN, after having made cell re-selection and URA has changed.
- 2. Upon reception of the message from a UE, Target RNC decodes the RNC ID and the S-RNTI. The UE is not registered in the target RNC (RNC ID and SRNTI unknown), thus RNC allocates C-RNTI and D-RNTI for the UE. The Target RNC forward the received Uu signalling message towards the SRNC by RNSAP Uplink Signalling Transfer Indication message. The message includes also the cell-ID from which the message was received and the allocated C-RNTI and D-RNTI.
- 3. Upon reception of the RNSAP message SRNC decides not to perform an SRNS relocation towards the target RNC. The target RNC become C-RNC while SRNC remains unchanged.
- 4. SRNC delivers to Target RNC information upon, eventually new, RNTIs via a **Downlink Signalling Transfer Request**, transporting a URA Update Confirm.
- 5. The **URA Update Confirm** is forwarded to the UE (via CCCH with new RNTIs) from the target RNC.

### 7.12.3 SRNS Relocation (UE connected to two CN nodes)

This example show SRNS Relocation, in situation in which the UE is connected to two CN nodes simultaneously (this means that RNC is connected to a SGSN and a MSC). It is assumed that:

- all cells in the active set are in one DRNC;
- the CN performs hard switching of the user traffic.

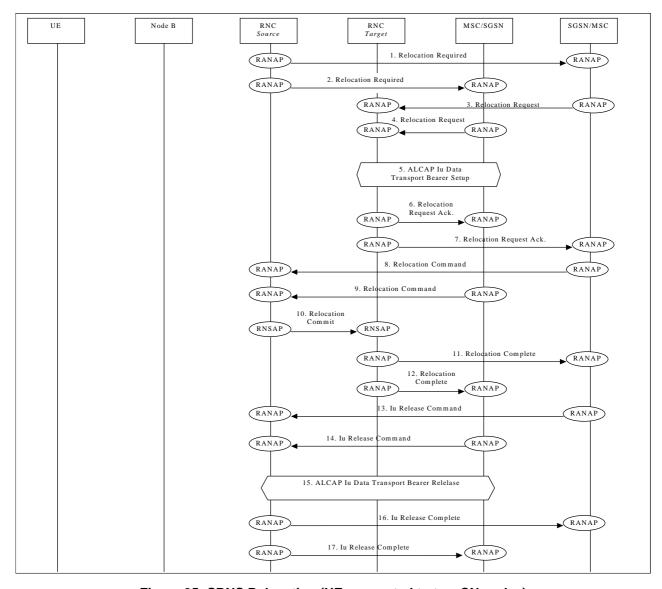


Figure 35: SRNS Relocation (UE connected to two CN nodes)

Note that the SRNC makes the decision to perform the Serving RNC relocation procedure. The Serving RNC also decides into which RNC (Target RNC) the Serving RNC functionality is to be relocated.

- 1./2. The source SRNC sends **Relocation Required** messages to both CN nodes. Parameters: target RNC identifier, Information field that the CN node(s) shall pass transparently to the target RNC. This transparent field contains the UE identifier, number of CN nodes and other data. Upon reception of **Relocation Required** message the CN element prepares itself for the switch and may also suspend user data traffic and/or signalling between UE and itself for some bearers.
- 3./4. When preparation is completed the CN node conveys a **Relocation Request** message to the target RNC. Parameters: indication of which bearers should be routed towards this CN node, transparent information field sent by the source RNC, UE identifier.

  The target RNC was the UE identifier to link the requests from multiple CN nodes to each other and to the
  - The target RNC uses the UE identifier to link the requests from multiple CN nodes to each other and to the resources (e.g. Iub links) that the UE is currently using.
- 5. The targets RNC and CN node establish the new Iu transport bearers for each Radio Access Bearer related to that CN node.
- 6./7. When the source RNC and the target RNC have completed its preparation phase, **Relocation Request Acknowledge** message is sent to CN.
- 8./9. When the CN node is ready for the SRNC move, the CN node indicates the completion of preparation phase at the CN side for the SRNS Relocation by sending the **Relocation Command** message. To the source RNC and the target RNC.
- 10. When the source RNC has received **Relocation Command** messages from all the CN nodes, the source RNC sends a **Relocation Commit** message to the target RNC. The target RNC executes both the DL and UL switch for all bearers at the earliest suitable time instance.

After the switch UL traffic from node-B's is routed via the newly established Macro Diversity Combiner to the new MAC/RLC entities and finally to the correct Iu transport bearer. UL data transmission to the old Iur transport bearer is ceased.

- DL data arriving from the new Iu link is routed to newly established RLC entities, to the MAC and to the Macro Diversity Splitter and Nodes B. The DL data received from the old Iur is discarded.
- 11./12. Immediately after a successful switch at RNC, target RNC (=SRNC) sends **Relocation Complete** messages to the involved CN nodes.
  - Upon reception of messages 9 and 10, the CN switches from the old Iu transport bearers to the new ones.
- 13./14. After a successful switch at the CN node, the CN node initiates the release of the Iu connection to the source RNC by sending the RANAP message **Iu Release Command**.
- Upon reception of the release requests from the CN nodes the old SRNC executes all necessary procedures to release all visible UTRAN resources that were related to the RRC connection in question.
- 16./17. SRNC confirm the IU release to the CN nodes sending the message Iu Release Complete.

At any phase, before the **Relocation Complete** message is sent, the old communication link between the CN and UE is all the time existing and working and the procedure execution can be stopped and original configuration easily restored. If any such abnormal thing occurs a **Relocation Failure** may be sent instead of any message numbered 3-11 described.

### 7.13 HO & Cell Reselection between UTRAN and GSM/BSS

This subclause presents some examples of handover procedure from UTRAN to GSM/BSS and vice versa.

The case of a UTRAN connected to UMTS CN connected to a 2G-MSC (i.e. via MAP/E interface) is shown. The case of an UTRAN connected a GSM CN trough an IWF (where RANAP is interworked with BSSMAP) is not shown, because is equivalent from the point of view of the UTRAN.

The case of HO between UTRAN and GPRS and viceversa are also considered.

#### 7.13.1 UTRAN ⇒ GSM/BSS

This example shows how handover (Hard Handover) is performed from UTRAN to GSM/BSS between a UMTS CN and a 2G-MSC.

NOTE: Procedures between CN and MSC, and between MSC and BSC are out of the scope of WG3, and are only included for clarity.

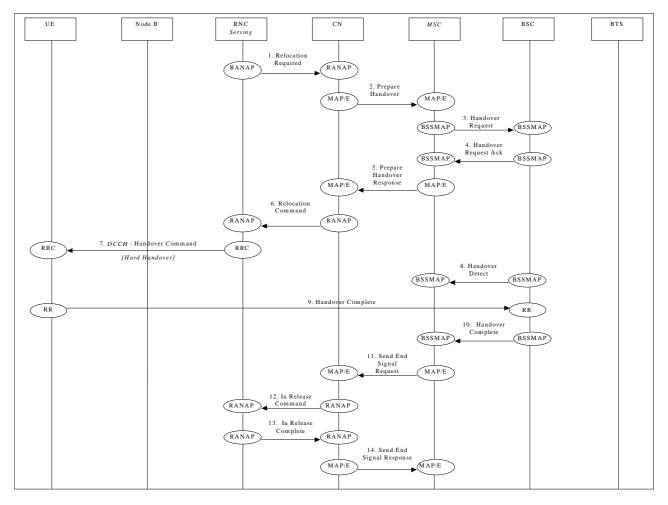


Figure 36: UTRAN ⇒ GSM/BSS handover

- 1. Upon detection of a trigger SRNC sends RANAP message Relocation Required to the CN.
- 2. The UMTS CN will forward this request to the GSM MSC (indicated in the received message) over the MAP/E interface (MAP message **Prepare Handover**).

Steps 3 & 4 follow the normal GSM procedures and are shown only for clarity.

- 5. Once initial procedures are complete in GSM MSC/BSS the MSC returns MAP/E message **Prepare Handover**.
- 6. CN responds to the initial request from SRNC by sending RANAP message **Relocation Command** to the SRNC.
- 7. Via existing RRC connection, SRNC sends RRC message Handover Command (Hard Handover) to the UE. Parameters: Handover type.

Procedures related to synchronisation etc. to GSM BSS are not shown.

Steps 8 & 10 follow normal GSM procedures and are shown only for clarity.

- 11. Detection of the UE within the GSM coverage results in the MSC sending MAP/E message **Send End Signal Request** to the CN.
- 12. CN initiates release of resources allocated by the former SRNC (Iu Release Command).
- 13. Previously allocated bearer resources are released within UMTS (e.g. using RANAP and ALCAP protocols [ALCAP not shown]) (Iu Release Complete).
- 14. Procedure is concluded from UMTS point of view by CN sending MAP/E message Send End Signal Response (this message is not sent until the end of the call).

#### 7.13.2 GSM/BSS ⇒ UTRAN

This example shows how handover (Hard Handover) is performed from GSM/BSS to UMTS between a UMTS CN and a 2G-MSC.

NOTE: Procedures between CN and MSC, and between MSC and BSC are out of the scope of WG3, and are only included for clarity.

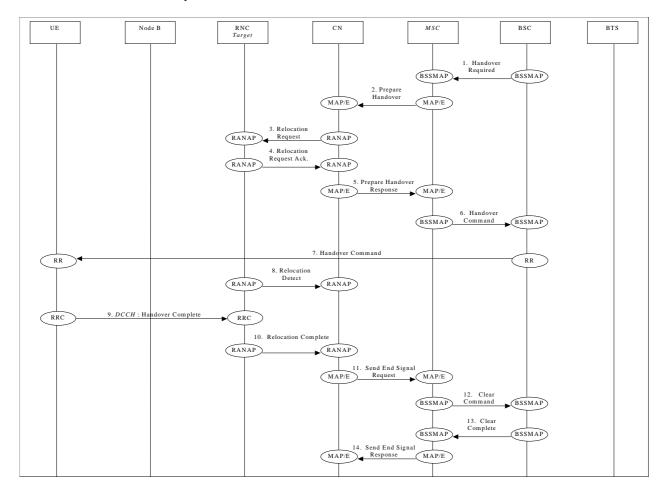


Figure 37: GSM/BSS ⇒ UTRAN handover

- 1. The BSC sends **Handover Required** message to the GSM MSC.
- 2. The MSC sends MAP/E message **Prepare Handover** to the UMTS CN.
- 3. The CN sends RANAP message **Relocation Request** to the Target RNC.
- 4. Response **Relocation Request Acknowledge** is returned to the CN by the target RNC via RANAP.
- 5. MAP/E message **Prepare Handover Response** is sent by the UMTS CN to the MSC.

Steps 6 & 7 follow normal GSM procedures and are shown only for clarity.

- 8. When target RNC has detected the UE, **Relocation Detect** message is sent to the CN node.
- 9. When the RRC connection is established with the target RNC and necessary radio resources have been allocated the UE sends RRC message **Handover complete** to the target RNC.
- 10. Once complete the target RNC sends RANAP message **Relocation Complete** to the CN.
- 11. CN sends MAP/E message Send End Signal Request to the MSC.
- 12. The MSC sends Clear Command message to the BSC.
- 13. The BSC responds with Clear Complete message to the GSM
- 15. The MSC sends MAP/E message **Send End Signal Response** to the UMTS CN to conclude the procedure (this message is not sent until the end of the call).

#### 7.13.3 GPRS ⇒ UMTS Cell Reselection

This subclause shows UTRAN signalling procedures for GPRS to UTRAN Cell Reselection.

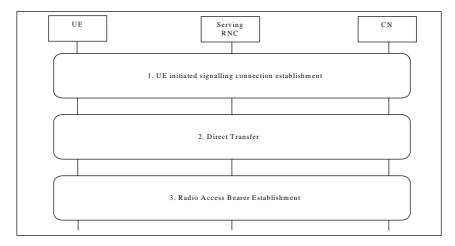


Figure 38

- 1. The UE selects a UTRAN cell, reads system information, and initiates establishment of a NAS signalling connection.
  - See section UE Initiated Signalling Connection Establishment.
- 2. The NAS signalling connection between UE and CN can now be used for NAS message transfer (e.g. execution of security functions).
  - See section Direct Transfer.
- 3. After necessary CN-GPRS preparations (e.g. UE context information retrieval), CN initiates establishment of radio access bearer(s).
  - See section Radio Access Bearer Establishment.

#### 7.13.4 UMTS ⇒ GPRS Cell Reselection, UE Initiated

This subclause shows UTRAN signalling procedures for UTRAN to GPRS cell reselection initiated by UE..

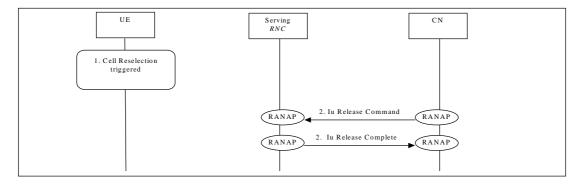


Figure: 39

- 1. The UE selects a GPRS cell, reads system information, and initiates establishment of UE-GPRS connection.
- 2. After necessary CN-GPRS preparations (e.g. UE context information retrieval), CN initiates release of Iu connection. SRNC releases the RRC connection.

#### 7.13.5 UMTS ⇒ GPRS Cell Reselection, Network Initiated

This subclause shows UTRAN signalling procedures for UTRAN to GPRS Cell Reselection triggered by Serving RNC.

Note: This case can only supported if the RNC could generate GSM messages.

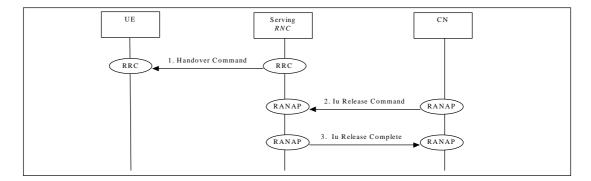


Figure: 40

- 1. Based on UE measurements, SRNC triggers the handover to a GPRS cell by sending a Handover Command to the UE. UE initiates establishment of UE-GPRS connection.
- After necessary CN-GPRS preparations (e.g. UE context information retrieval), CN initiates release of the RRC connection.
- 3. SRNC releases all resources reserved for the UE.

## 7.14 Transport Channel Reconfiguration(DCH to DCH)

## 7.14.1 Synchronised Transport Channel Reconfiguration

The procedure can be applied when the reconfiguration time requires being synchronised among Node-Bs, SRNC and LIE

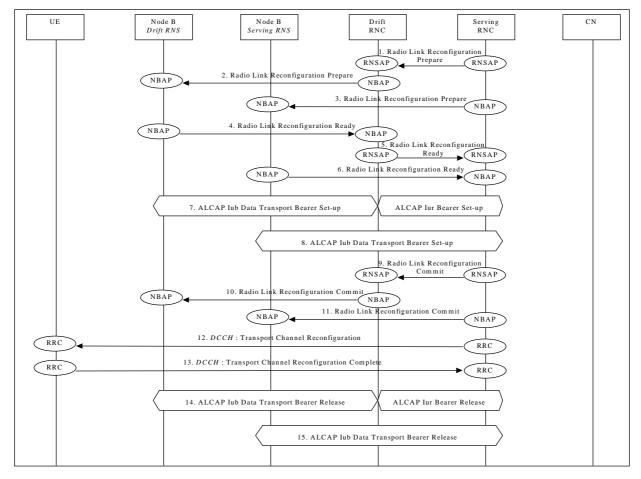


Figure 41: Synchronised Transport Channel Reconfiguration

- SRNC decided that there is a need for a synchronous Transport Channel Reconfiguration and requests DRNC to prepare reconfiguration of DCH Radio Link Reconfiguration Prepare).
   Parameters: Transport Format Set, Transport Format Combination Set, Power control information, Time Slots (TDD only), User Codes (TDD only).
- DRNC requests its Node B to prepare reconfiguration of DCH to carry the radio access bearer (Radio Link Reconfiguration Prepare).
  - Parameters: Transport Format Set, Transport Format Combination Set, Power control information Time Slots (TDD only), User Codes (TDD only).
- 3. SRNC requests its Node B to prepare reconfiguration of DCH (**Radio Link Reconfiguration Prepare**). Parameters: Transport Format Set, Transport Format Combination Set, Power control information, Time Slots (TDD only), User Codes (TDD only).
- 4. Node B allocates resources and notifies DRNC that the reconfiguration is ready (Radio Link Reconfiguration Ready).
  - Parameters: Transport layer addressing information (AAL2 address, AAL2 Binding Id) for Iub Data Transport Bearer.
- 5. DRNC notifies SRNC that the reconfiguration is ready (**Radio Link Reconfiguration Ready**). Parameters: Transport layer addressing information (AAL2 address, AAL2 Binding Id) for Iur Data Transport Bearer
- 6. Node B allocates resources and notifies SRNC that the reconfiguration is ready (Radio Link Reconfiguration Ready).
  - Parameters: Transport layer addressing information (AAL2 address, AAL2 Binding Id) for Iub Data Transport Bearer
- 7. SRNC initiates (if needed) establishment of new Iur/Iub Data Transport Bearers using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iur/Iub Data Transport Bearer to DCH.
- 8. SRNC initiates (if needed) establishment of new Iub Data Transport Bearers using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iub Data Transport Bearer to DCH.
- 9. RNSAP message Radio Link Reconfiguration Commit is sent from SRNC to DRNC.

Parameters: CFN.

10. NBAP message Radio Link Reconfiguration Commit is sent from DRNC to Node B.

Parameters: CFN.

11. NBAP message Radio Link Reconfiguration Commit is sent from SRNC to Node B.

Parameters: CFN.

- 12. RRC message **Transport Channel Reconfiguration** is sent by SRNC to UE.
- 13. UE sends RRC message Transport Channel Reconfiguration Complete to SRNC.
- 14. Not used resources in-DRNC and Node B (Drift RNS) are released. DRNC initiates release of Iur and Iub (Drift RNS) Data Transport bearer using ALCAP protocol.
- 15. Not used resources in SRNC and Node B (Serving RNS) are released. SRNC initiates release of Iub (Serving RNS) Data Transport bearer using ALCAP protocol.

## 7.14.1 Unsynchronised Transport Channel Reconfiguration

The procedure can be applied when the reconfiguration time does not require being synchronised among Node-Bs, SRNC and UE.

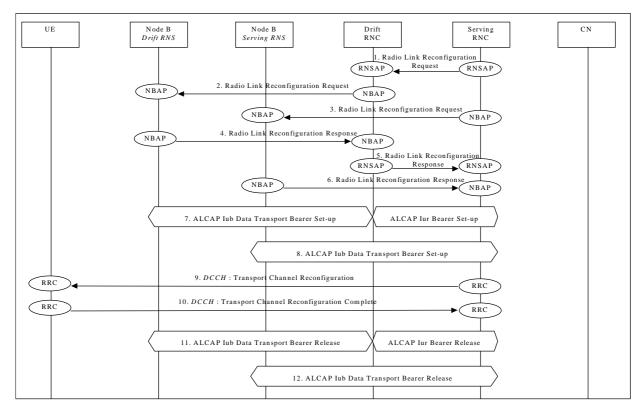


Figure 42: Unsynchronised Transport Channel Reconfiguration

- 1. SRNC decided that there are no need for a synchronised Transport Channel Reconfiguration, and requests DRNC to reconfigure the DCH. It includes in the message **Radio Link Reconfiguration Request** that the modification shall be done immediately without waiting for the commit message.
  - Parameters: Transport Format Set, Transport Format Combination Set, Power control information, Time Slots (TDD only), User Codes (TDD only).
- 2. DRNC requests its Node B to reconfigure the DCH in the existing Radio Link (Radio Link Reconfiguration Request).
  - Parameters: Transport Format Set, Transport Format Combination Set, Power control information, Time Slots (TDD only), User Codes (TDD only).
- 3. SRNC requests its Node B to reconfigure the DCH in the existing Radio Link (Radio Link Reconfiguration Request).
  - Parameters: Transport Format Set, Transport Format Combination Set, Power control information, Time Slots (TDD only), User Codes (TDD only).
- 4. Node B of the DRNC allocates resources and notifies DRNC that the reconfiguration is done (**Radio Link Reconfiguration Response**).
  - Parameters: Transport layer addressing information (AAL2 address, AAL2 Binding Id) for Iub Data Transport Bearer.
- DRNC notifies SRNC that the reconfiguration is done (Radio Link Reconfiguration Response).
   Parameters: Transport layer addressing information (AAL2 address, AAL2 Binding Id) for Iur Data Transport Bearer.
- 6. Node B of the SRNC allocates resources and notifies DRNC that the reconfiguration is done (Radio Link Reconfiguration Response).
  - Parameters: Transport layer addressing information (AAL2 address, AAL2 Binding Id) for Iub Data Transport Bearer.
- 7. SRNC initiates (if needed) establishment of new Iur/Iub Data Transport Bearers using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iur/Iub Data Transport Bearer to DCH.
- 8. SRNC initiates (if needed) establishment of new Iub Data Transport Bearers using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iub Data Transport Bearer to DCH.
- 9. RRC message **Transport Channel Reconfiguration** is sent by SRNC to UE.
- 10. UE sends RRC message **Transport Channel Reconfiguration Complete** to SRNC.
- 11. Not used resources in-DRNC and Node B (Drift RNS) are released. DRNC initiates release of Iur and Iub (Drift RNS) Data Transport bearer using ALCAP protocol
- 12. Not used resources in SRNC and Node B (Serving RNS) are released. SRNC initiates release of Iub (Serving RNS) Data Transport bearer using ALCAP protocol.

## 7.15 Direct Transfer

## 7.15.1 Uplink Direct Transfer

This example applies to the transportation of a NAS message through UTRAN. This flow applies when the terminal is in connected mode.

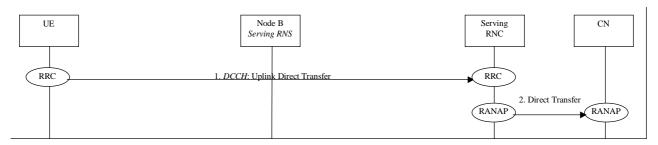


Figure 43: Uplink Direct Transfer

1. UE sends RRC **Uplink Direct Transfer Message** to SRNC.

Parameters: NAS Message.

2. SRNC sends the RANAP message **Direct Transfer** to the CN.

Parameters: NAS PDU.

The NAS message is transported transparently by the UTRAN.

#### 7.15.2 Downlink Direct Transfer

This example applies to the transportation of a NAS message through UTRAN.

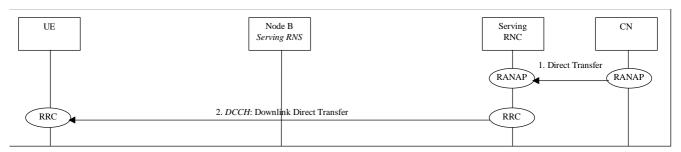



Figure 44: Downlink Direct Transfer

1. CN sends the RANAP message **Direct Transfer** to the SRNC. Parameters: NAS PDU, CN domain Identity.

SRNC sends RRC Downlink Direct Transfer Message to UE. Parameters: NAS Message.

The NAS message is transported transparently by the UTRAN.

## 7.16 Downlink Power Control [FDD]

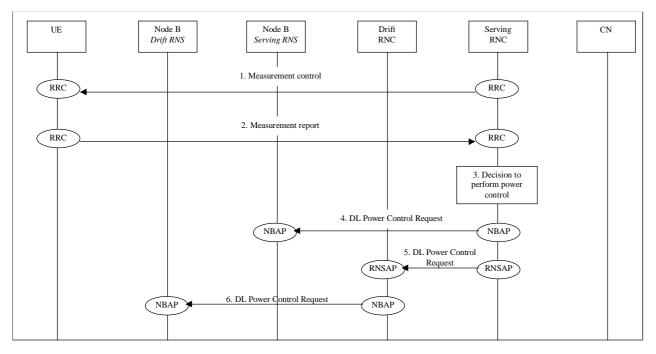


**Figure 45: Downlink Power Control** 

- SRNC send to UE a RRC Measurement Control message to setup a quality measure.
   Parameters: Measurement ID number, Measurement type, Measurement command; This message is optional in the described flow.
- 2. UE after having performed the measure, send towards CRNC the report in Measurement Report.
- 3. CRNC decides to request NodeBs lower level (L1) to change power in DL
- 4. SRNC sends the NBAP message **DL Power Control Request** to the controlled Node B Parameters: RL ID, RL Reference power, Max Adjustment Step, Adjustment Period, Adjustment Ratio.
- 5. SRNC sends the RNSAP message **DL Power Control Request** to the DRNC Parameters: RL ID, RL Reference power, Max Adjustment Step, Adjustment Period, Adjustment Ratio.
- 6. DRNC sends the NBAP message **DL Power Control Request** to the controlled Node B Parameters: RL ID, RL Reference power, Max Adjustment Step, Adjustment Period, Adjustment Ratio.

## 7.17 USCH/DSCH Configuration and Capacity Allocation [TDD]

This subclause shows an example of USCH/DSCH configuration and capacity allocation.

It is assumed that no RL has been already established for the considered RRC connection on the serving cell (i.e. the UE is in cell\_FACH state without USCH/DSCH) and that only standalone USCH/DSCH are going to be configured. In case the UE is in cell\_DCH state or in cell\_FACH state with USCH/DSCH, the Radio Link Reconfiguration procedure is used in steps 1-4-5-6 instead of the Radio Link Setup procedure.

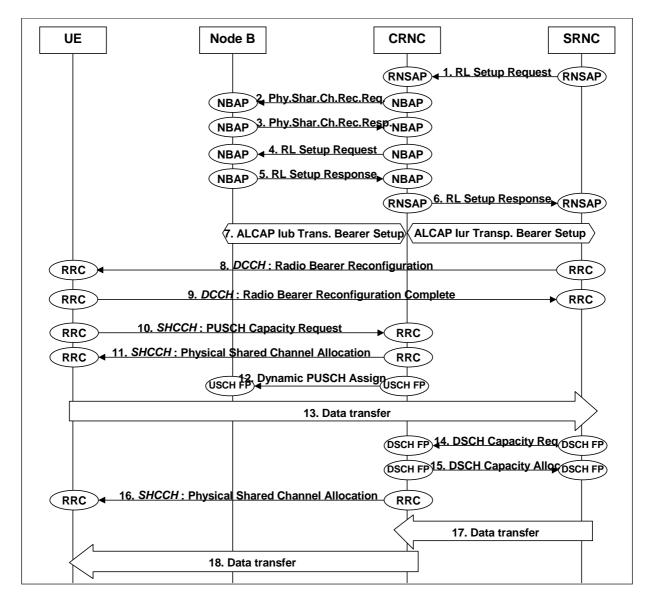

#### **USCH/DSCH Configuration and Capacity Allocation**

- 1. In case no RL has already been established on the RNC controlling the serving cell, the SRNC sends a Radio Link Setup Request message to the target RNC.
  - Parameters: target RNC identifier, s-RNTI, Cell id, Transport Format Set (for DSCHs and USCHs), Transport Format Combination Set.
- 2. If necessary, the CRNC sends to the Node B a Physical Shared Channel Reconfiguration Request message in order to add, modify or delete any PDSCH Sets and PUSCH Sets in the Common Transport Channel data base. Parameters: PDSCH Info (to add, modify or delete), PUSCH Info (to add, modify or delete).
- 3. The Node B updates the PDSCH and PUSCH Sets in the Common Transport Channel data base and makes them available to all the current and future DSCH and USCH transport channels. Then it responds with Physical Shared Channel Reconfiguration Response message.
- 4. The RNC sends the NBAP message Radio Link Setup Request to the target Node-B. Parameters: Cell id, Transport Format Set (for DSCHs and USCHs), Transport Format Combination Set, Power control information, etc.
- 5. Node B configures resources for USCHs and DSCHs and responds with NBAP message Radio Link Setup Response.
  - Parameters: Signaling link termination, Transport layer addressing information for the Iub Data Transport Bearer.
- 6. When the Target RNC has completed preparation phase, Radio Link Setup Response is sent to the SRNC.
- 7. Target RNC initiates set-up of Iub Data Transport bearer using ALCAP protocol while the SRNC initiates set-up of Iur Data Transport bearer. These requests contain the AAL2 Binding Identity to bind the Iub/Iur Data Transport Bearers to the DSCHs/USCHs. The request for set-up of Iub Data Transport bearer is acknowledged by Node B, while the request for set-up of Iur Data Transport bearer is acknowledged by Target RNC.

- 8. The SRNC sends a Radio Bearer Reconfiguration message to establish the requested USCHs and DSCHs. Parameters: Radio Bearer information.
- 9. The UE replies with a Radio Bearer Reconfiguration Complete message.
- 10. As soon as the RRC in the UE detects the necessity to sends UL data on one USCH, it sends a PUSCH Capacity Request message to obtain allocation of PUSCH resources from the CRNC.
  - Parameters: C-RNTI, Radio Bearer ID, RLC buffer info.
- 11. The CRNC determines which PUSCH Set to allocate to the USCH and sends a Physical Shared Channel Allocation message to the UE.
  - Parameters: C-RNTI, Allocation Period info (Activation CFN, Duration), PUSCH info.
- 12. The CRNC signals the allocation of PUSCH resources for a given UE to the Node B by means of a Dynamic PUSCH Assignment control frame.
  - Parameters: PUSCH Set Id, Activation CFN, Duration.
- 13. At the scheduled CFN the UE may start transmitting UL data on the USCH for the assigned allocation period. UL data are forwarded by the CRNC to the SRNC.
- 14. As soon as the SRNC detects the necessity to sends DL data on one DSCH, it sends a DSCH Capacity Request control frame to the CRNC.
  - Parameters: Common Transport Channel Priority Indicator, User buffer size.
- 15. The CRNC determines the amount of data (credits) that can be transmitted on the DSCH and reports this information back to the SRNC by means of DSCH Capacity Allocation message.
  - Parameters: Common Transport Channel Priority Indicator, Max MACc-sh SDU Length, Credits, Interval, Repetition Period.
- 16. The CRNC determines which PDSCH Set to allocate to the DSCH and sends a Physical Shared Channel Allocation message to the UE.
  - Parameters: C-RNTI, Allocation Period info (Activation CFN, Duration), PDSCH info.
- 17. The SRNC starts sending DL data to the CRNC.
- 18. The CRNC schedules the DL transmission of DL data on DSCH according to the allocation of PDSCH resources.

## Annex A: Change history

Document history		
Date	Version	Comment
26 May 2000	1.3.1	<ul> <li>For e-mail approval, comments due by 8<sup>th</sup> of June.</li> <li>Editorial corrections,</li> <li>Editorial enhancement: DCH-FP introduced in the empty bubbles</li> </ul>
		for synchronisation in several scenario, section on DCH-FP messages added.
26 May 2000	1.3.0	Same as 1.2.11, revision mark approved.
24 May 2000	1.2.11	this version approves the revision marks of 1.2.11. revision marks take care of the comments received during the RAN #13 meeting (May 2000, Honolulu).
		Major changes are listed below:
		• Revision of scenarios in sections 7.11.2 and 7.12 Cell Update and Ura Update.
		Addition of relevant parameters to scenario 7.16, Downlink Power Control [FDD]
		Addition of scenario 7.17 USCH/DSCH Configuration and Capacity Allocation [TDD]
18 May 2000	1.2.10	This version is presented at RAN #13 (May 2000, Honolulu) for discussion and approval. Changes respect to 1.2.9 are listed below:
		Major changes in URA update (section 7.12):
		<ul> <li>Inter-RNS URA Update via Iur without SRNS relocation: was reviewed and expanded.</li> </ul>
		Major changes in Transport channel Reconfiguration:
		• Placeholders 7.14.2, 7.14.2, 7.14.3 were removed. The cases are not so relevant respect to the other represented.
		Major changes in Downlink Power Control subsection:
		Added RRC messages which cause power control; the example is valid for FDD only.

	Document history		
Date	Version	Comment	
10 May 2000	1.2.9	<ul> <li>Working version with major changes listed below:</li> <li>section on BMC protocol messages added (4.8).</li> <li>Replacement of Cell Broadcasting section with "CN Information Broadcasting" using BMC instead of RRC (section 6.2).</li> <li>Major changes in Forward Hard Handover (section 7.11.2): <ul> <li>Cell Update with SRNS relocation: reviewed, kernel unchanged</li> <li>Cell Update via Iur without SRNS relocation: reviewed, added details regarding SRNS relocation</li> <li>Cell Update via Iur without SRNS relocation (with C-RNTI reallocation): sketched a brief description instead of full Message Sequence Chart because the difference with the previous sublcasue are too little.</li> </ul> </li> <li>Minor changes in URA update (section 7.12): <ul> <li>Inter-RNS URA Update with SRNS Relocation: reviewing of the picture with minor changes</li> </ul> </li> </ul>	
26 April 2000	1.2.8	Working version with editorial enhancement and corrections	
26 April 2000	1.2.7	Output from RAN 3 Meeting #12, approved by e-mail (same as version 1.2.6, revision mark accepted)	
12 April 2000	1.2.6	<ul> <li>The document was editorially enhanced, the modification are shown with revision marks in the document.</li> <li>Major changes are listed below:</li> <li>Figure 1 and 2 in section 4.1 were removed (Protocol stacks), Reference to 25.301 and 25.401 were left as reference. References to the figures in the text were removed.</li> <li>Messages names were aligned to the latest specs status</li> <li>The obsolete parameters information DL channelisation Code, NAS Binding information and Mode=Unsynchronised were removed</li> <li>Placeholders for section 7.5.2, 7.7.3, 7.8,7.8.3,7.8.4 were removed (substantially no additional information respect to other scenario)</li> <li>New section 7.12.2.4 was introduced dealing with "Cell Update via Iur with USCH/DSCH, without SRNS relocation"</li> <li>In section 7.5.5.1 "RRC connection Re-establishment (Anchor approach) – DCH Re-establishment" the sequence of messages was re-arranged to not release the old resources before the confirmation of the successful establishment of the new ones.</li> </ul>	

Document history		
Date	Version	Comment
5 April 2000	1.2.5	Note: modification are based on the editorially aligned version 1.2.4 made by ETSI staff in terms of styles and numbering of paragraphs
		Major changes are listed below:
		The protocol name on the Iu in the figure 6.2 was corrected to SABP
		Section 7.8 was removed due to the following considerations
		• First, it does not exist an explicit "RAB reestablishment or reassignment procedure" but a RAB assignment procedure is used instead
		• Second, even if we would describe that, is not relevant because it's possible to view this procedure as RAB assignment (see 7.6) plus RRC establishment (see 9.5) and Radio Bearer establishment
		Section 7.9 was renumbered 7.8 and the title of the sub-sections was modified
		Content for section 7.8.1 was introduced as "DCCH on DCH synchronised"
		Content for section 7.8.2 was introduced as "DCCH on RACH/FACH"
10 March 2000	1.2.4	Same as 1.2.3 with revision marks accepted. Presented to RAN for information

Document history		
Date	Version	Comment
27 February 2000	1.2.3	The revision marks are reflecting the changes respect to version 1.2.2. Almost all the examples were updated in order to be aligned to the December 99 release of UMTS.
		Most of non updated procedures were removed remaining only the placeholders.
		Major changes are listed below:
		• subclause 6.2: text aligned to the current status
		• subclause 6.3: text aligned to the current status
		• subclause 6.4: text aligned to the current status
		• subclause 6.6: text aligned to the current status
		• new subclause 6.3 include for SABP
		• subclause 8.1: text and new figure were provided
		• subclause 8.2: text and figure were provided
		• subclause 9.1 was aligned to the present status of specification
		• subclause 9.2.2 was removed
		• subclause 9.2.1 was promoted as subclause 9.2 and aligned to the December 99 release
		• subclause 9.4.1: text was provided
		• subclause 9.6.2: figure and text were aligned to the December 99 release
		• subclause 9.6.3: text and new figure were provided
		• subclause 9.6.4: text and new figure were provided
		• subclause 9.7.1: figure and text were aligned to the December 99 release
		• subclause 9.7.4: text and new figure were provided
		• subclause 9.13.1.1 was removed (non significant respect to 9.13.1.3 and 9.13.1.4)
		• subclause 9.13.1.2 was removed (non significant respect to 9.13.1.3 and 9.13.1.4)
		• subclause 9.13.1.3: updated text and updated figure were provided, including unsuccessfull case
		• subclause 9.13.1.4: updated text and updated figure were provided to align it to December 99 release
		subclause 9.13.2.1: updated text and figure to add RNTI reallocation Complete message
		• subclause 9.13.2.2: updated text and figure to add RNTI reallocation Complete message

Document history		
Date	Version	Comment
27 February 2000		subclause 9.14.1: updated text and figure to add RNTI reallocation Complete message
		• subclause 9.14.3: updated text and figure to add Iu Release Complete message
		• subclause 9.16 was removed (no more applicable)
		• subclause 9.17 was removed (no more applicable)
		• subclause 9.18.1.1: updated text and updated figure were provided to align it to December 99 release
		• subclause 9.18.1.1: updated text and updated figure were provided to align it to December 99 release
		• subclause 9.19 was removed (no more applicable)
		• subclause 9.20 was removed (no more applicable)
		• subclause 9.21.1: text and new figure were provided
		• subclause 9.21.2: text and new figure were provided
		• subclause 9.22: initial text provided
		• subclause 9.23 was removed (not included in release 99)
10 October 1999	1.2.2	The revision marks are reflecting the changes decided at the Sophia meetings (August 99 and October 99) in addition to the one agreed at Helsinki meeting (July 99):
		New subclause 9.23 TDD Inter Node B synchronisation procedure was added.
5 September 1999	1.2.1	The revision marks are reflecting the changes decided at the Sophia meeting (August 99) in addition to the one agreed at Helsinki meeting (July 99):
		• New subclause 9.13.2.3Cell Update via Iur without SRNS relocation (with C-RNTI reallocation) was added.

Document history		
Date	Version	Comment
3 August 1999	1.2.0	Revisions accepted respect to version version 1.1.2
		Some strictly editorial updates are not shown as revision marks (style alignement, inclusion of pictures in frames,etc)
		The revision marks are reflecting the additional changes decided at the Helsinki meeting (July 99):
		The subclause 9.5.1 was renumbered 9.5.1.1     A new subclause 9.5.1.2 RRC Connection Re-establishment with SRNC Relocation - DCH Re-establishment was added based on update contribution 696
		Content for new subclause 9.10.1 Physical Channel Reconfiguration (DCH) was included based on update contribution 692
		Content for new subclause 9.10.2 Reconfiguration (CRNC Controlled) was included based on updated contribution 693
		• 9.13.2.2 Cell Update via Iur without SRNS relocation was updated based on updated contribution 734
		The procedure shown in subclause 9.18.1 was updated and moved in new subsubclause 9.18.1.1 Synchronised Transport Channel Reconfiguration based on update contribution 694
		New subclause 9.18.1.2 Unsynchronised Transport Channel Reconfiguration was included based on update contribution 695
22 june 1999	1.1.2	same as 1.1.1, version presented at the Helsinki meeting (july 99)
13 june 1999	1.1.1	the same as 1.1.0, version presented at TSG RAN
2 June 1999	1.1.0	revisions accepted respect to version version 1.0.2
		The revision marks are reflecting the additional changes decided at the Warwick meeting
30 May 1999	1.0.2	This version presents some editorial updated and some proposals to cope with the decision taken at the last meeting (kawasaki, April 99).
		Major changes are derscribed in the following list:
		Updated figure for the protocol stack subclause 6.1
		• Updated message list for subclause 6.2
		Modified figure and text in sections in order to allign it to the RANAP unified HO and SRNS relocation procedures agreeded at the Kawasaki meeting (april 99)     9.13.1.3 Hard HO with switching in the CN     9.14.3 SRNS Relocation     9.15.1 UTRAN => GSM/BSS HO     9.15.2 GSM/BSS => UTRAN HO

Document history		
Date	Version	Comment
24 May 1999	1.0.1	This version includes the modification agreed at the TSG-RAN WG3 #3 in Kawasaki (Apr 99).
		The following three changes are not introduced, they will be presnted as editor proposals:
		• A new section for Q.AAL example into a new subclause 6.4.
		A new figure in the protocol stack subclause 6.1
		The name of the messages for HO should be modified in order to cope with the unified procedures decided at the last eeting
		Major introduced changes are listed below (number referred to old numbering)
		• Q.aal2 flows were removed and the ALCAP boxes were put again in scenario 9.4.1
		• Subclause 6.6 and 6.7 were removed due to the fact that these subclauses are only related to WG2 issues.
		ommon channel and CCH were replaced with common transport channel and FACH/RACH
		The term SRNC Relocation was replaced SRNS Relocation
		Subclause 9.3.2 and 9.11.2 were replaced by a reference to the proper WG2 documents, due to the fact that these subclauses are only related to WG2 issues (Correct reference to be filled)
		• The subclause 9.13 was restructured and renamed (bawckward HO) and merged with 9.14 (cell update is forward HO).
		Subclause 9.14.2 was replaced with the content od Tdoc 355 from Nokia, updated accordly with the modification decided at the meeting
		Subclause 9.17 was restructure and new section for HO between UMTS and GPRS were introduced
		Subclause 9.25 was removed (inband mechnism, example not needed)
		A temporary annex was added to summarize the status of the reccomandation.
April 99	1.0.0	Agreeded at TSG RAN April 99 and promoted to version 1.0.0 (the same as 0.1.0
April 16 <sup>th</sup> 1999	0.1.0	Same as version 0.0.5, revision marks accepted
		This version was sent to TSG RAN April 1999 meeting for approval

Document history		
Date	Version	Comment
April 16 <sup>th</sup> 1999	0.0.5	This version contains mainly editorial enhancements. Major changes are listed below  • Subclause 6.1 SRNC Relocation Commit message was added  • Subclause 9.17.2 Release Complete message was added  • Subclause 9.2.1 Link Establishment and Link Establishment Acknowledge messages were added
April 6 <sup>tth</sup> 1999	0.0.4	<ul> <li>This version contains mainly editorial enhancements. Major changes are listed below:</li> <li>subclause 7.1 and 7.2 were promoted to clauses 8 and 9 in order to limit the deep in the subclause numbering; subsection were promoted accordingly</li> <li>Figure numberig was incomplete and also produces unclear revision marks due to a bug of word; Only the numbering of the first figures was left</li> <li>Styles were aligned to make the document consistant</li> <li>Hard Handover Proceeding 2 message was removed for alignement with RNSAP procedures (subclause 9.17.4)</li> </ul>
April 6 <sup>tth</sup> 1999	0.0.3	This version includes also the modification agreed at the TSG-RAN WG3 march 1999 meeting. Major changes summary follows:  • subclause 7.2.13.2.1 (Inter-RNS hard HO with switching in the CN-single CN) was removed  • subclause 7.2.14.2 (Inter-RNS cell Update via Iur) was added  • subclause 7.2.15.2.1 (Inter-RNS URA Update via Iur) was added  • subclause 7.2.13.2 (Inter-RNS Hard HO via Iur) was re-integrated and filled with new contributions
March 1 <sup>st</sup> 1999	0.0.2	The correct first pages common for 3GPP were introduced (first page, copyright, etc)  Revision marks are referred to the modification introduced to the document AFTER the TSG-RAN WG3 first meeting – Bon February 99, based on the minor comments received in line with the decision of the previous meeting, (i.e. comments to the first draft merged version are identified)  In this version the revision mark referred to version 0.0.0 were accepted

Document history		
Date	Version	Comment
February 15 <sup>th</sup> 1999	0.0.1	This version includes also the modification agreed at the TSG-RAN WG3 first meeting based on new contributions  Notes  The general information dealing with references and copyrights are not updated to the 3GPP ones (To be introduced when available)
		<ul> <li>The graphical look of the parts included from the TTC/ARIB document still to be aligned by the editor to the rest of the document (the content is supposed to be aligned)</li> </ul>
February 4 <sup>th</sup> 1999	0.0.0	First draft version based on merge of the corresponding ETSI and TTC/ARIB document as agreed at the TSG-RAN WG3 first meeting — Bon February 99. (Revision marks are referred to the ETSI one).  This version includes also the modification agreed at the TSG-RAN WG3 first meeting based on new contributions (except document 54 and 55, from which is expected an electronic version with the agreed modifications from the authors)  Notes  The general information dealing with references and copyrights are not updated to the 3GPP ones (To be introduced when available)  Alignment of names of messages respect to the Iur and Iub ETSI/ARIB merged interfaces is not complete. (To be introduced/checked later when the correspondent documents will be available in order to limit misalignment)  The graphical look of the parts included from the TTC/ARIB document still to be aligned by the editor to the rest of the document (the content is supposed to be aligned)

Editor for 25.931 is:

Enrico Scarrone CSELT

Tel.: +39 011 228 7084 Fax: +39 011 228 5520

Email: Enrico.Scarrone@cselt.it

This document is written in Microsoft Word version 97.