TSGS#22(03)0660

Technical Specification Group Services and System Aspects Meeting #22, Maui, Hawaii, USA, 15-18 December 2003

Source: TSG SA WG2

Title: CRs on 23.246 (MBMS Stage 2)

Agenda Item: 7.2.3

The following Change Requests (CRs) have been approved by TSG SA WG2 and are requested to be approved by TSG SA plenary #22. Note: the source of all these CRs is now S2, even if the name of the originating company(ies) is still reflected on the cover page of all the attached CRs.

Title	Spec	CR#	cat	Versio	REL	WI	S2	Clauses affected
	23.246	001r5	C	6.0.0	6	MBMS	S2-36	6.2, 6.3.1
	23.246	002r4	C	6.0.0	6	MBMS	S2-36	8.1, 8.1.1 (new), 8.1.2 (new)
	22.245	002.4				1 (5) (6	G2 2 5	
	23.246	003r4	C	6.0.0	6	MBMS	\$2-36	8.2, 8.3, 8.5, 8.14
	22.246	007=4	C	600	6	MDMC	52.26	6.1
	23.240	00/14	C	6.0.0	0	MBMS	32-30	0.1
	23 246	008r1	С	600	6	MRMS	\$2-36	6.4
	23.240	00011	C	0.0.0	U	MIDIVIS	52-30	0.4
* *	23.246	015r3	В	6.0.0	6	MBMS	S2-36	7
	23.246	016r2	В	6.0.0	6	MBMS	S2-36	8.3
	22.245	020.2	_			1 (D) (G	G2 2 5	0.4
	23.246	020r2	F	6.0.0	6	MBMS	S2-36	8.4
	22.246	0211	Е	600	-	MDMC	G2 26	0.0.00
	23.246	021r1	F	6.0.0	6	MBMS	\$2-36	8.8, 8.9
1	22 246	022-2	D	600	6	MDMC	52.26	6.2, 8.2
	25.240	02212	Ь	0.0.0	O	MDMS	32-30	0.2, 8.2
	23 246	023r1	F	600	6	MRMS	\$2-36	all
	23.270	02311	1	0.0.0		141101410	52-30	un
	23.246	026r2	F	6.0.0	6	MBMS	S2-36	8.7
	22.210	02012	_	0.0.0		1.121/16	== ==	
<u>C</u>	23.246	027r2	В	6.0.0	6	MBMS	S2-36	6.1, new 8.15 and new 8.16
Procedure								,
	Inclusion of GERAN attributes and parameters in MBMS Inclusion of GERAN functionality in MBMS Notification procedure and session ID Inclusion of GERAN functionality in MBMS procedures Clarification of MBMS UE Context plus GERAN functionality Apply TMGI for Broadcast Service MBMS point to point repair/charging/decrypt service Optional provision of duration of the session Corrections for TMGI, linked NSAPI and service ID Removal of superfluous procedures Verification of UE bearer capabilities Various corrections and clarifications Clarification on MBMS deactivation figure MBMS Service Request	Inclusion of GERAN attributes and parameters in MBMS Inclusion of GERAN Inclusion of MBMS IE Context plus GERAN Inclusion of MBMS UE Context plus GERAN Inclusion of MBMS UE Inclusion of MBMS UE Inclusion of MBMS UE Inclusion of MBMS Inc	Inclusion of GERAN attributes and parameters in MBMS Inclusion of GERAN Inclusion of MBMS IE Context plus GERAN Inclusion of MBMS UE Inclusion of MBMS UE Inclusion of MBMS Inclusion of GERAN Inclusion of GERAN Inclusion of MBMS IE Inclusion of GERAN Inclusion of GERAN Inclusion of MBMS IE Inclusion of GERAN Inclusion of GERAN Inclusion of MBMS Inclusion of GERAN Inclusion of MBMS Inclusion of GERAN Inclusion of GERAN Inclusion of MBMS Inclusion of GERAN Inclusion of MBMS Inclusion of GERAN Inclusion of MBMS Inclusion of GERAN Inclusion of	Inclusion of GERAN attributes and parameters in MBMS Inclusion of GERAN Inclusion of MBMS UE Inclusion of Washing US Inclusion of MBMS UE Inclusion of Washing US Inclusion of MBMS UE Inclusion of Washing US Inclusion of Washin	Inclusion of GERAN attributes and parameters in MBMS Inclusion of GERAN Inclusion of MBMS IDE Inclusion of MBMS Inclusion of GERAN Inclusion of MBMS Inclusion of GERAN Inclusion of MBMS Inclusion of GERAN Inclusion of MBMS Inclusion of	No. Inclusion of GERAN attributes and parameters in MBMS 23.246 001r5 C 6.0.0 6	Inclusion of GERAN attributes 23.246 001r5 C 6.0.0 6 MBMS Inclusion of GERAN 23.246 002r4 C 6.0.0 6 MBMS Inclusion of GERAN 23.246 002r4 C 6.0.0 6 MBMS Inclusion of GERAN 23.246 003r4 C 6.0.0 6 MBMS Inclusion of GERAN 23.246 003r4 C 6.0.0 6 MBMS Inclusion of GERAN 23.246 003r4 C 6.0.0 6 MBMS Inclusion of GERAN 23.246 003r4 C 6.0.0 6 MBMS Inclusion of MBMS UE 23.246 007r4 C 6.0.0 6 MBMS Inclusion of GERAN 23.246 008r1 C 6.0.0 6 MBMS Inclusion of GERAN 23.246 008r1 C 6.0.0 6 MBMS Inclusion of GERAN 23.246 008r1 C 6.0.0 6 MBMS Inclusion of MBMS UE 23.246 015r3 B 6.0.0 6 MBMS Inclusion of MBMS 23.246 020r2 F 6.0.0 6 MBMS Inclusion of MBMS 23.246 021r1 F 6.0.0 6 MBMS Inclusion of MBMS 23.246 021r1 F 6.0.0 6 MBMS Inclusion of MBMS 23.246 023r1 F 6.0.0 6 MBMS Inclusion of MBMS 23.246 026r2 F 6.0.0 6 MBMS Inclusion of MBMS 23.246 026r2 F 6.0.0 6 MBMS Inclusion of MBMS 23.246 026r2 F 6.0.0 6 MBMS Inclusion of MBMS 23.246 026r2 F 6.0.0 6 MBMS Inclusion of MBMS 23.246 026r2 F 6.0.0 6 MBMS Inclusion of MBMS 23.246 026r2 F 6.0.0 6 MBMS Inclusion of MBMS 23.246 026r2 F 6.0.0 6 MBMS Inclusion of MBMS 23.246 026r2 F 6.0.0 6 MBMS Inclusion of MBMS 23.246 026r2 F 6.0.0 6 MBMS Inclusion of MBMS 23.246 026r2 F 6.0.0 6 MBMS Inclusion of MBMS 23.246 026r2 F 6.0.0 6 MBMS Inclusion of MBMS 23.246 026r2 F 6.0.0 6 MBMS Inclusion of MBMS 23.246 026r2 F 6.0.0 6 MBMS Inclusion of MBMS 23.246 026r2 F 6.0.0 6 MBMS Inclusion of MBMS 23.246 026r2 F 6.0.0 6 MBMS Inclusion of MBMS 23.246 026r2 F 6.0.0 6 MBMS Inclusion of MBMS 23.246 026r	No. No.

S2-033984	Removal of BG from MBMS	23.246	028	F	6.0.0	6	MBMS	S2-36	4.2
	Architecture Figure								
S2-034381	Removal of security information	23.246	030	F	6.0.0	6	MBMS	S2-36	2,9
	in TS 23.246								

Tdoc #S2-034382

		CHANGE	REQ	UEST	-		CR-Polili-V7
ж 2	2 <mark>3.246</mark> C	R <mark>001</mark>	жrev	5 *	Current vers	6.0.0	¥
For <u>HELP</u> on usin	g this form,	see bottom of this	s page or l	ook at th	e pop-up text	over the # syr	nbols.
Proposed change affe		C apps೫ 🔃				rk 🗶 Core Ne	etwork X
Title:	nclusion of (SERAN attributes	and parai	neters ir	MBMS		
Source: # C	Orange						
Work item code:	MBMS				<i>Date:</i> ૠ	25/11/03	
Category: Ж С					Release: ₩	Rel-6	
De	F (correct A (corresp B (additio C (functio D (editoria etailed explan	following categories (on) conds to a correction of feature), and modification of the modification of the above P TR 21.900.	n in an ear		2	the following relations (GSM Phase 2) (Release 1996) (Release 1997) (Release 1998) (Release 1999) (Release 4) (Release 5) (Release 6)	eases:
						7	
Reason for change:	and bro	46 was approved adcast in the production of the following and the second section of the sec	edures, h	owever i	t was stated th	nat these would	d be
Summary of change:	GERAN	on MBMS attribuas well as UTRA includes genera	N .		•		erence to
Consequences if not approved:	# MBMS	procedures will no	ot address	GERAN	functionality.		
Clauses affected:	第 6.2, 6.3	1					
	¥ <mark>X</mark> O	her core specifications SM Specifications					
Other comments:							

How to create CRs using this form:

- 1) Fill out the above form. The symbols above marked \$\mathbb{X}\$ contain pop-up help information about the field that they are closest to.
- 2) Obtain the latest version for the release of the specification to which the change is proposed. Use the MS Word "revision marks" feature (also known as "track changes") when making the changes. All 3GPP specifications can be

- downloaded from the 3GPP server under $\underline{\text{ftp://ftp.3gpp.org/specs/}}$ For the latest version, look for the directory name with the latest date e.g. 2001-03 contains the specifications resulting from the March 2001 TSG meetings.
- 3) With "track changes" disabled, paste the entire CR form (use CTRL-A to select it) into the specification just in front of the clause containing the first piece of changed text. Delete those parts of the specification which are not relevant to the change request.

6.2 MBMS Bearer Context

The MBMS Bearer Context, which is referred to as MBMS Service Context in RAN, contains all information describing a particular MBMS bearer of an MBMS service and is created in each node involved in the delivery of the MBMS data.

An MBMS Bearer Context is created in the SGSN and GGSN when the first MBMS UE Context is created in the node or when a downstream node requests it. The MBMS Bearer Context is statically configured in the BM-SC; how this is done is out of the scope of this specification. The MBMS Bearer Context is created in the BSC/SRNC when a first MBMS UE Context is created in BSC/SRNC. Session Start procedure may create MBMS Bearer Context in an BSC/RNC which has no MBMS Bearer Context yet. Furthermore, it is FFS whether the state model described below is applicable as such to the RAN or whether it needs to be extended to cover the case of the RAN properly.

An MBMS Bearer Context, once created, can be in one of two states reflecting the activity bearer plane resource status of the corresponding MBMS bearer service.

6.3.1 MBMS QoS distribution tree

MBMS data will be distributed to multiple users through a MBMS distribution tree that can go through many BSCs/RNCs, and many SGSNs and one or more GGSNs. Furthermore some transport bearer resources may be shared between many users accessing the same MBMS bearer service in order to save resources. As a result, each branch of a MBMS distribution tree shall be established with the same QoS.

MBMS distribution tree shall have the same QoS for all its branches.

When a branch of the MBMS distribution tree has been created, it should is not be possible for construction of another branch (e.g. due to arrival of a new UE (or change of location of a UE with removal of a branch and addition of a new one) to impact the QoS of already established branches.

<u>There is no QoS</u> value negotiation between UMTS network elements is not required. This implies that some branches may not be established if QoS requirement cannot be accepted by the concerned network node.

Also in RAN there is no QoS (re-)negotiation feature in-for the RNC should not be allowed for MBMS bearer service.

Tdoc #S2-034315

			(CHAN	IGE	REC	UE	ST	•			CR-Form-v7
*	23	.246	CR	002		≋rev	4	Ж	Current ve	rsion:	6.0.0	¥
For <u>HELP</u> on u	sing i	his for	m, see	bottom	of this	page o	r look	at th	e pop-up te	xt ove	r the 光 sy	mbols.
Proposed change a				pps# <mark> </mark>	_		_		ccess Netw		_	
Title: 第	Inc	usion	of GEF	RAN func	tionali	ty in ME	BMS N	Votific	cation proce	dure a	and sessio	n ID
Source: #	Ora	ange										
Work item code: ∺	MB	MS							Date:	¥ 25	/11/2003	
Category: 米	Deta	F (cori A (cor B (add C (fun D (edi iled exp	rection) respond lition of ctional i torial m blanatio	owing cated to a confeature), modification of the confection of th	rrection on of fe n) above (in an ea			2	of the for (GSI) (Reli (Reli (Reli (Reli (Reli (Reli	el-6 ollowing rel M Phase 2) ease 1996) ease 1997) ease 1999) ease 4) ease 5) ease 6)	
										1	,	
Reason for change	e: X	and inclu	broadc ded foi	ast in the	e proce al at S <i>i</i>	edures, A#22. T	howe his C	ver it R intr	eference to was stated oduces the ier".	that th	nese would	d be
Summary of chang	je: ૠ	GER	AN.Ch	ange of	Servic	e ld to s	essic	n ide	dure for the ntifier in accordan			
Consequences if not approved:	Ж	MBM	IS Noti	fication p	oroced	ures wi	I not	addre	ess GERAN	functi	onality.	
Clauses affected:	90	0.1	0 1 1 /	new), 8.1	2 (20)							
Other specs affected: Other comments:	**	8.1, 8 Y N X X	Other	core spesspecification	ecifica tions	,	∺					

How to create CRs using this form:

- 1) Fill out the above form. The symbols above marked \$\mathbb{X}\$ contain pop-up help information about the field that they are closest to.
- 2) Obtain the latest version for the release of the specification to which the change is proposed. Use the MS Word "revision marks" feature (also known as "track changes") when making the changes. All 3GPP specifications can be

- downloaded from the 3GPP server under $\underline{\text{ftp://ftp.3gpp.org/specs/}}$ For the latest version, look for the directory name with the latest date e.g. 2001-03 contains the specifications resulting from the March 2001 TSG meetings.
- 3) With "track changes" disabled, paste the entire CR form (use CTRL-A to select it) into the specification just in front of the clause containing the first piece of changed text. Delete those parts of the specification which are not relevant to the change request.

8.1 MBMS Notification

8.1.1 Iu mode notification (UTRAN and GERAN)

When an MBMS Session starts, UEs interested in the MBMS bearer service (PMM-CONNECTED UEs and PMM-IDLE UEs) shall be notified.

<u>MBMS</u> Session attributes such as <u>Service Session</u> <u>Identifier</u> and the <u>Multicast MBMS</u> service Area are made available in all interested RNCs during the Session Start procedure. Other parameters are FFS.

For radio efficiency reasons, the UTRAN may select on per cell basis whether to establish point-to-point or point-to-multipoint links for the distribution of MBMS data to the UEs.

In order to perform this selection, the UTRAN requests UEs to move to PMM-CONNECTED / RRC-CONNECTED state by means of MBMS group-notification sent in the Multicast-MBMS service Area.

The fact that this group MBMS notification moves the UEs back to PMM-CONNECTED or to RRC-CONNECTED state is FFS, subject to RAN decision.

The exact number of UEs moved to PMM-CONNECTED / RRC-CONNECTED state is a decision of RAN node. It is not necessary for all UEs to move to PMM-CONNECTED/ RRC_CONNECTED in order for the RAN to decide to use point-to-multipoint, other UEs may remain in IDLE state. This is a UTRAN choice (based on RRM criteria...), FFS in RAN group.

Following the decision to set up point-to-point or point-to-multipoint links, the number of UEs that need to be maintained in CONNECTED state or moved to IDLE state for MBMS data reception is also an decision of a RAN node.

GERAN functionality is FFS.

8.1.2 A/Gb mode notification (GERAN)

When an MBMS Session starts, UEs interested in the MBMS bearer service (READY UEs and STANDBY) shall be notified. The MBMS notification triggers detection or counting of UEs per cell for selection of the most appropriate MBMS radio bearer.

MBMS Session attributes such as Session Identifier, MBMS Service Area, QoS are made available in all interested BSCs that are connected to a registered SGSN by the Session Start procedure.

Tdoc #S2-034316

		CHANGE	REQ	JEST			CK-FOIIII-V7
¥ 2	3.246 CR	003	жrev	4 **	Current vers	6.0.0	*
For <u>HELP</u> on using	g this form, see	bottom of this	page or le	ook at the	e pop-up text	over the ♯ syr	nbols.
Proposed change affe		apps#				k <mark>X</mark> Core Ne	etwork X
<i>Title:</i>	nclusion of GEI	RAN functional	ity in MBM	IS proce	dures		
Source: # C	range						
Work item code: 光 N	1BMS				Date: ૠ	25/11/2003	
Category: # C	:				Release: ₩	Rel-6	
De	F (correction) A (correspond B (addition of C (functional D (editorial m	ds to a correction feature), modification of feodification) ons of the above	n in an earli eature)		2 R96 R97 R98 R99	the following relations (GSM Phase 2) (Release 1996) (Release 1997) (Release 1998) (Release 1999) (Release 4) (Release 5) (Release 6)	eases:
						(* ************************************	
Reason for change:	and broado	was approved cast in the proce r approval at S.	edures, ho	owever it	was stated th	nat these would	l be
Summary of change:	as well as I	procedures ar RNC, A/Gb mod cludes genera	de as well	as lu mo	ode and GER	AN as well as l	
Consequences if not approved:	MBMS pro	cedures will no	t address	GERAN	functionality.		
Clauses affected:	£ 8.2, 8.3, 8.5	5 8 1/1					
	YN X Othe	r core specifica specifications Specifications	tions	X			
Other comments:	#						

How to create CRs using this form:

- 1) Fill out the above form. The symbols above marked \$\mathbb{X}\$ contain pop-up help information about the field that they are closest to.
- 2) Obtain the latest version for the release of the specification to which the change is proposed. Use the MS Word "revision marks" feature (also known as "track changes") when making the changes. All 3GPP specifications can be

- downloaded from the 3GPP server under $\underline{\text{ftp://ftp.3gpp.org/specs/}}$ For the latest version, look for the directory name with the latest date e.g. 2001-03 contains the specifications resulting from the March 2001 TSG meetings.
- 3) With "track changes" disabled, paste the entire CR form (use CTRL-A to select it) into the specification just in front of the clause containing the first piece of changed text. Delete those parts of the specification which are not relevant to the change request.

8.2 MBMS Multicast Service Activation

The MBMS multicast service activation procedure registers the user in the network to enable the reception of data from a specific MBMS multicast MBMS bearer service. The activation is a signalling procedure between the UE and the network. The procedure establishes MBMS UE contexts in UE, SGSN and GGSN and BSC/RNC for each activated MBMS multicast MBMS bearer service comparable to regular PDP contexts.

8.3 MBMS Session Start Procedure

The BM-SC initiates the MBMS Session Start procedure when it is ready to send data. This is a request to activate all necessary <u>bearer</u> resources in the network for the transfer of MBMS data and to notify interested UEs of the imminent start of the transmission.

Through this procedure, <u>MBMS</u> session attributes such as QoS, <u>Multieast-MBMS service</u> Area (tracking/non-tracking area are FFS) are provided to the GGSN(s) and SGSN(s) that have previously registered for the corresponding MBMS bearer service and to all <u>BSCs/RNCs</u> that are connected to a registered SGSN. In addition the procedure allocates the bearer plane to all registered GGSNs and all registered SGSNs and to <u>BSCs/RNCs</u> that respond to the session start accordingly.

The overall Session Start procedure is presented in the following figure:

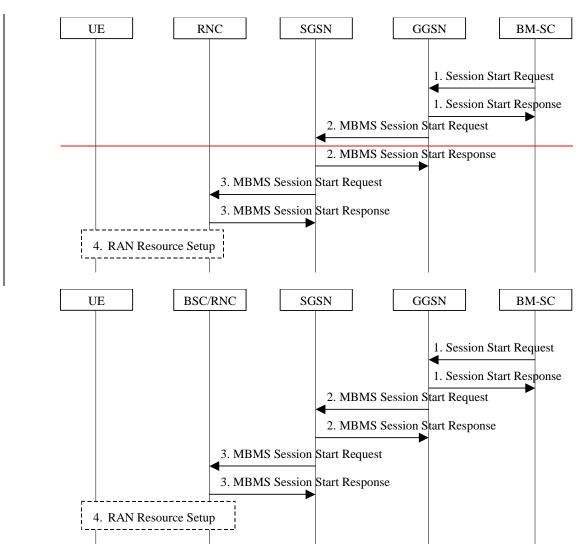


Figure 8 Session Start procedure

- 1. The BM-SC sends a Session Start Request message to indicate the impending start of the transmission and to provide the session attributes (QoS, Multicast MBMS service Area...) to the GGSNs listed in the "list of downstream nodes" parameter of the corresponding MBMS Bearer Context. The BM-SC sets the state attribute of its MBMS Bearer Context to 'Active'. The GGSN stores the session attributes in the MBMS Bearer Context, sets the state attribute of its MBMS Bearer Context to 'Active' and sends a Session Start Response message to the BM-SC..
- 2. The GGSN sends an MBMS Session Start Request message to the SGSNs listed in the "list of downstream nodes" parameter of the corresponding MBMS Bearer Context. The SGSN stores the session attributes in the MBMS Bearer Context, sets the state attribute of its MBMS Bearer Context to 'Active' and responds with an MBMS Session Start Response message providing the TEID for bearer plane that the GGSN shall use for forwarding the MBMS data.
- 3. The SGSN sends an MBMS Session Start Request message including the session attributes to each BSC/RNC that is connected to this SGSN. The BSC/RNC responds with an MBMS Session Start Response to the SGSN. If the BSC/RNC serves the MBMS Service Area it stores the session attributes in the MBMS Service Context, sets the state attribute of its MBMS Service Context to 'Active' and responds with an MBMS Session Start Response message and the RNC includes the TEID in the MBMS Session Start Response message for the Iu bearer plane that the SGSN shall use for forwarding the MBMS data. An RNC receiving multiple MBMS Session Start Request messages includes Iu bearer plane parameters only into one MBMS Session Start Response message to establish only one Iu bearer plane to one SGSN.
- 4. The BSC/RNC establishes the necessary radio resources for the transfer of MBMS data to the interested UEs.

Note:

The upstream node normally provides the MBMS Session Start Request message once per MBMS session to a downstream node. Due to "Intra Domain Connection of RAN Nodes to Multiple Core Network Nodes" however, an RNC may receive the MBMS Session Start Request message from several SGSNs.

8.5 MBMS Session Stop Procedure

The BM-SC initiates the MBMS Session Stop procedure when it considers the MBMS session to be terminated. The session is typically terminated when there is no more MBMS data expected to be transmitted for a sufficiently long period of time to justify a release of user bearer plane resources in the network. The procedure is propagated to all SGSNs and GGSNs that are registered for the corresponding MBMS bearer service and to BSCs/RNCs that have an established Iu bearer plane with an SGSN...

The overall MBMS Session Stop procedure is presented in the following figure:

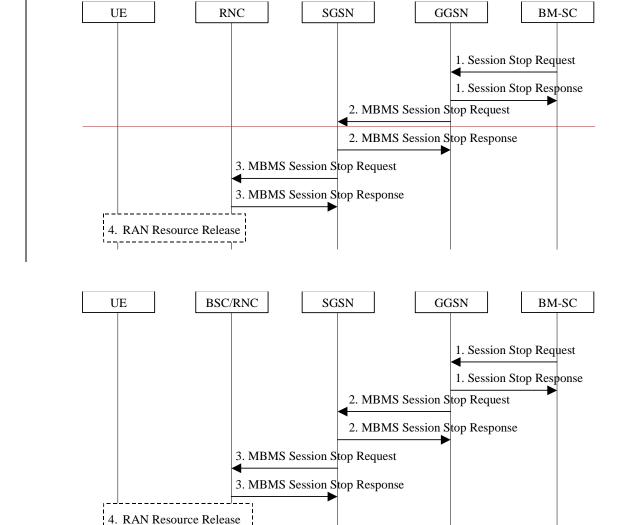


Figure 10 MBMS Session Stop procedure

3GPP TS 23.246 v6.0.0 (2003-09)


- 1. The BM-SC sends a Session Stop Request message to all GGSNs listed in the "list of downstream nodes" parameter of the affected MBMS Bearer Context to indicate that the MBMS session is terminated and the bearer plane resources can be released. The BM-SC sets the state attribute of its MBMS Bearer Context to 'Standby'.
- 2. The GGSN sends an MBMS Session Stop Request message to all SGSNs listed in the "list of downstream nodes" parameter of the affected MBMS Bearer Context, releases the corresponding bearer plane resources towards these SGSNs and sets the state attribute of its MBMS Bearer Context to 'Standby'.
- 3. The SGSN releases the TEID and bearer plane resources on which it was receiving MBMS data from the GGSN for the affected MBMS bearer service and sends an MBMS Session Stop Request message to all <u>BSCs/RNCs</u> that have a bearer plane established with the SGSN.
- 4. The RNC releases the affected radio and Iu resources; the BSC releases the affected radio resources.

8.14 MBMS Broadcast Session Start Procedure

The BM-SC initiates the MBMS Session Start procedure when it is ready to send data. This is a request to activate all necessary <u>bearer</u> resources in the network for the transfer of MBMS data. It is FFS whether it is also used to notify interested UEs of the start of the transmission.

Through this procedure, <u>MBMS</u> session attributes such as QoS, <u>Broadcast MBMS</u> service Area (tracking/non-tracking area are FFS) are provided to all the GGSN(s), SGSN(s) and <u>BSCs/RNCs</u>. In addition the procedure allocates the bearer plane to all GGSNs and all SGSNs and to <u>BSCs/RNCs</u> that respond to the <u>MBMS</u> session start accordingly.

The overall MBMS Broadcast Session Start procedure is presented in the following figure:

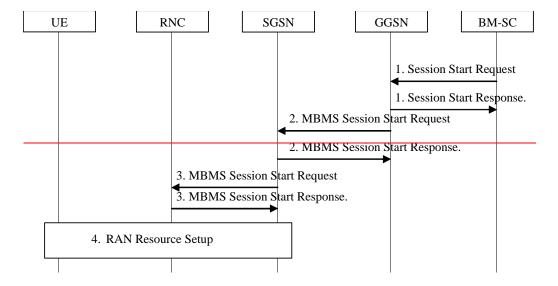

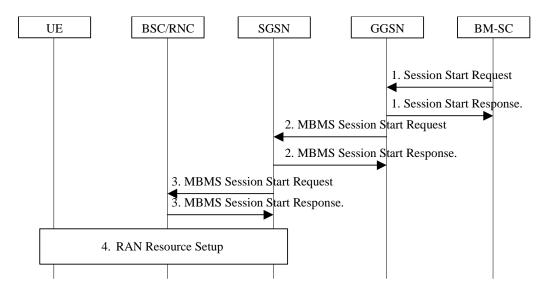


Figure 16 Session Start procedure for MBMS Broadcast MBMS Bearer Service

- 1) The BM-SC sends a Session Start Request message the impending start of the transmission and to provide the <u>MBMS</u> session attributes (QoS, <u>Broadeast MBMS service Area...</u>) to a <u>GGSNs GGSN</u> of the PLMN. The BM-SC sets the state attribute of its MBMS Bearer Context to 'Active'. The GGSN creates a MBMS Bearer Context, stores the session attributes, sets the state attribute of this MBMS Bearer Context to 'Active' and sends a Session Start Response message to the BM-SC.
- 2) The GGSN sends an MBMS Session Start Request message to all its SGSNs. The SGSN creates a MBMS Bearer Context, stores the session attributes, sets the state attribute of this MBMS Bearer Context to 'Active' and responds with an MBMS Session Start Response message providing the TEID for bearer plane that the GGSN shall use for forwarding the MBMS data.
- 3) The SGSN sends an MBMS Session Start Request message including the session attributes to each BSC/RNCs that is connected to this SGSN. The BSC/RNC responds with an MBMS Session Start Response message to the SGSN. If the BSC/RNC serves the MBMS Broadcast service Area, it creates a MBMS Bearer Context, stores the session attributes in this MBMS Service Context, sets the state attribute of its MBMS Service Context to 'Active' and responds with an MBMS Session Start Response message, and the RNC includes the TEID in the MBMS Session Start Response message for the Iu bearer plane that the SGSN shall use for forwarding the MBMS data. An RNC receiving multiple MBMS Session Start Request messages from different SGSNs includes Iu bearer plane parameters only into one MBMS Session Start Response message to establish only one Iu bearer plane to one SGSN.
- 4) The BSC/RNC establishes the necessary radio resources for the transfer of MBMS data to the interested UEs.

Note: The upstream node normally provides the MBMS Session Start Request message once per MBMS session to a downstream node. Due to "Intra Domain Connection of RAN Nodes to Multiple Core Network Nodes" however, an RNC may receive the MBMS Session Start Request message from several SGSNs.

Tdoc **#***S2-034378*Revised S2-0334309

New York, USA,	24-2	28 NC	vemi	oer 2003	3					ŀ	Kevi	sed S2-	0334309
			(CHAN	GE	REC	UE	ST	-				CR-Form-v7
æ	23.	246	CR	007		≋rev	4	ж	Curre	ent vers	sion:	6.0.0	æ
For <u>HELP</u> on u	-			e bottom c	_	_						_	vmbols.
Title: 第	Clo	rificati	on of N	/IBMS UE	Cont	ovt pluo	CED) A N I £	unatio	nality			
Title:	Cla	IIICali	OH OH IV	IDIVIS UE	Con	ext plus	GEN	AIN I	urictio	пашу			
Source: #	Sie	mens,	Huaw	ei, Orang	е								
Work item code: ₩	MD	MC							,	Date: #	26	/11/2003	
Work item code. &	IVID	IVIO							L	Jale. et	20	/11/2003	
Category: ∺	Detai	F (corr A (cor B (add C (fun D (edi led exp	rection) respondition of actional in torial mi	owing cate ds to a corrifeature), modification odification, ons of the a FR 21.900.	rectior on of fe above	n in an ea eature)			Use)	ease: # e <u>one</u> of 2 R96 R97 R98 R99 Rel-4 Rel-5 Rel-6	f the for (GS) (Reli (Reli (Reli (Reli (Reli	el-6 ollowing re M Phase 2 ease 1996 ease 1997 ease 1998 ease 4) ease 5) ease 6)	?) ?) ?)
											•	,	
Reason for change	e: #	In TS MBM desc and part Cont	SN can MS UE S 23.24 MS UE cribed in SGSN, of the I text sho		subc subc s store 13 of n the ext in tored	ked NSA SN. lause 6. ed as pa TS 23.0 GGSN. the GGS separate	API. T I stat Irt of t 60 v6 So, w SN. C	tes "I the M 5.2.0, ve ca conse	n the I MM Co , the M n not s equent needs	JE, SG ntext fo M Con store th ly, in th a self in	Should a sho	Ind GGSN UE." But exists in the BMS UE C GSN, the I	ted from N, the , as
Summary of chang	ge: ૠ	Cont	text sho	f TMGI fro ould be st dition of G	tored	separate	ely an	id ne	eds IN	/ISI as i	ts se	If indication	
Consequences if not approved:	黑	desc uncle	ription ear hov	information of how the GGS inclusion	ne MB SN dit	MS UE	Conte	ext is	stored en mu	d in the Itiple M	GGS IBMS	SN, and it	is
Clauses affected:	æ	6.1											
Jacob aneolea.	J.		1										
Other specs affected:	\varkappa	Y N X X	Test	r core spe specificati Specifica	ions		¥						

How to create CRs using this form:

- 1) Fill out the above form. The symbols above marked \$\mathbb{X}\$ contain pop-up help information about the field that they are closest to.
- 2) Obtain the latest version for the release of the specification to which the change is proposed. Use the MS Word "revision marks" feature (also known as "track changes") when making the changes. All 3GPP specifications can be downloaded from the 3GPP server under ftp://ftp.3gpp.org/specs/ For the latest version, look for the directory name with the latest date e.g. 2001-03 contains the specifications resulting from the March 2001 TSG meetings.
- 3) With "track changes" disabled, paste the entire CR form (use CTRL-A to select it) into the specification just in front of the clause containing the first piece of changed text. Delete those parts of the specification which are not relevant to the change request.

6.1 MBMS UE Context

The MBMS UE Context contains UE-specific information related to a particular MBMS bearer that the UE has joined. An MBMS UE Context is created in the UE, SGSN and GGSN when the UE joins an MBMS bearer. In the SGSN, an MBMS UE Context is also created as a result of an inter-SGSN routing area update after the transfer of the MBMS UE Context from the old SGSN. It is FFS whether MBMS UE Contexts are created in the BM-SC.

All MBMS UE Contexts of a UE (referenced as "UE Link" in RNC) are provided via UE dedicated Iu procedure(s) to the SRNC when the first PS RAB is established for the UE, or when the UE performs MBMS Multicast Service Activation. MBMS UE Contexts are provided to the SRNC regardless whether MBMS Sessions are ongoing or not (i.e. before, between and after Sessions).

The existence of the MBMS UE context for Gb mode in the BSC is for further study.

In the UE_T and SGSN-and GGSN, the MBMS UE Context is stored as part of the MM Context for the UE. The MBMS UE Context is stored in the GGSN. There is one MBMS UE Context per MBMS bearer service that the UE has joined.

In the BSC/RNC, the MBMS UE Contexts are stored as part of the UE Context of the BSC/RNC.

The content of the MBMS UE Context is described in Table 1.

Table 1: MBMS UE Context

Parameter	Description	UE	SGSN	GGSN	RNC	BSC	BM-SC
IP multicast address	IP multicast address identifying an MBMS bearer that the UE has joined.	Х	X	X	Х	<u>lu - X</u> <u>Gb - FFS</u>	
APN	Access Point Name on which this IP multicast address is defined.	Х	X	X	Х	<u>lu - X</u> Gb - FFS	
TMGI	Temporary Mobile Group Identity allocated to the MBMS bearer.	Х	X	FFS	X		FFS
Linked NSAPI	NSAPI of the PDP context used by the UE to carry IGMP/MLD signalling.	Х	X	×			
<u>IMSI</u>	IMSI identifying the user.	<u>(1)</u>	<u>(1)</u>	<u>X</u>	<u>(2)</u>	FFS	
FFS	FFS						

⁽¹⁾ In the UE and SGSN, the IMSI is available within the MM Context which contains the MBMS UE Context

(2) In the RNC, the IMSI is available within the UE Context which contains the MBMS UE Context.

3GPP TSG-SA WG2 Meeting #36 NYC, USA, November 24 – 28, 2003

			С	HANGI	E REC	UE	ST	•			CR-Form-v7
*	23.	246	CR 8	}	жrev	1	ж	Current ve	ersion:	6.0.0	æ
For <u>HELP</u> on us	sing t	his for	rm, see b	oottom of th	is page o	look	at th	e pop-up te	xt ove	r the 🛱 syl	mbols.
Proposed change a	affect	ts: l	JICC ap _l	ps# <mark> </mark>	ME 🕽	<mark>(</mark> Rad	A oib	ccess Netv	/ork X	Core Ne	etwork X
Title: ₩	App	ly TM	GI for Br	oadcast Se	ervice						
Source: #	Mot	torola									
Work item code: ₩	MB	MS						Date:	光 27	7/10/2003	
	Detai	F (cord A (cord B (add C (fund D (edi led exp	rection) responds dition of fe ctional m torial mod	odification of dification) s of the abov	on in an ea		elease	2	of the fo (GSI (Reli (Reli (Reli (Reli (Reli	EL-6 ollowing rele M Phase 2) ease 1996) ease 1997) ease 1998) ease 1999) ease 4) ease 5) ease 6)	
Reason for change		hasn (TMC per s trans mod Serv	n't define GI) is use service the smitted to ification, rice in Br	efines TMG TMGI for B ed for group hat is unique UE via se it is benefic oadcast Se	roadcast o notificati e within H rvice activ cial to reus rvice. The	service on pure pure pure pure pure pure pure pure	e. "7 rpose N. Fo proc sam e, co	emporary of the BM- e. The BM- or Multicast of the BM- edure." To the design portion is a contract of the BM- or rection is a contract of the BM-or rection is a contract of the BM	Mobile SC will Service minim rinciple needed	Group Ide I allocate a e the TMG ize system es for Multi	entity n TMGI el will be n cast
Summary of chang	e: ж			roposes tex o Identity.	ts to supp	OFT DE	oadc	ast service	to sec	tion 6.4 16	emporary
Consequences if not approved:	¥	Diffe	rent prod	cedures for	Multicast	Servi	ce ar	nd Broadca	st Serv	vice.	
Clauses affected:	*	6.4									
Other specs affected:	*	Y N X X	Test sp	core specific pecifications pecification	3	¥					
Other comments:	\mathfrak{R}										

How to create CRs using this form:

Comprehensive information and tips about how to create CRs can be found at http://www.3gpp.org/specs/CR.htm. Below is a brief summary:

1) Fill out the above form. The symbols above marked \$\mathbb{X}\$ contain pop-up help information about the field that they are closest to.

- 2) Obtain the latest version for the release of the specification to which the change is proposed. Use the MS Word "revision marks" feature (also known as "track changes") when making the changes. All 3GPP specifications can be downloaded from the 3GPP server under ftp://ftp.3gpp.org/specs/ For the latest version, look for the directory name with the latest date e.g. 2001-03 contains the specifications resulting from the March 2001 TSG meetings.
- 3) With "track changes" disabled, paste the entire CR form (use CTRL-A to select it) into the specification just in front of the clause containing the first piece of changed text. Delete those parts of the specification which are not relevant to the change request.

6.4 Temporary Mobile Group Identity

Temporary Mobile Group Identity (TMGI) is used for group notification purpose. The BM-SC will allocate a TMGI per service that is unique within HPLMN. For Multicast Service the TMGI will be transmitted to UE via service activation procedure. For Broadcast Service the TMGI can be obtained via service announcement see "Service Announcement".

traffic.

Consequences if

Tdoc **# S2-034312** rev of S2-033994

new fork, US	A, 24	- 20	OC	lober 200	03					iev	01 3	2-0339	94
			(CHANG	GE R	EQ	UE	ST	•				CR-Form-v7
器	23	3.246	CR	015	жr	ev	3	¥	Curren	t vers	ion:	6.0.0	¥
For <u>HELP</u> or	n using	this for	m, see	e bottom of	this pag	e or i	look a	at the	е рор-ир	o text	over	the # sy	mbols.
Proposed chang	e affe	cts: l	JICC a	аррѕЖ	M	EX	Rad	lio A	ccess N	etwor	k X	Core Ne	etwork X
Title:	₩ <mark>M</mark>	BMS po	int to	ooint repair	chargin	g/dec	rypt	serv	ice				
Source:	₩ Vo	odafone	UK										
Work item code:	°₩ <mark>M</mark>	BMS							Da	te: ૠ	26/	10/2003	
Category:	Det	F (corr A (corr B (add C (fund D (edit ailed exp	rection, respon lition of ctional forial m	ds to a correct feature), modification on sof the above.	ection in a	e)		lease	2 R9 R9 R9 R9 Re Re	one of 1 16 17 18 19 1-4	(GSN (Rele (Rele (Rele (Rele (Rele (Rele	I-6 Illowing reli Il Phase 2) Pase 1996) Pase 1997) Pase 1998) Pase 1999) Pase 4) Pase 5) Pase 6)	
Reason for chan	nge: #	bene comp accu funct Whel	ficial folete, or rately ionalition using the contraction of the contr	MS "file do or the mob eg, to perm charge; to y might also g these ser d the netwo	ile to cor nit errors pass a d o be use vices, ca ork (radi	ntact in the lecrypeful fo are is o, RN	a net e file ot key r stre need IC, B	work to be to to eami ded to SC,	c server e correct the mobi ng servic to ensure SGSN,	after ted; to le; etc ces. e that GGSI	the doperion of the	ownload in the neme of this uplink traf	is stwork to s fic does lly

not approved:

Clauses affected: # 7

Other specs # X Other core specifications # GERAN/UTRAN stage 3's and SA 4's User Service.

Affected: X O&M Specifications

Congested radio resources and overloaded network elements.

Summary of change:

The concept of point to point repair, etc is added to 23.246.

address of (one of many) repair servers to the mobile at activation time, along with parameters that are used to generate a random time dispersion of the uplink

Other comments: # 2-

How to create CRs using this form:

- 1) Fill out the above form. The symbols above marked \$\mathbb{X}\$ contain pop-up help information about the field that they are closest to
- 2) Obtain the latest version for the release of the specification to which the change is proposed. Use the MS Word "revision marks" feature (also known as "track changes") when making the changes. All 3GPP specifications can be downloaded from the 3GPP server under ftp://ftp.3gpp.org/specs/ For the latest version, look for the directory name with the latest date e.g. 2001-03 contains the specifications resulting from the March 2001 TSG meetings.
- 3) With "track changes" disabled, paste the entire CR form (use CTRL-A to select it) into the specification just in front of the clause containing the first piece of changed text. Delete those parts of the specification which are not relevant to the change requ

7 Architectural Aspects of MBMS User Services

7.1 Application Adjunct Entity

For the MBMS "file download" service, there are several use cases where it may be beneficial for the UE to contact a network entity (the Application Adjunct Entity (AAE)) after the download is complete in order, eg, to permit errors in the file to be corrected; to permit the network to charge for a successful download; to pass a decrypt key to the UE; etc. The AAE is logically part of the BM-SC.

Note: use of the AAE might also be beneficial for some MBMS Streaming services.

Care is needed to ensure that the uplink traffic does not overload the network (radio, RNC, BSC, SGSN, GGSN and BM-SC). One way for this load to be distributed is for the BM-SC to allocate the address of (one of many) AAEs to the UE at activation time, along with parameter(s) that are used to generate a random time dispersion of the uplink traffic.

S2-033996 revision of S2-033982

		(CHANG	E REQ	UES	Т			CR-Form-v7
*	23.24	6 CR	16	жrev	2 #	Current ver	sion: 6	6.0.0	*
For <u>HELP</u> on us	sing this i	form, see	bottom of ti	his page or	look at	the pop-up tex	t over th	ne ₩ syr	nbols.
Proposed change a	affects:	UICC a	pps#	ME	Radio	Access Netwo	ork X	Core Ne	etwork X
Title: 第	Optiona	al provision	on of duratio	n of the ses	sion				
Source: #	Nortel N	Networks							
Work item code: ₩	MRMC					Date: ೫	21/10	0/2003	
Category: ₩	F (C A (C B (a C (f D (e Detailed e	orrection) correspond addition of unctional i editorial m explanatio	owing categorials to a correct feature), modification codification) ns of the about R 21.900.	tion in an ear		Release: # Use <u>one</u> of 2 ase) R96 R97 R98 R99 Rel-4 Rel-5 Rel-6	f the follo (GSM F (Releas (Releas (Releas	owing rele Phase 2) se 1996) se 1997) se 1998) se 1999) se 4) se 5)	eases:
D	00 1 - 1	0.00.00	2007 (D0 00	4040) DAN	0 '- (th(th		•	f
Reason for change	RN	Cs to kno	w what wou	ıld be the du	uration of	ns that there words a session. The the data trans	he BM-S	SC could	ł
Summary of chang	/e:	date MBN	1S TS 23.24	6 to indicate	e this o	otionnal sendin	ıg.		
Consequences if not approved:	₩ If th	is is not o	done, some	radio archit	ecture o	optimization ca	nnot be	done.	
Clauses affected:	₩ 8.3	3							
Other specs affected:	*	X Test s	core specifi specification Specificatio	S	æ				
Other comments:	₩ .								

How to create CRs using this form:

- 1) Fill out the above form. The symbols above marked \$\mathbb{X}\$ contain pop-up help information about the field that they are closest to.
- 2) Obtain the latest version for the release of the specification to which the change is proposed. Use the MS Word "revision marks" feature (also known as "track changes") when making the changes. All 3GPP specifications can be

- downloaded from the 3GPP server under $\underline{\text{ftp://ftp.3gpp.org/specs/}}$ For the latest version, look for the directory name with the latest date e.g. 2001-03 contains the specifications resulting from the March 2001 TSG meetings.
- 3) With "track changes" disabled, paste the entire CR form (use CTRL-A to select it) into the specification just in front of the clause containing the first piece of changed text. Delete those parts of the specification which are not relevant to the change request.

8.3 MBMS Session Start Procedure

The BM-SC initiates the MBMS Session Start procedure when it is ready to send data. This is a request to activate all necessary <u>bearer</u> resources in the network for the transfer of MBMS data and to notify interested UEs of the imminent start of the transmission.

Through this procedure, <u>MBMS</u> session attributes such as QoS, <u>MBMS service Multieast</u> Area (tracking/non-tracking area are FFS), estimated session duration if available are provided to the GGSN(s) and SGSN(s) that have previously registered for the corresponding MBMS bearer service and to all RNCs that are connected to a registered SGSN. In addition the procedure allocates the bearer plane to all registered GGSNs and all registered SGSNs and to RNCs that respond to the session start accordingly.

The overall Session Start procedure is presented in the following figure:

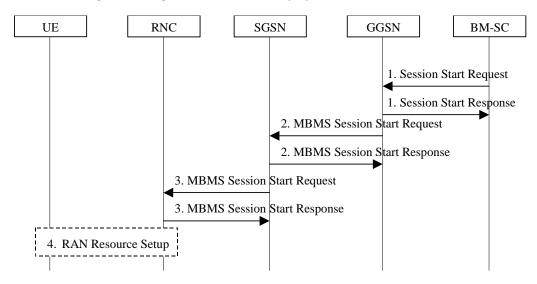


Figure 8: Session Start procedure

The BM-SC sends a Session Start Request message to indicate the impending start of the transmission and to
provide the session attributes (QoS, Multicast MBMS service Area, estimated session duration...) to the GGSNs
listed in the "list of downstream nodes" parameter of the corresponding MBMS Bearer Context. The BM-SC sets
the state attribute of its MBMS Bearer Context to 'Active'. The GGSN stores the session attributes in the MBMS
Bearer Context, sets the state attribute of its MBMS Bearer Context to 'Active' and sends a Session Start
Response message to the BM-SC.

New York, USA,	24 th	– 28	th No	vembe	r 2003									
				CHAN	NGE I	REC	UE	ST	ı					CR-Form-v7
*	23.	246	CR	020	≋re \	/	2	Ħ	Curre	ent ver	sion:	6.0	0.0	ж
For HELP on u Proposed change a	-			e bottom apps器	of this p	ME						_		nbols. etwork X
Title: %	Cor	rectio	ns for	TMGI, lir	nked NS	API ar	d ser	vice I	D					
Source: #	Sie	mens												
Work item code: ₩	MB	MS							D	ate: #	8 26	/11/20	003	
Reason for change	Detai be fo	F (con A (cor A (cor B (add C (fun D (edi) led expund in TS ver MBM MBM of the MBM The rutransferegistr There GGSN can no NSAP	rection) respondition of ctional modanatic 3GPP crision 6. S beare MBMS S UE c ddimenters alreation procession of the control	ds to a confecture), modification of the TR 21.900 0.0 description of the TR 21.900 onto	ibes the Tin almost and not prontext to the UE, a tration prometric transfer the line and in the din the line and in the line and line a	TMGI at everyoer UE. avoid as the Uocedurit this ir to be a ked NS MBMS	as part netword There redund UE has that information dided. SAPI in Sactive SN cas UE c	of the ork en efore i lant in no M is embation en any ration no mar ontex	Use 2 P) F F F F F F F F F F C C C C C C C C C	R96 R97 R98 R99 Rel-4 Rel-5 Rel-6 IS UE of the TMC ork entition. It to the tis not the tis	f the fer (GSI) (Relative	M Phase 1 pease 1 pease 1 pease 1 pease 4 pease 5 pease 6 peas	se 2) 996) 997) 998) 999) () as par I for t Id be in par proce by the	rt of the he only part t of the edure e two GGSN ng. Linked
Summary of chang		Remo	oval of	TMGI fr	om MBM	IS UE	contex	t. Ado	dition o	of TMC				
Consequences if not approved:	¥	•			ons for li						ssing	signall	ing el	lements.
Clauses affected:	¥	8.4												
Other specs affected:	¥	Y N X X		r core sp specifica	ecifications	ons	¥							

X O&M Specifications

Other comments:

The changes for 6.1 and 8.1 are merged into CR#2 and CR#7 respectively because of overlap. This CR takes into account changes on 8.4 from CR#21and 22.

How to create CRs using this form:

- 1) Fill out the above form. The symbols above marked \$\mathbb{X}\$ contain pop-up help information about the field that they are closest to.
- 2) Obtain the latest version for the release of the specification to which the change is proposed. Use the MS Word "revision marks" feature (also known as "track changes") when making the changes. All 3GPP specifications can be downloaded from the 3GPP server under ftp://ftp.3gpp.org/specs/ For the latest version, look for the directory name with the latest date e.g. 2001-03 contains the specifications resulting from the March 2001 TSG meetings.
- 3) With "track changes" disabled, paste the entire CR form (use CTRL-A to select it) into the specification just in front of the clause containing the first piece of changed text. Delete those parts of the specification which are not relevant to the change request.

8.4 MBMS Registration Procedure

The MBMS Registration is the procedure by which a downstream node informs an upstream node that it would like to receive session attributes and data for a particular MBMS <u>bearer</u> service in order to distribute it further downstream. This procedure builds up a distribution tree for the delivery of MBMS session attributes and data from the BM-SC to the UEs interested in the service. This procedure results in the set-up of a corresponding MBMS Bearer Context in the nodes along the distribution tree, but it does not result in the establishment of <u>user_bearer</u> plane which will be established by the Session Start procedure.

The MBMS Registration procedure is initiated:

- When the first MBMS UE Context for a particular MBMS bearer service is created in the SGSN or GGSN (see subclause "MBMS UE Context") and the corresponding MBMS Bearer Context is not already established in the node;
- When an MBMS Registration Request for a particular MBMS Service bearer service is received from a downstream node but the corresponding MBMS Bearer Context is not established in the node; or
- When a DRNC detects that it hosts UEs interested in the MBMS <u>bearer</u> service (see subclause "RAN Resource Setup).

NOTE: The terms 'downstream' and 'upstream' refer to the topological position of one node with respect to another and relative to the direction of the MBMS data flow, i.e. from BM-SC to UE.

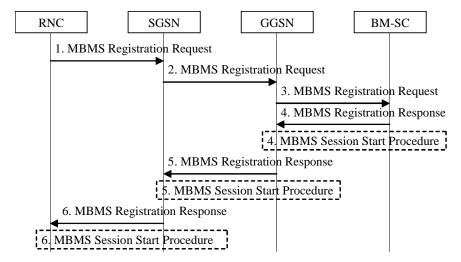


Figure 9: MBMS Registration procedure

- When the DRNC detects that it hosts UEs interested in the MBMS Servicebearer service, the DRNC sends a
 MBMS Registration Request message to its parent SGSN if not already done (see subclause "RAN Resource
 Setup"). How the RNC determines its parent SGSN is a matter of implementation.
- 2. If the SGSN has no MBMS Bearer Context for an MBMS Servicebearer service and the SGSN receives an MBMS Registration Request from an RNC for this MBMS bearer service, or if the first MBMS UE Context is created in the SGSN for an MBMS Servicebearer service for which the SGSN has no corresponding MBMS Bearer Context, the SGSN creates an MBMS Bearer Context (in "Standby" state) and sends an MBMS Registration request (IP multicast address, APN₇) message to the GGSN. How the SGSN selects a GGSN is a matter of implementation; it may for instance be based on prior signalling related to a particular UE or via APN resolution.
- 3. If the GGSN has no MBMS Bearer Context for an MBMS <u>bearer</u> service and the GGSN receives an MBMS Registration from an SGSN for this MBMS <u>bearer</u> service, or when the first MBMS UE Context is created in the GGSN for an MBMS <u>bearer</u> service for which the GGSN has no MBMS Bearer Context, the GGSN sends a Registration Request (IP multicast address, APN) message to the BM-SC. The exact nature of the signalling between GGSN and BM-SC is however FFS in general.

- 4. Upon reception of an MBMS Registration Request from a GGSN, the BM-SC adds the identifier of the GGSN to the "list of downstream nodes" parameter in its MBMS Bearer Context and responds with a MBMS Registration Response (TMGI, Required Bearer Capabilities) message. The exact nature of the signalling between GGSN and BM-SC is however FFS in general. If the MBMS Bearer Context is in the 'Active' state, the BM-SC initiates the Session Start procedure with the GGSN, as described in Section 8.3.clause "MBMS Session Start Procedure".
- 5. If the GGSN receives a Registration Request from the SGSN in step 2, the GGSN:
 - adds the identifier of the SGSN to the "list of downstream nodes" parameter in its MBMS Bearer Context,
 - responds with an MBMS Registration Response (TMGI, Required Bearer Capabilities) message, and
 - if the MBMS Bearer Context is in the 'Active' state, initiates the Session Start procedure with the SGSN, as described in Section 8.3, clause "MBMS Session Start Procedure".
- 6. If the SGSN received MBMS Registration Request from the DRNC in step 1, the SGSN:
 - adds the identifier of the RNC to the "list of downstream nodes" parameter in its MBMS Bearer Context,
 - responds with an MBMS Registration Response message, and
 - if the MBMS Bearer Context is in the 'Active' state, initiates the Session Start procedure with the DRNC, as described in Section 8.3 clause "MBMS Session Start Procedure".

New York, USA,														CR-Form-v7
			(CHAN	GE	REQ	UE	ST	•					Green Grant VI
*	23.	246	CR	021	G	⊭ rev	1	¥	Curre	nt vers	sion:	6.0	0.0	ж
For <u>HELP</u> on u	sing t	his for	m, see	e bottom o	of this p	page or	look	at th	е рор-и	ıp text	over	the 8	⊭ syr	nbols.
Proposed change	affect	ts: l	JICC a	apps#]	ME	Ra	dio A	.ccess I	Netwo	rk X	Co	re Ne	etwork X
Title: ∺	Rer	noval	of sup	erfluous p	oroced	ures								
Source: #	Sie	mens												
Work item code: ∺	MB	MS							Di	ate: ೫	26	/11/20	003	
Category: 第	Use g	F (con A (cor A (cor B (add C (fun D (edi) led expund in Currer remove to esta was no RNCs addition estblis proceco	rection) respond respond respond respond retional retiona	ds to a core f feature), modification ons of the a TR 21.900 23.246 es ased with te s/RNCs du r release In toted some	tablished time aggoing seems and model are start ure should a received the seasons and the seasons are seasons and the seasons are seasons	ature) ategories	rer w processions er prossions er prossions stanco be a sess. I	rith the edure. Is to the ocedural dalone added The operation of the operation.	Use 2 e) R R R R R R R R R R R R R R R R R R	e96 e97 e98 e99 eel-4 eel-5 eel-6 n start pare no resibution explicitase prodistribution gain ion gaine e chango need	the fc (GSI) (Relative (Relative (GSI))	ollowir M Pha ease in ease in	se 2) (1996) (1997) (1998) (1999) (1) (1999) (1) (1999) (1) (1999) (1) (1999) (1) (1999) (1) (1999) (1) (1999) (1) (1999)	e Iu dd or no need all RNCs quire results in ore the er is
Summary of chang				the stage 2							uld be	e dele	ted.	
Consequences if not approved:	¥			that may			rom (distrib	oution tr	ee. But	, no i	necha	nism	for the
Clauses affected:	H	8.8,	8.9											
Other specs affected:	¥	Y N X X	Test	r core spe specificat Specifica	ions	ions	¥							

Other comments: # Changes on 8.4 are merged into CR#20.

How to create CRs using this form:

- 1) Fill out the above form. The symbols above marked \$\mathbb{X}\$ contain pop-up help information about the field that they are closest to.
- 2) Obtain the latest version for the release of the specification to which the change is proposed. Use the MS Word "revision marks" feature (also known as "track changes") when making the changes. All 3GPP specifications can be downloaded from the 3GPP server under ftp://ftp.3gpp.org/specs/. For the latest version, look for the directory name with the latest date e.g. 2001-03 contains the specifications resulting from the March 2001 TSG meetings.
- 3) With "track changes" disabled, paste the entire CR form (use CTRL-A to select it) into the specification just in front of the clause containing the first piece of changed text. Delete those parts of the specification which are not relevant to the change request.

8.8 Void lu Bearer Plane release procedure

A RNC triggers the Iu Bearer Plane release procedure if the RNC has no further use for the user plane (i.e. no UEs left in the coverage area of the RNC or session stop) (hysterisis mechanisms can be used in the RNC to avoid continuous Bearer plane establishments and releases).

8.9 Void RAN Resource Setup

Editor's note: The content of this subclause is dependent on ongoing work in RAN groups. The main focus of this section should be on the externally observable behaviour of the RAN (as seen from the Iu interface) and aspects that have direct impact on CN procedures. This subclause should in particular describe which of the SRNC, DRNC or CRNC is responsible for MBMS data distribution depending on whether ptp or ptm distribution has been selected.]

New York, USA									CR-Form-v7
CHANGE REQUEST									
×	23.	246 C	R 22	жrev	2	ж	Current vers	6.0.0	#
For <u>HELP</u> on using this form, see bottom of this page or look at the pop-up text over the % symbols.									
Proposed change	e affects	s: UIC	C apps#	ME	(Ra	dio A	ccess Netwo	rk Core N	Network X
Title:	₩ Veri	fication o	f UE bearer	capabilities					
Source:	∺ Sien	nens							
Work item code:	₩ <mark>MBN</mark>	ИS					<i>Date:</i> ∺	26/11/2003	
Category:	Ж В						Release: %	Rel-6	
,		ne of the i	following cate	gories:			Use <u>one</u> of 2	the following re (GSM Phase 2	
	A	(corresp	onds to a cor	rection in an ea	arlier r	eleas	e) R96	(Release 1996	ś)
			n of feature), nal modificatio	on of feature)			R97 R98	(Release 1997 (Release 1998	
	E) (editoria	l modification) ·			R99	(Release 1999	,
				above categorie	es car	1	Rel-4	(Release 4)	
	be fou	ina in 3GF	PP <u>TR 21.900</u>				Rel-5 Rel-6	(Release 5) (Release 6)	
								,	
Reason for chang	l I	QoS attrib MBMS be UE will be esult a us	ute values are arer services able to hand er might activ	e obviously not are provided w le any possible	fixed with dia MBN vices	for al ffering AS be that th	I MBMS beare g QoS values the arer QoS, e.g. a he UE can not	UE's bearer ca er services. And hen very likely any possible bit handle. Probab	d, when not every trate. As a
] ((It is propo QoS value upper limi capabilitie	sed to verify to s may change t of QoS valu s are defined	the UE's beare e per session it es used by the	r capa is nec MBM user s	bilitie essary IS bea service	es at MBMS my to verify the Urer service. The e and these cap	ulticast activati UE capabilities e required MB abilities need t activation.	with the MS bearer
	(ASC. As it ma					n before it is au psolete this poss	
Summary of char	nge: ₩	Addition	of UE MBM	S bearer capab	ility v	erifica	ation to MBMS	S activation pro	ocedure.
Consequences if not approved:	ж	The user	might activat	e MBMS servi	ces th	at the	UE can not ha	ndle.	
Clauses affected:	* ¥	6.2, 8.2							
olauses allecteu.	, and								
Other specs affected:	ж		her core spe st specificat		ж				

	X O&M Specifications
Other comments:	# Changes on 8.4 are merged into CR#20.

How to create CRs using this form:


- 1) Fill out the above form. The symbols above marked \(\mathcal{H} \) contain pop-up help information about the field that they are closest to.
- 2) Obtain the latest version for the release of the specification to which the change is proposed. Use the MS Word "revision marks" feature (also known as "track changes") when making the changes. All 3GPP specifications can be downloaded from the 3GPP server under ftp://ftp.3gpp.org/specs/ For the latest version, look for the directory name with the latest date e.g. 2001-03 contains the specifications resulting from the March 2001 TSG meetings.
- 3) With "track changes" disabled, paste the entire CR form (use CTRL-A to select it) into the specification just in front of the clause containing the first piece of changed text. Delete those parts of the specification which are not relevant to the change request.

6.2 MBMS Bearer Context

The MBMS Bearer Context, which is referred to as MBMS Service Context in RAN, contains all information describing a particular MBMS bearer of an MBMS service and is created in each node involved in the delivery of the MBMS data.

An MBMS Bearer Context is created in the SGSN and GGSN when the first MBMS UE Context is created in the node or when a downstream node requests it. The MBMS Bearer Context is statically configured in the BM-SC; how this is done is out of the scope of this specification. The MBMS Bearer Context is created in the SRNC when a first MBMS UE Context is created in SRNC. Session Start procedure may create MBMS Bearer Context in an RNC which has no MBMS Bearer Context yet. Furthermore, it is FFS whether the state model described below is applicable as such to the RAN or whether it needs to be extended to cover the case of the RAN properly.

An MBMS Bearer Context, once created, can be in one of two states reflecting the activity bearer plane resource status of the corresponding MBMS bearer-service.

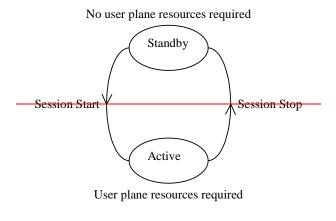

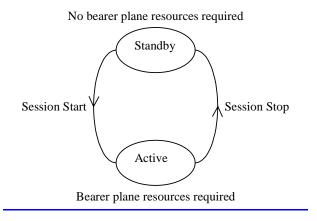


Figure 6: MBMS Bearer Context State Model

'Active' reflects the state of an MBMS Bearer Context in which userbearer plane resources are required in the network for the transfer of MBMS data. This state is maintained as long as there is a corresponding MBMS session ongoing.

'Standby' reflects the state of an MBMS Bearer Context in which no <u>userbearer</u> plane resources are required in the network for the transfer of MBMS data. This state is maintained as long as there is no corresponding MBMS session ongoing.

The content of the MBMS Bearer Context is described in Table 2.

Table 2: MBMS Bearer Context

Parameter	Description	RAN	SGSN	GGSN	BM-SC
IP multicast address	IP multicast address identifying the MBMS bearer described by this MBMS Bearer Context.	X	X	X	X
APN	Access Point Name on which this IP multicast address is defined.	Х	X	Х	FFS
TMGI	Temporary Mobile Group Identity allocated to the MBMS bearer-service.	Х	X	Х	X
State	State of activitybearer plane resources of the MBMS bearer ('standby' ('standby' or 'active') 'active')	FFS	X	Х	X
Required MBMS Bearer Capabilities	Minimum bearer capabilities the UE needs to support		X	X	X
QoS	Quality of Service required for the MBMS bearer- service.	Х	Х	Х	Х
MBMS Service Area	Area over which the MBMS <u>bearer</u> service has to be distributed.	Х	Х	Х	X
List of downstream nodes	List of downstream nodes that have requested the MBMS bearer service and to which notifications and MBMS data have to be forwarded.		Х	Х	Х
Number of UEs ¹⁾ (FFS)	Number of UEs hosted by the node that have joined the multicast MBMS bearer service.	FFS	Х	Х	FFS
FFS	FFS				

Editor's note 1: Number of UEs may be used to determine when the last UE leaves the node and/or for content-provider charging. The RAN knows how many UEs in RRC-CONNECTED mode are interested in a multicast service, however it does not know how many UEs in RRC-IDLE mode are interested in the service, hence the meaning and relevance of this parameter for the RAN are FFS.

8.2 MBMS Multicast Service Activation

The MBMS multicast service activation procedure registers the user in the network to enable the reception of data from a specific MBMS-multicast MBMS bearer service. The activation is a signalling procedure between the UE and the network. The procedure establishes MBMS UE contexts in UE, SGSN and GGSN and RNC for each activated MBMS multicast MBMS bearer service comparable to regular PDP contexts.

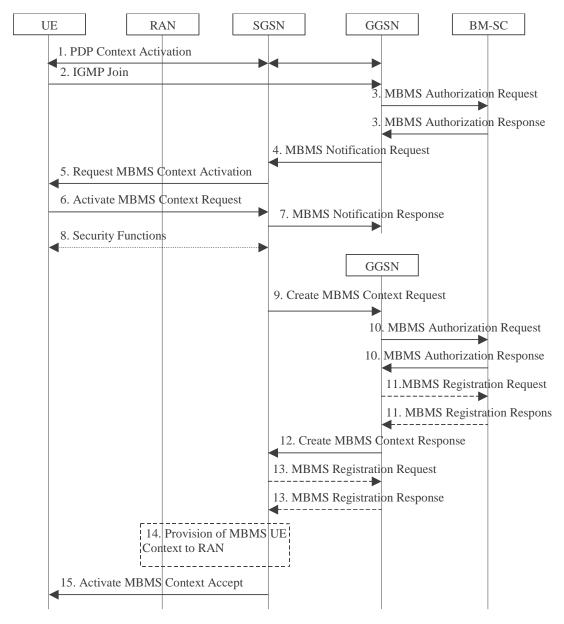


Figure 7: The activation of an MBMS multicast service

- The UE activates a default, typically best-effort PDP context if not already established. This can be a PDP
 context used for basic IP services like WAP or Internet access, or it might be the signalling PDP context used for
 IMS access.
- 2. The UE sends an IGMP (IPv4) or MLD (IPv6) Join message over the default PDP context to signal its interest in receiving a particular multicast MBMS bearer service identified by an IP multicast address.
- 3. The GGSN sends an MBMS Authorization Request seeking authorization for the activating UE to receive data. The authorization decision is provided in the MBMS Authorization Response together with the APN to be used for creation of the MBMS UE context. If the MBMS Authorization Response indicates that the UE is not authorized to receive the MBMS data the process terminates with no additional message exchange.
- 4. The GGSN receives the IGMP/MLD Join request and sends an MBMS Notification Request (IP multicast address, APN, Linked NSAPI) to the SGSN. Linked NSAPI is set equal to the NSAPI of the PDP context over which the Join request was received. The IP multicast address is the one requested by the UE in the Join request. The APN may be different from the APN to which the default PDP context has been activated. In any case, the APN may resolve to a GGSN that is different from the GGSN receiving the IGMP/MLD Join request. The

- GGSN starts a MBMS Activation Timer as GGSN may receive no response, e.g. in case SGSN or UE does not support MBMS.
- 5. The SGSN sends a Request MBMS Context Activation (IP multicast address, APN, Linked NSAPI) to the UE to request it to activate an MBMS context. Linked NSAPI allows the UE to associate the MBMS Context with the PDP context over which it sent the IGMP/MLD Join message in step 2.
- 6. The UE creates an MBMS UE context and sends an Activate MBMS Context Request (IP multicast address, APN. MBMS bearer capabilities) to the SGSN. The IP multicast address identifies the MBMS multicast service, which the UE wants to join/activate. An APN may indicate a specific GGSN. The MBMS bearer capabilities indicate the maximum QoS the UE can handle.
- 7. The SGSN sends a MBMS Notification Response (Cause) to the GGSN that sent the MBMS Notification Request, where Cause shall indicate successful or unsuccessful MBMS context activation for the reason of SGSN or UE (Cause is FFS). Upon reception of the response message with Cause indicating unsuccessful operation or time-out of the MBMS Activation Timer in the GGSN, the GGSN may fallback to IP multicast access as defined in 3GPP TS 29.061 [4].
- 8. Security Functions may be performed, e.g. to authenticate the UE.
- 9. It is FFS whether the SGSN performs a subscription check for the requested MBMS multicast bearer service identified by the IP multicast address and APN or whether another network entity performs this check. The SGSN creates an MBMS UE context and sends a Create MBMS Context Requests (IP multicast address, APN) to the GGSN.
- 10. The GGSN sends an MBMS Authorization Request seeking authorization for the activating UE to receive service data. The authorization decision is provided in the MBMS Authorization Response.
- 11. If the GGSN does not have the MBMS Bearer Context information for this MBMS bearer service, the GGSN sends a MBMS Registration Request to the BM-SC. See subclause "MBMS Registration Procedure".

If no TMGI has been allocated for this MBMS bearer service, the BM-SC will allocate a new TMGI. This TMGI will be passed to GGSN and SGSN via the MBMS Registration Response message and further to UE via Activate MBMS Context Accept message.

The BM-SC responds with a MBMS Registration Response containing the MBMS Bearer Context information for this MBMS bearer service and adds the identifier of the GGSN to the "list of downstream nodes" parameter in its MBMS Bearer Context. See subclause "MBMS Registration Procedure".

- 12. The GGSN creates an MBMS UE context and sends a Create MBMS Context Response to the SGSN.
- 13. If the SGSN does not have the MBMS Bearer Context information for this MBMS bearer service, the SGSN sends a MBMS Registration Request to the GGSN. See subclause "MBMS Registration Procedure".
 - The GGSN responds with a MBMS Registration Response containing the MBMS Bearer Context information for this MBMS bearer service and adds the identifier of the SGSN to the "list of downstream nodes" parameter in its MBMS Bearer Context. See subclause "MBMS Registration Procedure".
- 14. The SGSN provides RAN with the MBMS UE Context(s) if at least one PS RAB is established for the UE.
- 15. The SGSN sends an Activate MBMS Context Accept (MBMS bearer capabilities) to the UE. The SGSN does not need to wait for step 12 to be completed before sending this message. The MBMS bearer capabilities indicate the maximum QoS that is used by this MBMS bearer service and the UE may take it into account when further MBMS bearer services are activated. If the SGSN determines that the UE's MBMS bearer capabilities are lower than the Required MBMS Bearer Capabilities the SGSN rejects the request for activation of an MBMS context indicating an appropriate cause and starts the deactivation of the already established MBMS UE contexts.

Tdoc #S2-033962 (==S2-033401)

CR-Form-v7

CHANGE REQUEST

³ 23.246 CR 23

жrev

光 Current version:

6.0.0

For <u>HELP</u> on using this form, see bottom of this page or look at the pop-up text over the \mathbb{K} symbols.

Proposed change affects: UICC apps₩ ME X Radio Access Network X Core Network X

Title:	¥	Various corrections and clarifications		
Source:	#	Siemens		
Work item code:	æ	MBMS	Date: ₩	22/10/2003
Category:	\mathbb{H}	F	Release: ₩	Rel-6
		Use <u>one</u> of the following categories:	ollowing categories: Use <u>one</u> of the following rele	
		F (correction)	2	(GSM Phase 2)
		A (corresponds to a correction in an earlier release)	R96	(Release 1996)
		B (addition of feature),	R97	(Release 1997)
		C (functional modification of feature)	R98	(Release 1998)
		D (editorial modification)	R99	(Release 1999)
		Detailed explanations of the above categories can	Rel-4	(Release 4)
		be found in 3GPP TR 21.900.	Rel-5	(Release 5)
			Rel-6	(Release 6)

Reason for change: #	Version 6.0.0 does not differentiate between MBMS user and bearer service. Corrections
	and clarifications in many places are required. Application replaced by MBMS user service.
	Mostly "bearer plane" is used. A few occurrences of the synonym "user plane" need to be changed to "bearer plane".
	4.4.1.6 allows seesion start to coincide with sending of first packets. Contradicts to 4.4.2.5 and should be removed. 4.4.2.5 describes session start without Gmb signalling. Not in line with 4.4.2.6 and session start procedere. Session start without Gmb signalling should be removed.
	5.5 QoS negotiation by GGSN contradicts to QoS clause.
	Alignment of a number of different terms for "MBMS service area".
	6.3.1 rather hints that there are no QoS negotiation possibilities. It should be clearly expressed that such negotiation is not possible.
	8.2 MBMS multicast service activation: service data is not defined but also not needed there.
Summary of change: ₩	Various corrections and clarifications.

Clauses affected: # all

Consequences if

not approved:

Inconsistencies and ambiguities that may cause problems and errors in stage 3 work.

		Υ	N			
Other specs affected:	¥		XXX	Other core specifications Test specifications O&M Specifications	\mathfrak{R}	
Other comments:	¥					

How to create CRs using this form:

Comprehensive information and tips about how to create CRs can be found at http://www.3gpp.org/specs/CR.htm. Below is a brief summary:

- 6. Fill out the above form. The symbols above marked % contain pop-up help information about the field that they are closest to.
- 6. Obtain the latest version for the release of the specification to which the change is proposed. Use the MS Word "revision marks" feature (also known as "track changes") when making the changes. All 3GPP specifications can be downloaded from the 3GPP server under tp://ftp.3gpp.org/specs/ For the latest version, look for the directory name with the latest date e.g. 2001-03 contains the specifications resulting from the March 2001 TSG meetings.
- 6. With "track changes" disabled, paste the entire CR form (use CTRL-A to select it) into the specification just in front of the clause containing the first piece of changed text. Delete those parts of the specification which are not relevant to the change request.

3GPP TS 23.246 V.6.0.0 (2003-09)

Technical Specification

3rd Generation Partnership Project;
Technical Specification Group Services and System Aspects;
Multimedia Broadcast/Multicast Service (MBMS);
Architecture and functional description
(Release 6)



The present document has been developed within the 3rd Generation Partnership Project (3GPP TM) and may be further elaborated for the purposes of 3GPP.

Keywords 3GPP, MBMS

3GPP

Postal address

3GPP support office address

650 Route des Lucioles - Sophia Antipolis Valbonne - FRANCE Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Internet

http://www.3gpp.org

Copyright Notification

No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

Contents

Forew	ord	/
1	Scope	8
2	References	8
2	Definitions and abbreviations	
	Definitions	
3.2	Abbreviations	
4	MBMS Architecture	9
4.1	Overview	9
4.2	Reference Architecture Model	.10
4.3	MBMS Specific Reference points	.10
4.3.1	Gmb	.10
4.3	MBMS Service Provision	.11
4.4.1	MULTICAST MODE	
4.4.1.1	1 · · · · · · · · · · · · · · · · · · ·	
4.4.1.2		
4.4.1.3	8	
4.4.1.4		
4.4.1.5		
4.4.1.6		
4.4.1.7		
4.4.1.8	6	
4.4.2	Multicast Mode timeline	
4.4.2.1		
4.4.2.2	\mathbf{I}	
4.4.2.3	$oldsymbol{artheta}$	
4.4.2.4		
4.4.2.5		
4.4.2.6	· · · · · · · · · · · · · · · · · · ·	
4.4.3	BROADCAST MODE	
4.4.3.1		
4.4.3.2		
4.4.3.3		
4.4.3.4		
4.4.3.5		
4.4.4	Broadcast Mode timeline	
4.4.4.1		
4.4.4.2		
4.4.4.3	Period between Session Start and Session Stop	. 1
5	Functional Entities To Support MBMS	17
	Broadcast-Multicast Service Centre (BM-SC)	
5.1.1	Content Provider Authentication, Authorization and Charging	
5.1.2	MBMS Transport	.1
5.1.3	MBMS Transmissions	
5.1.4	Service Advertisement and Description	.18
5.2	User Equipment	.18
5.3	UTRAÑ/ĜERAN	.18
5.4	SGSN	.19
5.5	GGSN	.19
5.6	MBMS Data Sources and Content Provider	.19
5.7	Optional Functional Element	
5.7.1	CSE	
5.7.2	CBC	
573	OSA-SCS	10

6	MBMS attributes and Parameters	20
6.1	MBMS UE Context	20
6.2	MBMS Bearer Context	20
6.3	Quality-of-Service	22
6.3.1	MBMS QoS distribution tree	23
6.4	Temporary Mobile Group Identity	23
8	MBMS Procedures	23
8.1	MBMS Notification	23
8.2	MBMS Multicast Service Activation	23
8.3	MBMS Session Start Procedure	25
8.4	MBMS Registration Procedure	26
8.5	MBMS Session Stop Procedure	28
8.6	MBMS De-Registration Procedure	28
8.6.1	BM-SC initiated MBMS De-Registration Procedure	
8.7	MBMS Multicast Service Deactivation	31
8.8	Iu Bearer Plane release procedure	32
8.9	RAN Resource Setup	
8.10	Inter SGSN Routeing Area Update	
8.11	Inter SGSN Serving RNS Relocation Procedure	
8.12	MBMS Broadcast Service Activation	
8.13	MBMS Broadcast service de-activation	
8.14	MBMS Broadcast Session Start Procedure	36
9	Security	37
10	Charging requirement	37
Anne	ex A (Informative): Information flows	38
A.1	General information flow	38
Anne	ex B (Informative): Change history	39

Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

1 Scope

The present document describes the stage 2 description_(architectural solution and functionalities) for MBMS, which includes the elements necessary to realise the stage 1 requirements in 3GPP TS 22.146 [2].

The present document includes information applicable to network operators, service providers and manufacturers.

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document in the same Release as the present document.
- [1] 3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
- [2] 3GPP TS 22.146: "Multimedia Broadcast/Multicast Service; Stage 1".
- [3] 3GPP TS 23.107: "Quality of Service (QoS) concept and architecture".
- [4] 3GPP TS 29.061: "Interworking between the Public Land Mobile Network (PLMN) supporting packet based services and Packet Data Networks (PDN)".

3 Definitions and abbreviations

3.1 Definitions

For the purposes of the present document, the terms and definitions defined in 3GPP TS 21.905 [1] and 3GPP TS 22.146 [2] and the following apply:

MBMS Service Announcement: Mechanism to allow users to be informed about the MBMS user services available.

MBMS Bearer Service: the service provided by the PS Domain to MBMS User Services to deliver IP multicast datagrams to multiple receivers using minimum network and radio resources.

MBMS User Service: the MBMS service provided to the end user by means of the MBMS Bearer Service and possibly other capabilities.

MBMS Service Area: The area in which a specific MBMS Bearer Service is available. It is defined individually per MBMS Bearer Service.

3.2 Abbreviations

For the purposes of the present document, the abbreviations in 3GPP TS 21.905 [1] and 3GPP TS 22.141 [2] apply.

4 MBMS Architecture

4.1 Overview

MBMS is a point-to-multipoint service in which data is transmitted from a single source entity to multiple recipients. Transmitting the same data to multiple recipients allows network resources to be shared.

The MBMS bearer service offers two modes:

- Broadcast Mode
- Multicast Mode

MBMS architecture enables the efficient usage of radio-network and core-network resources, with an emphasis on radio interface efficiency.

MBMS is realised by the addition of a number of new capabilities to existing functional entities of the 3GPP architecture and by addition of a number of new functional entities.

The existing PS Domain functional entities (GGSN, SGSN, UTRAN, GERAN and UE) are enhanced to provide the -MBMS Bearer Service-. In the user-bearer plane, this service provides delivery of IP Multicast datagrams from the Gi reference point to UEs with a specified Quality of Service. In the control plane, this service provides mechanisms for:


- managing the MBMS bearer service activation status of UEs (in the case of multicast) mode)
- outsourcing authorisation decisions to the MBMS User Service (i.e. to the BM-SC) (in the case of multicast) mode)
- providing control of session initiation/termination by the MBMS User Service and managing bearer resources for the distribution of MBMS data (in the case or multicast and broadcast modes)

A particular instance of the MBMS Bearer Service is identified by an IP Multicast Address and an APN Network Identifier.

The boundary of the MBMS Bearer Service is the Gmb and Gi reference points as shown in Section 4.3 below. The former provides access to the control plane functions and the latter the user bearer plane.

A functional entity, the Broadcast Multicast Service Centre (BM-SC) provides a set of functions for MBMS User Services. BM-SC functions for different MBMS User Services may be supported from the same or different physical network elements.

4.2 Reference Architecture Model

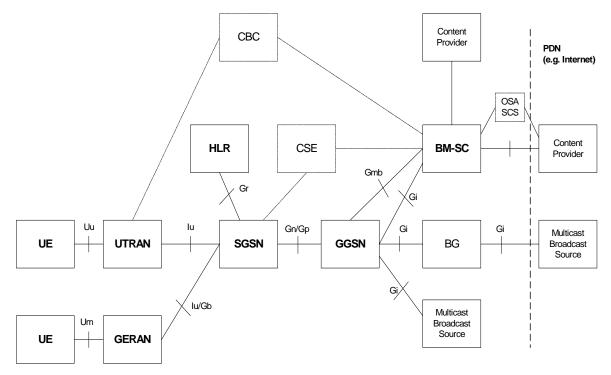

Note: dotted lines means functions / reference points that are FFS. Gp applies only when SGSN and GGSN are in different PLMN.

Figure 1: Reference architecture to support MBMS

4.3 MBMS Specific Reference points

4.3.1 Gmb

Signalling between GGSN and BM-SC is exchanged at Gmb reference point. This represents the network side boundary of the MBMS Bearer Service from a control plane perspective. This includes user specific MBMS Gmb signalling and MBMS bearer service specific signalling.

MBMS <u>bearer</u> service specific Gmb signalling:

- The GGSN establishes the MBMS bearer context and registers at BM-SC.
- The GGSN or the BM-SC releases the MBMS bearer context and de-register the GGSN from the BM-SC.
- The BM-SC indicates session start and stop to the GGSN including session attributes like QoS or multieastMBMS service area.

User specific Gmb signalling:

- The BM-SC authorises the user specific MBMS multicast service activation (join) at the GGSN.
- The GGSN reports to the BM-SC the successful user specific MBMS multicast activation (join) to allow the BM-SC to synchronise the BM-SC UE MBMS context and charging with the MBMS UE contexts in SGSN and GGSN.
- The GGSN reports to the BM-SC when a user specific MBMS multicast service is released or deactivated (e.g.
 when the radio contact is lost) to synchronise BM-SC UE MBMS contexts and charging with the MBMS UE
 contexts in SGSN and GGSN.

The BM-SC initiates the deactivation of -a user specific MBMS multicast bearer service when the MBMS user service is terminated at application layer.

4.43 MBMS Service Provision

4.4.1 MULTICAST MODE

Reception of an MBMS MULTICAST service is enabled by certain procedures that are illustrated in the Figure below.

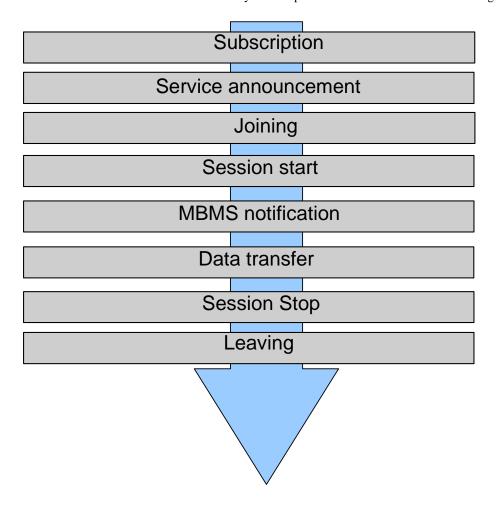


Figure 2: Phases of MBMS Multicast service provision

The phases subscription, joining and leaving are performed individually per user. The other phases are performed for a service, i.e. for all users interested in the related service. The sequence of phases may repeat, e.g. depending on the need to transfer data. Also subscription, joining, leaving, service announcement as well as MBMS notification may run in parallel to other phases.

This is illustrated with the following example of timeline:

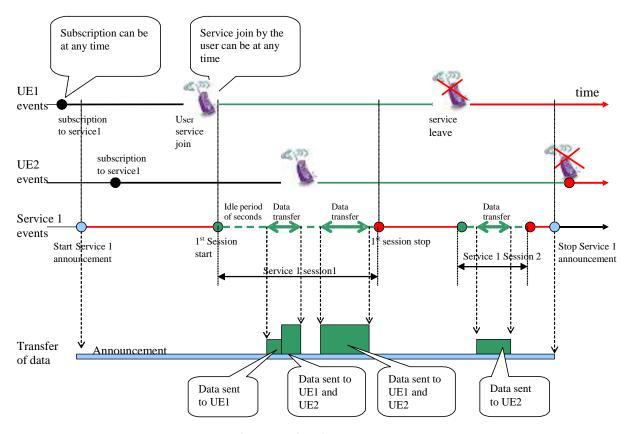


Figure 3: Timeline example

4.4.1.1 Subscription

Establishes the relationship between the user and the service provider, which allows the user to receive the related MBMS multicast service.

Service Subscription is the agreement of a user to receive service(s) offered by the operator. Subscription information is recorded in the appropriate database(s) in the operator's network.

4.4.1.2 Service announcement

MBMS <u>user</u> service announcement/discovery mechanisms shall allow users to request or be informed about the range of MBMS <u>user</u> services available. This includes operator specific MBMS <u>user</u> services as well as services from content providers outside of the PLMN. Service announcement is used to distribute to users information about the service, parameters required for service activation (e.g. IP multicast address) and possibly other service related parameters (e.g. service start time).

Operators/service providers may consider several service discovery mechanisms. This could include standard mechanisms such as SMS, or depending on the capability of the terminal, applications that encourage user interrogation. The method chosen to inform users about MBMS <u>user</u> services may have to account for the <u>usersuser's</u> location, (e.g. current cell, in the HPLMN or VPLMN). Users who have not already subscribed to a MBMS <u>user</u> service should also be able to discover MBMS <u>user</u> services.

The following could be considered useful for MBMS user service announcement mechanisms (not exhaustive): -

- CBS
- MBMS Broadcast mode to advertise MBMS Multicast and Broadcast user Services
- MBMS Multicast mode to advertise MBMS Multicast user Services

- PUSH mechanism (WAP, SMS-PP, MMS)
- URL (HTTP, FTP)

The details of the MBMS service announcement mechanisms are not specified, but MBMS shall allow the utilisation of solutions using IETF protocols.

4.4.1.3 Joining

Joining (i.e. MBMS multicast activation by the user) is the process by which a subscriber joins (becomes a member of) a multicast group, i.e. the user indicates to the network that he/she is willing to receive Multicast mode data of a specific MBMS bearer service.

4.4.1.4 Session Start

Session Start is the point at which the BM-SC is ready to send data. This can be identified with the start of a "Multicast session" as defined in the Stage 1. Session Start occurs independently of activation of the service by the user – i.e. a given user may activate the service before or after Session Start. Session Start is the trigger for network resources bearer resource establishment for MBMS data transfer.

4.4.1.5 MBMS notification

Informs the UEs about forthcoming (and potentially about ongoing) MBMS multicast data transfer.

4.4.1.6 Data transfer

Is It is the phase when MBMS data are transferred to the UEs. Arrival of the first packet at the GGSN may coincide with Session Start.

4.4.1.7 Session Stop

Is It is the point at which the BM-SC determines that there will be no more data to send for some period of time – this period being long enough to justify removal of network bearer resources associated with the session. At Session Stop, the network bearer resources are released.

4.4.1.8 Leaving

Leaving (i.e. MBMS multicast deactivation by the user) is the process by which a subscriber leaves (stops being a member of) a multicast group, i.e. the user no longer wants to receive Multicast mode data of a specific MBMS bearer service

4.4.2 Multicast Mode timeline

4.4.2.1 Period between Service Announcement and Session Start

The service announcement may contain a schedule of Session Start times and may be sent some time before the service is due to start. So, this time period could be hours, days or even weeks.

4.4.2.2 Period between Service Announcement and Service Subscription

Service Subscription can be done anytime before or after Service announcement.

4.4.2.3 Period between Service Announcement and Joining

The Joining time is chosen by the user possibly in response to a Service Announcement. Users will typically join at the time of their choosing so that the period between announcement and joining may be very long or very short.

4.4.2.4 Period between Joining and Session Start

Some <u>MBMS bearer</u> services may be 'always on'. In this case, Joining can take place starting immediately after Service Announcement and possibly many hours before, or after, Session Start.

In other cases, if a Session Start time is known, Joining may take place immediately before Session Start or after Session Start. For these services, the announcement may contain some indication of a time period within which users should choose a time to Join the <u>MBMS bearer</u> service.

4.4.2.5 Period between Session Start and First Data Arrival

Session Start indicates that the transmission is about to start. The time delay between a Session Start indication and actual data should be long enough for the network actions required at Session Start to take place e.g. provision of service information to the UTRAN, establishment of the <u>userbearer</u> plane.

Session Start may be triggered by an explicit notification from the BM-SC-or by first data arrival at the GGSN. In the case of user-bearer plane resources, which are set-up after the start of session data transmission, the network is not required to buffer the session data and loss of data can be assumed.

4.4.2.6 Period between Session Start and Session Stop

When the BM-SC knows that there is no more data to be sent for a "long idle period", it should indicate Session Stop to the network, causing the release of <u>networkbearer</u> resources. However, if this idle period with no data is short, this may not be appropriate as it brings more signalling and processing.

There is no absolute value on the duration of this "long idle period". The order of magnitude (i.e. is it closer to 30 seconds or 30 minutes) is to be defined taking into account UTRAN constraints.

4.4.3 BROADCAST MODE

An example for the phases of MBMS broadcast service provision is described in the figure below:

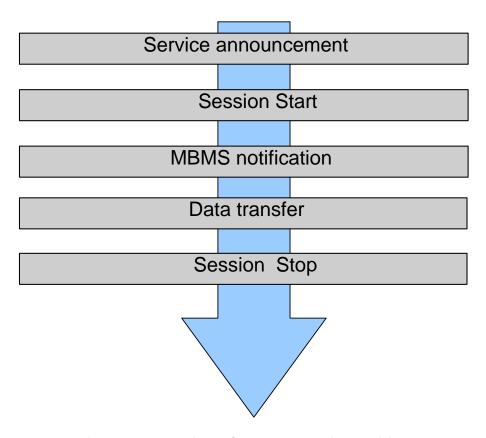


Figure 4: Phases of MBMS broadcast service provision

The sequence of phases may repeat, e.g. depending on the need to transfer data. It is also possible that the service announcement and MBMS notification phase may run in parallel with other phases, in order to inform UEs which have not yet received the related service.

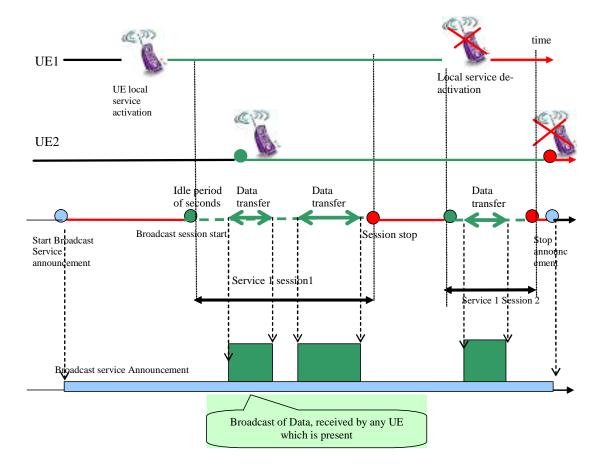


Figure 5: Broadcast service timeline

4.4.3.1 Service announcement

Informs UEs about forthcoming MBMS user services. Also see section on Multicast mode (4.4.1.2)

4.4.3.2 Session Start

Session Start is the point at which the BM-SC is ready to send data. This can be identified with the start of a "Broadcast session" as defined in the Stage 1. Session Start occurs independently of Service Activation by the user – i.e. a given user may activate the service before or after the start of the session. Session Start is the trigger for network resources bearer resource establishment for MBMS data transfer.

4.4.3.3 MBMS notification

Informs the UEs about forthcoming (and potentially about ongoing) MBMS broadcast data transfer.

4.4.3.4 Data transfer

Les It is the phase when MBMS data are transferred to the UEs.

4.4.3.5 Session Stop

Is is the point at which the MBMS application user service determines that there will be no more data to send for some period of time – this period being long enough to justify removal of network bearer resources associated with the service. At Session Stop, the network bearer resources are released.

4.4.4 Broadcast Mode timeline

4.4.4.1 Period between Service Announcement and Session Start

Same as for Multicast mode.

4.4.4.2 Period between Session Start and First Data Arrival

Same as for Multicast mode.

4.4.4.3 Period between Session Start and Session Stop

Same as for Multicast mode.

5 Functional Entities To Support MBMS

To provide MBMS <u>bearer</u> services existing functional entities, GGSN, SGSN, RNC/BSC, perform several MBMS related functions and procedures, some of which are specific to MBMS. An MBMS specific functional entity – Broadcast Multicast Service Centre (BM-SC) supports various MBMS <u>user service</u> specific service provisioning and delivery.

5.1 Broadcast-Multicast Service Centre (BM-SC)

The BM-SC provides functions for <u>MBMS user</u> service provisioning and delivery. It may serve as an entry point for content provider MBMS transmissions, used to authorise and initiate MBMS Bearer Services within the PLMN and can be used to schedule and deliver MBMS transmissions.

The BM-SC is a functional entity, which must exist for each MBMS User Service.

This section describes BM-SC functions, which are defined for the standardised MBMS User Services. Which of these functions are provided as general purpose capabilities to be used by multiple MBMS User Services and which are specific to a particular MBMS User Service is defined in conjunction with the definition of the standardised MBMS User Services.

5.1.1 Content Provider Authentication, Authorization and Charging

The BM-SC shall be able to authenticate 3rd party content providers, providing content for MBMS transmissions.

3rd party content providers may wish to initiate an MBMS transmission. In such cases, the BM-SC shall be able to authorize content providers to transmit data over MBMS <u>bearer services</u> depending on operator policy.

The BM-SC shall be able to verify the integrity of data received from content providers.

The BM-SC shall be able to generate charging records for content provider transmitted data.

5.1.2 MBMS Transport

The BM-SC shall be able to provide the GGSN with transport associated parameters such as quality-of-service and multicast/broadcastMBMS service area.

The BM-SC shall be able to initiate and terminate MBMS transport bearer resources prior to and following transmission of MBMS data.

5.1.3 MBMS Transmissions

The BM-SC should be able to accept content from external sources and transmit it using error resilient schemes (e.g. specialized MBMS codecs).

Further, the BM-SC might be used to schedule MBMS session transmissions, retrieve content from external sources and provide this content using MBMS transport resources. bearer services.

The BM-SC should be able to schedule <u>MBMS</u> session retransmissions, and label each <u>MBMS</u> session with an MBMS Session Identifier to allow the UE to distinguish the <u>MBMS</u> session retransmissions. These retransmissions are transparent to the RAN and MBMS user service.

5.1.4 Service Advertisement and Description

The BM-SC shall be able to provide service announcements for multicast and broadcast MBMS user services.

The BM-SC shall be able to provide the UE with media descriptions specifying the media to be delivered as part of an MBMS <u>user service</u> (e.g. type of video and audio encodings).

The BM-SC shall be able to provide the UE with <u>MBMS</u> session descriptions specifying the <u>MBMS</u> sessions to be delivered as part of an MBMS <u>user service</u> (e.g. multicast service identification, addressing, time of transmission, etc.)

The BM-SC shall be able to deliver media and session descriptions by means of service announcements using IETF specified protocols over MBMS multicast and broadcast bearer services.

5.2 User Equipment

The UE shall support functions for the activation/deactivation of the MBMS bearer service.

Once a particular MBMS bearer service is activated, no further explicit user request is required to receive MBMS data although the user may be notified that data transfer is about to start.

The UE shall support security functions as appropriate for MBMS.

The UE should, depending on terminal capabilities, be able to receive MBMS <u>user</u> service announcements, paging information (non MBMS specific) or support simultaneous services (For example the user can originate or receive a call or send and receive messages whilst receiving MBMS video content). Reception of this paging or announcements may however, create losses in the MBMS data reception. The MBMS <u>applicationuser service</u> should be able to cope with such losses.

Some UE depending upon terminal capability, may be able to store MBMS data. (This may involve DRM but this is out of scope of this specification).

The MBMS Session Identifier contained in the notification to the UE shall enable the UE to decide whether it needs to ignore the forthcoming transmission of MBMS session (e.g., because the UE has already received this MBMS session).

5.3 UTRAN/GERAN

UTRAN/GERAN are responsible for efficiently delivering MBMS data to the designated multicast or broadcast MBMS service area.

Efficient delivery of MBMS data in multicast mode may require mechanisms in the UTRAN/GERAN. E.G. The e.g. the number of users within a cell prior to and during MBMS transmission could be used to choose an appropriate radio bearer.

MBMS transmissions may be initiated and terminated intermittently. The UTRAN/GERAN shall support the initiation and termination of MBMS transmissions by the core-network. Further, the UTRAN/GERAN shall be able to receive MBMS data from the core-network over Iu bearers shared by many UEs.

The UTRAN/GERAN shall support intra-RNC/BSC, inter-RNC/BSC mobility of MBMS receivers. Mobility is expected to cause limited data loss. Therefore, MBMS applications—user services should be able to cope with potential data loss caused by UE mobility.

The UTRAN/GERAN shall be able to transmit MBMS <u>user</u> service announcements, paging information (non MBMS specific) and support other services in parallel with MBMS (<u>Forfor</u> example <u>Depending</u>depending on terminal capabilities the user could originate or receive a call or send and receive messages whilst receiving MBMS video content).

5.4 SGSN

The SGSN role within MBMS architecture is to perform user individual network—MBMS bearer service_control functions and to provide MBMS transmissions to UTRAN/GERAN.

The SGSN shall provide support for intra-SGSN and inter-SGSN mobility procedures. Specifically this requires the SGSN to store a user-specific MBMS <u>UE</u> context for each activated multicast <u>MBMS bearer</u> service and to pass these contexts to the new SGSN during inter-SGSN mobility procedures.

The SGSN shall be able to generate charging data per multicast <u>MBMS bearer</u> service for each user. Further, the SGSN may provide functions to support the charging of -prepaid users.

The SGSN shall be able to establish Iu and Gn bearers shared by many users on demand when data has to be transferred to the users. This shall be done upon notification from the GGSN. Likewise, when data is no longer available the SGSN shall be able to tear down these bearers upon notification from the GGSN.

5.5 GGSN

The GGSN role within the MBMS architecture is to serve as an entry point for IP multicast traffic as MBMS data. Upon notification from the BM-SC the GGSN shall be able to request the establishment of a <u>user-bearer</u> plane for a broadcast or multicast MBMS transmission. Further, upon BM-SC notification the GGSN shall be able to tear down the established <u>user-bearer</u> plane. <u>User-Bearer</u> plane establishment for multicast services is carried out towards those SGSNs that have requested to receive transmissions for the specific multicast <u>MBMS</u> bearer service.

The GGSN shall be able to receive IP multicast traffic (whether from BM-SC or other data sources) and to route this data to the proper GTP tunnels set-up as part of the MBMS bearer service.

Other functions to note here that GGSN may provide in support of MBMS bearer service but not exclusive to MBMS are:

- Message Screening (not needed if the MBMS sources are internal in the PLMN);
- Charging Data Collection;
- Service (QoS) negotiation.

5.6 MBMS Data Sources and Content Provider

The reference point from the content provider to the BM-SC is not standardised.

5.7 Optional Functional Element

NOTE: The following are FFS.

5.7.1 CSE

The SGSN may use CAMEL to handle pre-paid services, e.g. credit checking for on-line charging.

5.7.2 CBC

The Cell Broadcast Centre (CBC) may be used to announce MBMS user services to the users.

5.7.3 OSA-SCS

The BM-SC might use OSA-SCS to interact with third parties.

6 MBMS attributes and Parameters

6.1 MBMS UE Context

The MBMS UE Context contains UE-specific information related to a particular MBMS bearer <u>service</u> that the UE has joined. An MBMS UE Context is created in the UE, SGSN and GGSN when the UE joins an MBMS bearer <u>service</u>. In the SGSN, an MBMS UE Context is also created as a result of an inter-SGSN routing area update after the transfer of the MBMS UE Context from the old SGSN. It is FFS whether MBMS UE Contexts are created in the BM-SC.

All MBMS UE Contexts of a UE (referenced as "UE Link" in RNC) are provided via UE dedicated Iu procedure(s) to the SRNC when the first PS RAB is established for the UE, or when the UE performs MBMS Multicast Service Activation. MBMS UE Contexts are provided to the SRNC regardless whether MBMS Sessions are ongoing or not (i.e. before, between and after Sessions).

In the UE, SGSN and GGSN, the MBMS UE Context is stored as part of the MM Context for the UE. There is one MBMS UE Context per MBMS bearer service that the UE has joined.

In the RNC, the MBMS UE Contexts are stored as part of the UE Context of the RNC.

The content of the MBMS UE Context is described in Table 1.

GGSN **Parameter** Description UE SGSN **RNC BM-SC** IP multicast address IP multicast address identifying an MBMS bearer Χ Χ Χ Χ that the UE has joined. APN Χ Χ Χ Χ Access Point Name on which this IP multicast address is defined. **FFS** TMGI FFS Temporary Mobile Group Identity allocated to the Χ Χ Χ MBMS bearer. Linked NSAPI NSAPI of the PDP context used by the UE to carry X Χ X IGMP/MLD signalling. **FFS FFS**


Table 1: MBMS UE Context

6.2 MBMS Bearer Context

The MBMS Bearer Context, which is referred to as MBMS Service Context in RAN, contains all information describing a particular MBMS bearer of an MBMS service and is created in each node involved in the delivery of the MBMS data.

An MBMS Bearer Context is created in the SGSN and GGSN when the first MBMS UE Context is created in the node or when a downstream node requests it. The MBMS Bearer Context is statically configured in the BM-SC; how this is done is out of the scope of this specification. The MBMS Bearer Context is created in the SRNC when a first MBMS UE Context is created in SRNC. Session Start procedure may create MBMS Bearer Context in an RNC which has no MBMS Bearer Context yet. Furthermore, it is FFS whether the state model described below is applicable as such to the RAN or whether it needs to be extended to cover the case of the RAN properly.

An MBMS Bearer Context, once created, can be in one of two states reflecting the activity bearer plane resource status of the corresponding MBMS bearer-service.

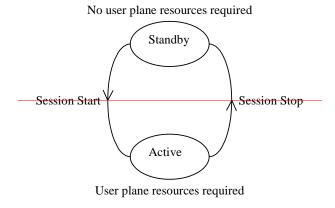

Session Start

Session Start

Active

Bearer plane resources required

Figure 6: MBMS Bearer Context State Model

'Active' reflects the state of an MBMS Bearer Context in which <u>userbearer</u> plane resources are required in the network for the transfer of MBMS data. This state is maintained as long as there is a corresponding MBMS session ongoing.

'Standby' reflects the state of an MBMS Bearer Context in which no <u>userbearer</u> plane resources are required in the network for the transfer of MBMS data. This state is maintained as long as there is no corresponding MBMS session ongoing.

The content of the MBMS Bearer Context is described in Table 2.

Parameter	Description	RAN	SGSN	GGSN	BM-SC
IP multicast address	IP multicast address identifying the MBMS bearer described by this MBMS Bearer Context.	Х	X	Х	X
APN	Access Point Name on which this IP multicast address is defined.	Х	Х	Х	FFS
TMGI	Temporary Mobile Group Identity allocated to the MBMS bearer, service.	Х	Х	Х	Х
State	State of activitybearer plane resources of the MBMS bearer ('standby' ('standby' or 'active')' (active')	FFS	X	Х	Х
QoS	Quality of Service required for the MBMS bearer- service.	Х	X	Х	X
MBMS Service Area	Area over which the MBMS <u>bearer</u> service has to be distributed.	Х	X	Х	X
List of downstream nodes	List of downstream nodes that have requested the MBMS bearer service and to which notifications and MBMS data have to be forwarded.		Х	Х	X
Number of UEs ¹⁾ (FFS)	Number of UEs hosted by the node that have joined the multicast MBMS bearer service.	FFS	Х	Х	FFS
FFS	FFS				

Table 2: MBMS Bearer Context

Editor's note 1: Number of UEs may be used to determine when the last UE leaves the node and/or for content-provider charging. The RAN knows how many UEs in RRC-CONNECTED mode are interested in a multicast service, however it does not know how many UEs in RRC-IDLE mode are interested in the service, hence the meaning and relevance of this parameter for the RAN are FFS.

6.3 Quality-of-Service

It shall be possible for the network to control quality-of-service parameters for <u>sessions of multicast</u> and broadcast <u>sessions.MBMS bearer services.</u> All QoS attributes described in [3] are applicable to MBMS-<u>bearer services.</u> Compared to point-to-point bearer services the following limitations exist:

- For **traffic class**, only the background and streaming classes shall be supported.
- For **SDU error ratio**, only higher values are supported, i.e. the values describing higher numbers of lost or corrupted SDUs (actual values are FFS).

MBMS bearers bearer services of background class are best suited for the transport of MBMS user services such as messaging or downloading. As for point-to-point bearers bearer services, the network should, as far as possible, avoid dropping packets transported by a background class bearer, service. Instead, buffering and shaping schemes should be applied to the traffic flow to adapt to the available resources and changing network conditions. The total transfer time is not critical for background class bearers bearer services since the content must normally have been received in totality and stored in the UE before the user can access it.

MBMS bearers bearer services of streaming class are best suited for the transport of MBMS user services such as streaming. As for point-to-point bearers bearer services, the network should minimise the packet transfer delay of streaming class bearers bearer services as far as possible. Packet dropping should be the preferred traffic conditioning action applied to the traffic flow to adapt to the available resources.

MBMS user services that would normally use MBMS bearers bearer services of background class may however need to use a streaming class MBMS bearer, service. This will allow to transfer each MBMS data unit at almost the same point in time in all cells of the MBMS service area, as otherwise UEs moving between cells while an MBMS session is ongoing may experience high packet loss due to possible time offsets of the data transmission between cells. The amount of packet loss depends on this time offset, the cell change time and the bitrate in particular. Otherwise the MBMS user service will have to provide sufficient redundancy within the data to be able to cope with the high packet loss.

As the MBMS bearer <u>service</u> transfers data to many UEs in parallel and because of the lack of feedback channel on radio level low SDU error ratios are difficult to achieve. When the resulting packet error ratio is not suitable for the <u>application-MBMS user service</u> or when prevention of data loss is required, an MBMS user service may perform retransmission of MBMS data over point-to-point PDP bearer services on request from the receiver.

6.3.1 MBMS QoS distribution tree

MBMS data will be distributed to multiple users through a MBMS distribution tree that can go through many RNCs-and many SGSNs-and one or more GGSNs. Furthermore some transportbearer resources may be shared between many users accessing the same MBMS bearer service in order to save resources. As a result, each branch of a MBMS distribution tree shall be established with the same QoS.

MBMS distribution tree shall have the same QoS for all its branches.

When a branch of the MBMS distribution tree has been created, it should not be possible for construction of another branch (e.g. due to arrival of a new UE (or change of location of a UE with removal of a branch and addition of a new one) to impact the QoS of already established branches.

<u>There is no QoS</u> value negotiation between UMTS network elements—is not required... This imply that some branches may not be established if QoS requirement cannot be accepted by the concerned network node.

Also in RAN there is no QoS (re-)negotiation feature in-for the RNC should not be allowed for MBMS bearer service.

6.4 Temporary Mobile Group Identity

Temporary Mobile Group Identity (TMGI) is used for group MBMS notification purpose. The BM-SC will-allocates a TMGI per MBMS bearer service that is unique within HPLMN. For Multicast Service MBMS bearer services the TMGI will be transmitted to UE via service activation procedure.

8 MBMS Procedures

8.1 MBMS Notification

When <u>an MBMS</u> Session starts, UEs interested in the <u>MBMS bearer</u> service (PMM-CONNECTED UEs and PMM-IDLE UEs) shall be notified.

MBMS Session attributes such as Service Id and the Multicast MBMS service Area are made available in all interested RNCs during the Session Start procedure. Other parameters are FFS.

For radio efficiency reasons, the UTRAN may select on per cell basis whether to establish point-to-point or point-to-multipoint links for the distribution of MBMS data to the UEs.

In order to perform this selection, the UTRAN requests UEs to move to PMM-CONNECTED / RRC-CONNECTED state by means of MBMS group-notification sent in the MulticastMBMS service Area.

The fact that this groupMBMS notification moves the UEs back to PMM-CONNECTED or to RRC-CONNECTED state is FFS, subject to RAN decision.

The exact number of UEs moved to PMM-CONNECTED / RRC-CONNECTED state is a decision of RAN node. It is not necessary for all UEs to move to PMM-CONNECTED/ RRC_CONNECTED in order for the RAN to decide to use point-to-multipoint, other UEs may remain in IDLE state. This is a UTRAN choice (based on RRM criteria...), FFS in RAN group.

Following the decision to set up point-to-point or point-to-multipoint links, the number of UEs that need to be maintained in CONNECTED state or moved to IDLE state for MBMS data reception is also an decision of a RAN node.

GERAN functionality is FFS.

8.2 MBMS Multicast Service Activation

The MBMS multicast service activation procedure registers the user in the network to enable the reception of data from a specific MBMS multicast MBMS bearer service. The activation is a signalling procedure between the UE and the

network. The procedure establishes MBMS UE contexts in UE, SGSN and GGSN and RNC for each activated MBMS multicast MBMS bearer service comparable to regular PDP contexts.

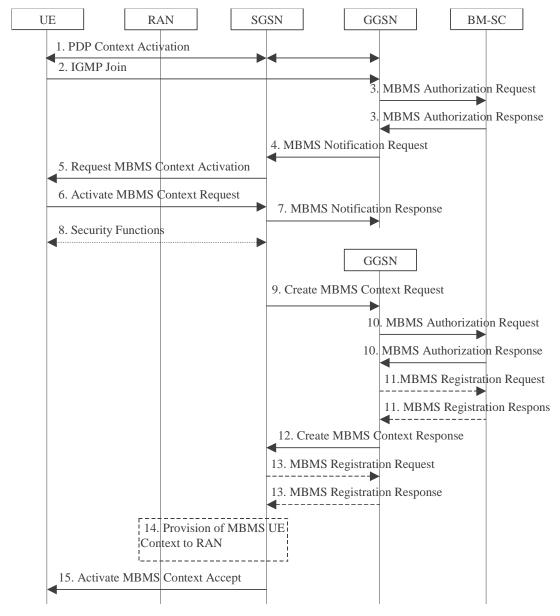


Figure 7: The activation of an MBMS multicast service

- The UE activates a default, typically best-effort PDP context if not already established. This can be a PDP
 context used for basic IP services like WAP or Internet access, or it might be the signalling PDP context used for
 IMS access.
- 2. The UE sends an IGMP (IPv4) or MLD (IPv6) Join message over the default PDP context to signal its interest in receiving a particular multicast MBMS bearer service identified by an IP multicast address.
- 3. The GGSN sends an MBMS Authorization Request seeking authorization for the activating UE to receive data. The authorization decision is provided in the MBMS Authorization Response together with the APN to be used for creation of the MBMS UE context. If the MBMS Authorization Response indicates that the UE is not authorized to receive the MBMS data the process terminates with no additional message exchange.
- 4. The GGSN receives the IGMP/MLD Join request and sends an MBMS Notification Request (IP multicast address, APN, Linked NSAPI) to the SGSN. Linked NSAPI is set equal to the NSAPI of the PDP context over which the Join request was received. The IP multicast address is the one requested by the UE in the Join request.

The APN may be different from the APN to which the default PDP context has been activated. In any case, the APN may resolve to a GGSN that is different from the GGSN receiving the IGMP/MLD Join request. The GGSN starts a MBMS Activation Timer as GGSN may receive no response, e.g. in case SGSN or UE does not support MBMS.

- 5. The SGSN sends a Request MBMS Context Activation (IP multicast address, APN, Linked NSAPI) to the UE to request it to activate an MBMS context. Linked NSAPI allows the UE to associate the MBMS Context with the PDP context over which it sent the IGMP/MLD Join message in step 2.
- 6. The UE creates an MBMS UE context and sends an Activate MBMS Context Request (IP multicast address, APN) to the SGSN. The IP multicast address identifies the MBMS multicast service, which the UE wants to join/activate. An APN may indicate a specific GGSN.
- 7. The SGSN sends a MBMS Notification Response (Cause) to the GGSN that sent the MBMS Notification Request, where Cause shall indicate successful or unsuccessful MBMS context activation for the reason of SGSN or UE (Cause is FFS). Upon reception of the response message with Cause indicating unsuccessful operation or time-out of the MBMS Activation Timer in the GGSN, the GGSN may fallback to IP multicast access as defined in 3GPP TS 29.061 [4].
- 8. Security Functions may be performed, e.g. to authenticate the UE.
- It is FFS whether the SGSN performs a subscription check for the requested MBMS multicastbearer service
 identified by the IP multicast address and APN or whether another network entity performs this check. The
 SGSN creates an MBMS UE context and sends a Create MBMS Context Requests (IP multicast address, APN)
 to the GGSN.
- 10. The GGSN sends an MBMS Authorization Request seeking authorization for the activating UE-to receive service data. The authorization decision is provided in the MBMS Authorization Response.
- 11. If the GGSN does not have the MBMS Bearer Context information for this MBMS bearer service, the GGSN sends a MBMS Registration Request to the BM-SC. See subclause "MBMS Registration Procedure".

If no TMGI has been allocated for this MBMS bearer service, the BM-SC will allocate a new TMGI. This TMGI will be passed to GGSN and SGSN via the MBMS Registration Response message and further to UE via Activate MBMS Context Accept message.

The BM-SC responds with a MBMS Registration Response containing the MBMS Bearer Context information for this MBMS bearer service and adds the identifier of the GGSN to the "list of downstream nodes" parameter in its MBMS Bearer Context. See subclause "MBMS Registration Procedure".

- 12. The GGSN creates an MBMS UE context and sends a Create MBMS Context Response to the SGSN.
- 13. If the SGSN does not have the MBMS Bearer Context information for this MBMS bearer service, the SGSN sends a MBMS Registration Request to the GGSN. See subclause "MBMS Registration Procedure".

The GGSN responds with a MBMS Registration Response containing the MBMS Bearer Context information for this MBMS bearer service and adds the identifier of the SGSN to the "list of downstream nodes" parameter in its MBMS Bearer Context. See subclause "MBMS Registration Procedure".

- 14. The SGSN provides RAN with the MBMS UE Context(s) if at least one PS RAB is established for the UE.
- 15. The SGSN sends an Activate MBMS Context Accept to the UE. The SGSN does not need to wait for step 12 to be completed before sending this message.

8.3 MBMS Session Start Procedure

The BM-SC initiates the MBMS Session Start procedure when it is ready to send data. This is a request to activate all necessary bearer resources in the network for the transfer of MBMS data and to notify interested UEs of the imminent start of the transmission.

Through this procedure, <u>MBMS</u> session attributes such as QoS, <u>Multieast MBMS service</u> Area (tracking/non-tracking area are FFS) are provided to the GGSN(s) and SGSN(s) that have previously registered for the corresponding MBMS bearer service and to all RNCs that are connected to a registered SGSN. In addition the procedure allocates the bearer plane to all registered GGSNs and all registered SGSNs and to RNCs that respond to the session start accordingly.

The overall Session Start procedure is presented in the following figure:

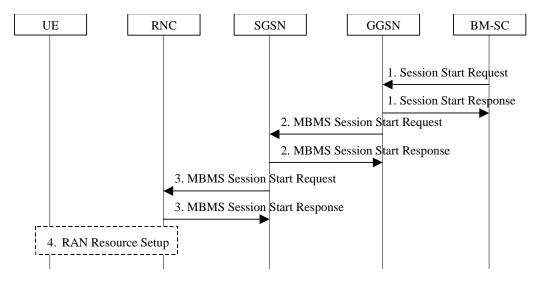


Figure 8: Session Start procedure

- The BM-SC sends a Session Start Request message to indicate the impending start of the transmission and to
 provide the session attributes (QoS, <u>MulticastMBMS service</u> Area...) to the GGSNs listed in the "list of
 downstream nodes" parameter of the corresponding MBMS Bearer Context. The BM-SC sets the state attribute
 of its MBMS Bearer Context to 'Active'. The GGSN stores the session attributes in the MBMS Bearer Context,
 sets the state attribute of its MBMS Bearer Context to 'Active' and sends a Session Start Response message to the
 BM-SC.
- 2. The GGSN sends an MBMS Session Start Request message to the SGSNs listed in the "list of downstream nodes" parameter of the corresponding MBMS Bearer Context. The SGSN stores the session attributes in the MBMS Bearer Context, sets the state attribute of its MBMS Bearer Context to 'Active' and responds with an MBMS Session Start Response message providing the TEID for bearer plane that the GGSN shall use for forwarding the MBMS data.
- 3. The SGSN sends an MBMS Session Start Request message including the session attributes to each RNC that is connected to this SGSN. The RNC responds with an MBMS Session Start Response to the SGSN. If the RNC serves the MBMS Service Area it stores the session attributes in the MBMS Service Context, sets the state attribute of its MBMS Service Context to 'Active' and responds with an MBMS Session Start Response message and the RNC includes the TEID in the MBMS Session Start Response message for the Iu bearer plane that the SGSN shall use for forwarding the MBMS data. An RNC receiving multiple MBMS Session Start Request messages includes Iu bearer plane parameters only into one MBMS Session Start Response message to establish only one Iu bearer plane to one SGSN.
- 4. The RNC establishes the necessary radio resources for the transfer of MBMS data to the interested UEs.

NOTE: The upstream node normally provides the MBMS Session Start Request message once per MBMS session to a downstream node. Due to "Intra Domain Connection of RAN Nodes to Multiple Core Network Nodes" however, an RNC may receive the MBMS Session Start Request message from several SGSNs.

8.4 MBMS Registration Procedure

The MBMS Registration is the procedure by which a downstream node informs an upstream node that it would like to receive session attributes and data for a particular MBMS <u>bearer</u> service in order to distribute it further downstream. This procedure builds up a distribution tree for the delivery of MBMS session attributes and data from the BM-SC to the UEs interested in the service. This procedure results in the set-up of a corresponding MBMS Bearer Context in the nodes along the distribution tree, but it does not result in the establishment of <u>userbearer</u> plane which will be established by the Session Start procedure.

The MBMS Registration procedure is initiated:

- When the first MBMS UE Context for a particular MBMS <u>bearer</u> service is created in the SGSN or GGSN (see subclause "MBMS UE Context") and the corresponding MBMS Bearer Context is not already established in the node;
- When an MBMS Registration Request for a particular MBMS Service-bearer service is received from a downstream node but the corresponding MBMS Bearer Context is not established in the node; or
- When a DRNC detects that it hosts UEs interested in the MBMS <u>bearer</u> service (see subclause "RAN Resource Setup).

NOTE: The terms 'downstream' and 'upstream' refer to the topological position of one node with respect to another and relative to the direction of the MBMS data flow, i.e. from BM-SC to UE.

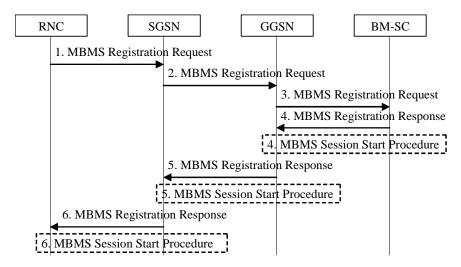


Figure 9: MBMS Registration procedure

- When the DRNC detects that it hosts UEs interested in the MBMS Servicebearer service, the DRNC sends a
 MBMS Registration Request message to its parent SGSN if not already done (see subclause "RAN Resource
 Setup"). How the RNC determines its parent SGSN is a matter of implementation.
- 2. If the SGSN has no MBMS Bearer Context for an MBMS Servicebearer service and the SGSN receives an MBMS Registration Request from an RNC for this MBMS bearer service, or if the first MBMS UE Context is created in the SGSN for an MBMS Servicebearer service for which the SGSN has no corresponding MBMS Bearer Context, the SGSN creates an MBMS Bearer Context (in "Standby" state) and sends an MBMS Registration request (IP multicast address, APN₇) message to the GGSN. How the SGSN selects a GGSN is a matter of implementation; it may for instance be based on prior signalling related to a particular UE or via APN resolution.
- 3. If the GGSN has no MBMS Bearer Context for an MBMS <u>bearer</u> service and the GGSN receives an MBMS Registration from an SGSN for this MBMS <u>bearer</u> service, or when the first MBMS UE Context is created in the GGSN for an MBMS <u>bearer</u> service for which the GGSN has no MBMS Bearer Context, the GGSN sends a Registration Request (IP multicast address, APN) message to the BM-SC. The exact nature of the signalling between GGSN and BM-SC is however FFS in general.
- 4. Upon reception of an MBMS Registration Request from a GGSN, the BM-SC adds the identifier of the GGSN to the "list of downstream nodes" parameter in its MBMS Bearer Context and responds with a MBMS Registration Response message. The exact nature of the signalling between GGSN and BM-SC is however FFS in general. If the MBMS Bearer Context is in the 'Active' state, the BM-SC initiates the Session Start procedure with the GGSN, as described in Section 8.3. clause "MBMS Session Start Procedure".
- 5. If the GGSN receives a Registration Request from the SGSN in step 2, the GGSN:
 - adds the identifier of the SGSN to the "list of downstream nodes" parameter in its MBMS Bearer Context,
 - responds with an MBMS Registration Response message, and

- if the MBMS Bearer Context is in the 'Active' state, initiates the Session Start procedure with the SGSN, as described in Section 8.3. clause "MBMS Session Start Procedure".
- 6. If the SGSN received MBMS Registration Request from the DRNC in step 1, the SGSN:
 - adds the identifier of the RNC to the "list of downstream nodes" parameter in its MBMS Bearer Context,
 - responds with an MBMS Registration Response message, and
 - if the MBMS Bearer Context is in the 'Active' state, initiates the Session Start procedure with the DRNC, as described in Section 8.3 clause "MBMS Session Start Procedure".

8.5 MBMS Session Stop Procedure

The BM-SC initiates the MBMS Session Stop procedure when it considers the <u>MBMS</u> session to be terminated. The session is typically terminated when there is no more MBMS data expected to be transmitted for a sufficiently long period of time to justify a release of <u>user-bearer</u> plane resources in the network. The procedure is propagated to all SGSNs and GGSNs that are registered for the corresponding MBMS bearer service and to RNCs that have an established Iu bearer plane with an SGSN.

The overall MBMS Session Stop procedure is presented in the following figure:

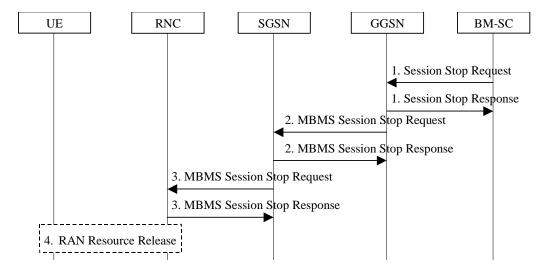


Figure 10: MBMS Session Stop procedure

- The BM-SC sends a Session Stop Request message to all GGSNs listed in the "list of downstream nodes" parameter of the affected MBMS Bearer Context to indicate that the <u>MBMS</u> session is terminated and the bearer plane resources can be released. The BM-SC sets the state attribute of its MBMS Bearer Context to 'Standby'.
- 2. The GGSN sends an MBMS Session Stop Request message to all SGSNs listed in the "list of downstream nodes" parameter of the affected MBMS Bearer Context, releases the corresponding bearer plane resources towards these SGSNs and sets the state attribute of its MBMS Bearer Context to 'Standby'.
- The SGSN releases the TEID and bearer plane resources on which it was receiving MBMS data from the GGSN for the affected MBMS bearer service and sends an MBMS Session Stop Request message to all RNCs that have a bearer plane established with the SGSN.
- 4. The RNC releases the affected radio and Iu resources.

8.6 MBMS De-Registration Procedure

The MBMS De-Registration is the procedure by which a downstream node informs an upstream node that it does not need a to receive signalling, session attributes and data for a particular MBMS bearer service anymore and therefore would like to be removed from the corresponding distribution tree.

The MBMS De-registration procedure is initiated:

- By the SGSN or GGSN when the last MBMS UE Context for a particular MBMS bearer service is deleted from the node and the "list of downstream nodes" parameter in the corresponding MBMS Bearer Context is empty;
- By the SGSN or GGSN when the last node registered in the "list of downstream nodes" de-registers from an MBMS bearer service for which there is no corresponding MBMS UE Context; or
- By the DRNC that registered at an SGSN when it deletes the associated MBMS Service Context.

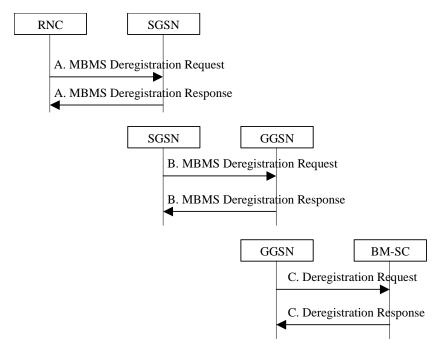


Figure 11: MBMS De-Registration Procedure

A. When the DRNC that is registered at an SGSN no longer hosts any UE interested in that MBMS <u>bearer</u> service, the DRNC requests the de-registration from the MBMS bearer service to its parent SGSN. As an implementation option, the RNC may decide not to de-register from the MBMS bearer service immediately when these conditions are met, e.g. in order to avoid unnecessary signalling in the case where the RNC would again need the same MBMS bearer service shortly after.

The SGSN removes the identifier of the RNC from the "list of downstream nodes" parameter of the affected MBMS Bearer Context and confirms the operation by sending an MBMS De-Registration Response message to the RNC. If an Iu bearer plane had been established between the RNC and the SGSN for this MBMS bearer service, the Iu bearer plane is released.

- B. When the "list of downstream nodes" of a particular MBMS Bearer Context in the SGSN becomes empty and the SGSN has no MBMS UE Contexts linked to that MBMS Bearer Context, the SGSN sends an MBMS De-Registration Request (IP multicast address, APN) message to its upstream GGSN.
 - The GGSN removes the identifier of the SGSN from the "list of downstream nodes" parameter of the affected MBMS Bearer Context and confirms the operation by sending an MBMS De-Registration Response message to the SGSN. . If a bearer plane had been established between the SGSN and the GGSN for this MBMS bearer service, the bearer plane is released.
- C. When the "list of downstream nodes" of a particular MBMS Bearer Context in the GGSN becomes empty and the GGSN has no MBMS UE Contexts linked to that MBMS Bearer Context, the GGSN sends a De-Registration Request (IP multicast address, APN) message to the BM-SC. The exact nature of the signalling between GGSN and BM-SC is however FFS in general. If a bearer plane had been established over Gi for this MBMS bearer service, the bearer plane is released.

The BM-SC removes the identifier of the GGSN from the "list of downstream nodes" parameter of the affected MBMS Bearer Context and confirms the operation by sending a De-Registration Response message to the GGSN.

8.6.1 BM-SC initiated MBMS De-Registration Procedure

This MBMS De-Registration Procedure is initiated by BM-SC when the specific MBMS bearer service is terminated. This procedure tears down the distribution tree for the delivery of session attributes and MBMS data. This procedure results in releasing of all MBMS Bearer Contexts and associated MBMS UE Contexts in the nodes along the distribution tree.

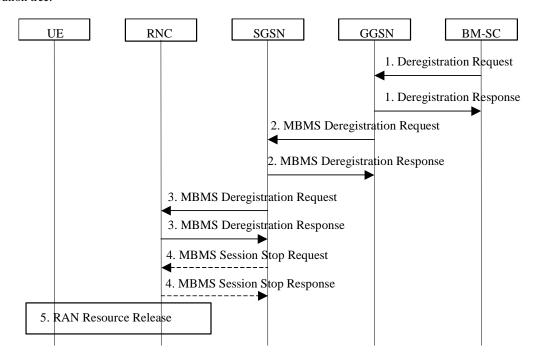


Figure 12: BM-SC initiated MBMS De-Registration Procedure

- The BM-SC sends a De-Registration Request message to all GGSNs contained in the "list of downstream nodes" parameter of the corresponding MBMS Bearer Context to indicate the session is terminated and any related MBMS bearer resources shall be released.
 - The GGSN returns a De-Registration Response message to the BM-SC. The BM-SC releases all MBMS UE Contexts and removes the identifier of the GGSN from the "list of downstream nodes" parameter of the corresponding MBMS Bearer context.
- 2. The GGSN sends an MBMS De-Registration Request message to all SGSNs contained in the "list of downstream nodes" parameter. of the corresponding MBMS Bearer Context. The SGSN returns an MBMS Deregistration Response message to the GGSN. The GGSN releases all MBMS UE Contexts and the affected MBMS Bearer Context. If a bearer plane had been established over Gi for this MBMS bearer service, the bearer plane is released.
- 3. The SGSN sends an MBMS De-Registration Request message to all RNCs listed in the "list of downstream nodes" parameter of the corresponding MBMS Bearer Context. The RNC returns an MBMS De-Registration Response message to the SGSN. The SGSN releases all MBMS UE Contexts and the affected MBMS Bearer Context. If a bearer plane had been established between the SGSN and the GGSN for this MBMS bearer service, the bearer plane is released.
- 4. 4 If the state attribute of the MBMS Bearer Context is 'Active' the SGSN sends an MBMS Session Stop Request message to all RNCs that have a bearer plane established with the SGSN. The RNC releases all bearer resources and returns an MBMS Session Stop Response message to the SGSN.

5. The RNC releases the affected radio resources and the MBMS Service Context.. The detailed procedures are FFS depending on ongoing work in RAN groups. RAN may notify the UEs that the MBMS Bearer service has being terminated, so that the UE can locally deactivate its MBMS UE context, detailed procedures are FFS.

8.7 MBMS Multicast Service Deactivation

The multicast service deactivation is a signalling procedure between the UE and the network. The procedure removes the MBMS UE Context from the UE, SGSN and GGSN for a particular MBMS multicast service. The multicast service deactivation can be initiated by:

- The UE;
- The BM-SC; or
- The SGSN

All these cases are contained in the procedure illustrated in figure 13. The UE initiated Multicast Service Deactivation starts with step 1), the BM-SC initiated Multicast Service Deactivation starts with step 3) and the SGSN initiated Multicast Service Deactivation starts with step 5) or 8).

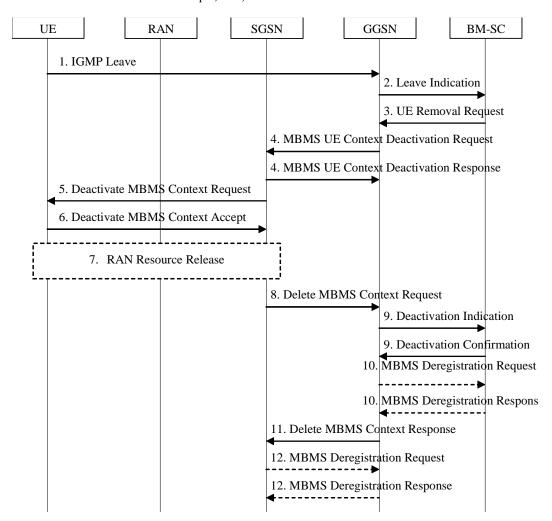


Figure 13: MBMS Multicast Service Deactivation

1. The UE sends an IGMP (IPv4) or MLD (IPv6) Leave message over the default PDP context to leave a particular multicast service identified by an IP multicast address.

- 2. The GGSN sends a Leave Indication (IP multicast address, IMSI) to the BM-SC, indicating that the UE is requesting to leave the multicast service identified by the IP multicast address. The exact nature of the signalling between GGSN and BM-SC is however FFS in general.
- 3. Upon reception of the Leave Indication, the BM-SC verifies that the IP multicast address corresponds to a valid MBMS bearer service and sends a UE Removal Request (IP multicast address, APN, IMSI) to the GGSN that originated the Leave Indication. The APN shall be the same that was provided during service activation (see "MBMS Multicast Service Activation"). The exact nature of the signalling between GGSN and BM-SC is however FFS in general. The BM-SC may also initiate the deactivation of an MBMS UE Context for service-specific reasons (e.g. the service is terminated but the UE has not yet left the multicast group) by directly sending a UE Removal Request message to the GGSN.
- 4. The GGSN sends an MBMS UE Context Deactivation Request (IP multicast address, APN, IMSI) to the SGSN. The IP multicast address, APN and IMSI together identify the MBMS UE Context to be deleted by the SGSN. The APN is the one received in step 3. The SGSN acknowledges reception of the MBMS UE Context Deactivation Request by sending an MBMS UE Context Deactivation Response to the GGSN.
- 5. Upon reception of the MBMS UE Context Deactivation Request or for other reasons (e.g. due to a change in the roaming restrictions for the user) the SGSN sends a Deactivate MBMS Context Request (TI) to the UE. The TI identifies the MBMS UE Context to be deleted by the UE.
- 6. The UE deletes the MBMS UE Context and sends a Deactivate MBMS Context Accept (TI) to the SGSN.
- 7. If dedicated radio resources are currently assigned to the UE for the reception of the MBMS data, the RAN releases these radio resources. If shared radio resources are currently assigned for the distribution of the MBMS data, the RAN may decide to move the remaining UEs to dedicated resources. The detailed procedures and conditions are FFS depending on ongoing work in RAN groups.
- Upon reception of the Deactivate MBMS Context Accept or for other reasons (e.g. due to missing periodic updates) the SGSN sends a Delete MBMS Context Request (NSAPI) to the GGSN that holds the MBMS UE Context.
- 9. The GGSN deletes the MBMS UE Context and sends a Deactivation Indication to the BM-SC to confirm the successful deactivation of the MBMS UE Context. The BM-SC, after receiving the Deactivation Indication, deletes the MBMS UE Context and sends a confirmation to the GGSN. The exact nature of the signalling between GGSN and BM-SC is however FFS in general.
- 10. If the GGSN does not have any more users interested in this MBMS multicast bearer service and the "list of downstream nodes" in the corresponding MBSM Bearer Context is empty, the GGSN sends a MBMS De-Registration Request to the BM-SC. The BM-SC responds with a MBMS De-Registration Response and removes the identifier of the GGSN from the "list of downstream nodes" parameter in its MBMS Bearer Context. See subclause "MBMS De-Registration Procedure".
- 11. The GGSN confirms the deactivation of the MBMS UE Context to the SGSN by sending a Delete MBMS Context Response to the SGSN, which then deletes the MBMS UE Context.
- 12. If the SGSN does not have any more users interested in this MBMS multicast bearer service and the "list of downstream nodes" in the corresponding MBMS Bearer Context is empty, the SGSN sends an MBMS De-Registration Request to the GGSN. The GGSN responds with an MBMS De-Registration Response and removes the identifier of the SGSN from the "list of downstream nodes" parameter in its MBMS Bearer Context. See subclause "MBMS De-Registration Procedure".

8.8 Iu Bearer Plane release procedure

A RNC triggers the Iu Bearer Plane release procedure if the RNC has no further use for the <u>userbearer</u> plane (i.e. no UEs left in the coverage area of the RNC or session stop) (hysterisis mechanisms can be used in the RNC to avoid continuous Bearer plane establishments and releases).

8.9 RAN Resource Setup

Editor's note: The content of this subclause is dependent on ongoing work in RAN groups. The main focus of this section should be on the externally observable behaviour of the RAN (as seen from the Iu interface) and aspects that have direct impact on CN procedures. This subclause should in particular describe which of the SRNC, DRNC or CRNC is responsible for MBMS data distribution depending on whether ptp or ptm distribution has been selected.]

8.10 Inter SGSN Routeing Area Update

This procedure is performed when a UE with active MBMS bearer service performs a Routeing Area Update and the serving SGSN changes. It bases on the Inter SGSN Routeing Area Update procedure specified in TS 23.060. The procedure is performed regardless whether MBMS sessions are ongoing or not. The handling of any PDP contexts established by the UE is not changed compared to the procedure without MBMS. The procedure described below does not show all details of the Routeing Area update procedure. Only for the MBMS specific additions the steps are described.

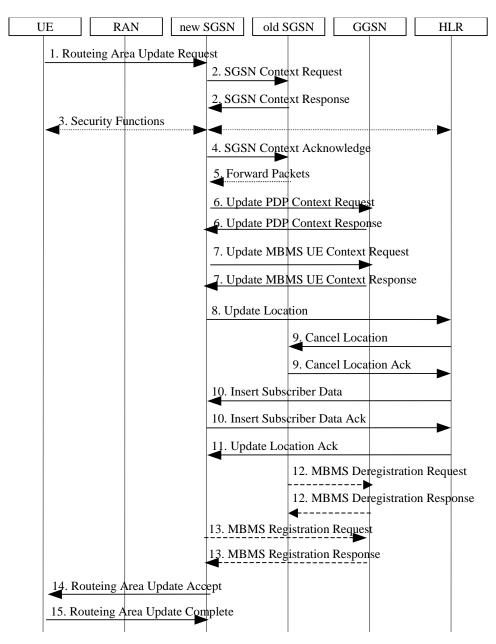


Figure 14: Inter SGSN Routeing Area Update

- 2)—The context transfer in step 2 includes the transfer of the MBMS UE Context(s).
- 7) The new SGSN sends Update MBMS UE Context Request to the GGSNs concerned. The GGSNs update their MBMS UE Context fields and return Update MBMS UE Context Response.
- 12) If the old SGSN does not have any more MBMS UE Contexts for the MBMS multicast bearer service(s) and the "list of downstream nodes" in the corresponding MBMS Bearer Context is empty, the SGSN sends an MBMS Deregistration Request to the GGSN. The GGSN responds with an MBMS Deregistration Response and removes the identifier of the SGSN from the "list of downstream nodes" parameter in its MBMS Bearer Context. See subclause "MBMS Deregistration Procedure".
- 13) The new SGSN verifies for each MBMS UE Context received whether it has a corresponding MBMS Bearer Context. For each MBMS Bearer Context the SGSN does not already have the SGSN creates an MBMS Bearer Context (in "Standby" state) and sends an MBMS Registration Request to a GGSN. This registration is described in subclause "MBMS Registration Procedure".

8.11 Inter SGSN Serving RNS Relocation Procedure

This procedure is performed when the SGSN changes due to SRNS relocation. It bases on the SRNS Relocation procedure specified in TS 23.060. The procedure is performed regardless whether MBMS sessions are ongoing or not. The handling of any PDP contexts established by the UE is not changed compared to the procedure without MBMS. The procedure described below does not show all details of the SRNS relocation procedure. Only for the MBMS specific additions the steps are described.

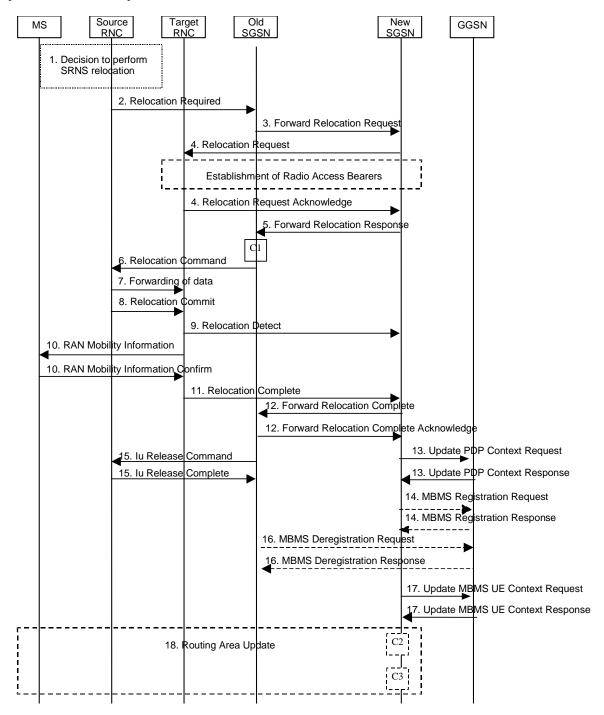


Figure 15: SRNS Relocation Procedure

3) The context transfer in step 3 includes the transfer of the MBMS UE Context(s).

- 14) The new SGSN verifies for each MBMS UE Context received whether it has a corresponding MBMS Bearer Context. For each MBMS Bearer Context not yet existing in the SGSN the SGSN creates an MBMS Bearer Context (in "Standby" state) and sends an MBMS Registration Request to a GGSN. This registration is described in subclause "MBMS Registration Procedure".
- 16)-If the old SGSN does not have any more MBMS UE Contexts for this MBMS multicastbearer service and the "list of downstream nodes" in the corresponding MBMS Bearer Context is empty, the SGSN sends an MBMS De-registration Request to the GGSN. The GGSN responds with an MBMS De-registration Response and removes the identifier of the SGSN from the "list of downstream nodes" parameter in its MBMS Bearer Context. See subclause "MBMS De-registration Procedure".
- 17) The new SGSN sends Update MBMS UE Context Request to the GGSNs concerned. The GGSNs update their MBMS UE Context fields and return Update MBMS UE Context Response.

8.12 MBMS Broadcast Service Activation

MBMS Broadcast service activation is the procedure by which a UE locally activates a broadcast MBMS bearer service:

- The <u>MBMS</u> broadcast <u>service</u> activation procedure does not register the user in the network. There is no MBMS <u>bearer service</u> specific signaling exchanged between the UE and the Network;
- The broadcast service activation procedure does not establish MBMS UE contexts in UE, SGSN and GGSN.

8.13 MBMS Broadcast service de-activation

The MBMS Broadcast service de-activation by the UE is local to the UE, i.e. without interaction with the Network.

8.14 MBMS Broadcast Session Start Procedure

The BM-SC initiates the MBMS Session Start procedure when it is ready to send data. This is a request to activate all necessary <u>bearer</u> resources in the network for the transfer of MBMS data. It is FFS whether it is also used to notify interested UEs of the start of the transmission.

Through this procedure, <u>MBMS</u> session attributes such as QoS, <u>BroadcastMBMS</u> service. Area (tracking/non-tracking area are FFS) are provided to all the GGSN(s), SGSN(s) and RNCs. In addition the procedure allocates the bearer plane to all GGSNs and all SGSNs and to RNCs that respond to the <u>MBMS</u> session start accordingly.

The overall MBMS Broadcast Session Start procedure is presented in the following figure:

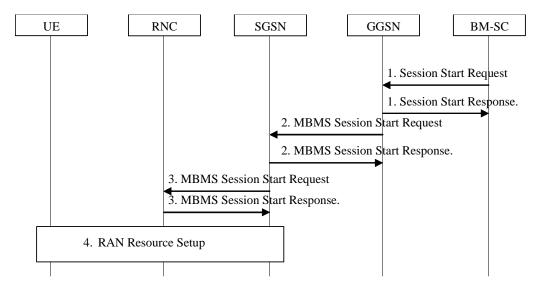


Figure 16: Session Start procedure for MBMS-Broadcast MBMS Bearer Service

- 1) The BM-SC sends a Session Start Request message the impending start of the transmission and to provide the MBMS session attributes (QoS, BroadcastMBMS service Area...) to a GGSNs-GGSN of the PLMN. The BM-SC sets the state attribute of its MBMS Bearer Context to 'Active'. The GGSN creates a MBMS Bearer Context, stores the session attributes, sets the state attribute of this MBMS Bearer Context to 'Active' and sends a Session Start Response message to the BM-SC.
- 2) The GGSN sends an MBMS Session Start Request message to all its SGSNs. The SGSN creates a MBMS Bearer Context, stores the session attributes, sets the state attribute of this MBMS Bearer Context to 'Active' and responds with an MBMS Session Start Response message providing the TEID for bearer plane that the GGSN shall use for forwarding the MBMS data.
- 3) The SGSN sends an MBMS Session Start Request message including the session attributes to each RNCs that is connected to this SGSN. The RNC responds with an MBMS Session Start Response message to the SGSN. If the RNC serves the MBMS Broadcastservice Area, it creates a MBMS Bearer Context, stores the session attributes in this MBMS Service Context, sets the state attribute of its MBMS Service Context to 'Active' and responds with an MBMS Session Start Response message, and the RNC includes the TEID in the MBMS Session Start Response message for the Iu bearer plane that the SGSN shall use for forwarding the MBMS data. An RNC receiving multiple MBMS Session Start Request messages from different SGSNs includes Iu bearer plane parameters only into one MBMS Session Start Response message to establish only one Iu bearer plane to one SGSN.
- 4) The RNC establishes the necessary radio resources for the transfer of MBMS data to the interested UEs.

NOTE: The upstream node normally provides the MBMS Session Start Request message once per MBMS session to a downstream node. Due to "Intra Domain Connection of RAN Nodes to Multiple Core Network Nodes" however, an RNC may receive the MBMS Session Start Request message from several SGSNs.

9 Security

- A SIM or USIM shall be present in the UE to receive MBMS multicast services.
- MBMS multicast data transmission to the UEs shall be secured.
- MBMS security shall be provided by encryption and integrity protection between the UE and the BM-SC.
- The BM-SC shall be able to authenticate and authorize each MBMS content provider.
- The integrity of MBMS data received from the content provider shall be guaranteed.

10 Charging requirement

MBMS architecture shall support on-line and off-line charging.

It shall be possible to collect charging information for the multicast mode. It shall also be possible to collect charging information for MBMS services in visited networks.

MBMS shall collect charging information about the transmission of MBMS broadcast or multicast data that are provided by content or service providers (e.g. 3rd parties). This shall enable billing of broadcast and multicast content or service providers.

To enable billing of broadcast and multicast content providers, data shall be collected at the BM-SC.

NOTE: SGSN, GGSN and BM-SC generate charging data for the transmitted data, always under the assumption that the UEs are within the MBMS service area. If the MulticastMBMS service area is less than the PLMN, then there is the possibility that a UE will have moved outside the MulticastMBMS service area. Charging data will still be generated for that UE causing an inaccuracy in the data. This inaccuracy increases as the size of the MulticastMBMS service area is decreased.

Annex A (Informative): Information flows

A.1 General information flow

Annex B (Informative): Change history

					Change history		
Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment	Old	New
2002-06					First Version		0.0.0
2002-09					Output from SA2 #27, inclusion of S2-023072		0.1.0
2002-11					Output from SA2 #28, inclusion of S2-023591, S2-023592, S2-023593, S2-023594, S2-023595, S2-023596 +S2-022967 From SA2#17	0.1.0	0.2.0
2002-12					Addition of official TS number	0.2.0	0.2.1
2003-02					Output from SA2#29 and e-mail approval: S2-030382, S2-030284, S2-030385rev4, S2-030386r1, S2-030387	0.2.1	0.3.0
2003-02					Output from SA#30, inclusion of S2-030626, S2-030647 an S2-030651	0.3.0	0.4.0
2003-04					Output from SA2#31, inclusion of S2-031236, S2-031238, S2-031237r2	0.4.0	0.5.0
					Output from SA2#32, inclusion of S2-031843, S2-031844, S2-031845, S2-031849, S2-031850, S2-032118, S2-032119	0.5.0	0.6.0
					Presentation to SA for information	0.6.0	1.0.0
					Output from SA2#33, inclusion of S2-031231, S2-032410, S2-032412, S2-032417, S2-032419, S2-032425, S2-032426	1.0.0	1.1.0
2003-08					Output from SA2#34, inclusion of S2-032889, S2-032894, S2-032896, S2-032898, S2-032904, S2-033143, S2-033144, S2-033145, S2-033147, S2-033148, S2-033149, S2-033150	1.1.0	1.2.0
2003-08					Editorial correction (S2-033148 was incorrectly added) + Other Minor editorials (change bars from V 1.2.0 still retained)	1.2.0	1.2.1
2003-09					Presentation to SA for Approval	1.2.1	2.0.0
2003-09	SA#21	SP-030390			Raised to v.6.0.0 after approval at SA#21	2.0.0	6.0.0

3GPP TSG-SA2 Meeting #36 New York, USA, 24th – 28th November 2003

			СН	ANGE	REQ	UE	ST	ı				CR-Form-v7
×	23	.246	CR 026	6	жrev	2	Ж	Curren	nt versio	on:	<mark>0.0.</mark>	¥
For <u>HELP</u> on u	sing	this for	rm, see bott	om of this	s page or	look	at the	⊋ рор-и	p text c	over th	ne Ж sy	rmbols.
Proposed change			JICC apps\$		ME		dio Ad	ccess N	letwork	X X	Core N	letwork X
Title: 第	Cla	rificati	on on MBM	S deactiv	ation figu	re						
Source: #	Sa	msung	, Huawei, S	iemens								
Work item code: 第	ME	BMS						Da	nte: ೫	27/1	1/2003	
Category:	Deta	F (corr A (corr B (add C (fun D (edit iled exp	the following rection) responds to a dition of feature ctional modificational modifications of 3GPP TR 21	a correction re), ication of the ation) the above	on in an ea		elease	Use <u>(</u> 2 2 RS RS RS RS	96 (í 97 (í 98 (í 99 (í el-4 (í el-5 (í	he follo GSM I Releas Releas	owing re Phase 2 se 1996 se 1997 se 1999 se 1999 se 4))))
Reason for change): 光	be diff TS 23. detach GGSN "Linke UE ide	greed to calriferent than the .246 also does. This show are implicited NSAPI' wenties the ME e clarified.	e GGSN les not clari ald be alig ly deactivates	ify the han ned with C ated at PS	dling GPRS detacl	of a U beare h. in last	Context JE's ME er handli t Bangko	t. BMS bea ng. PDI ok meeti	arer se conte	ervices vexts in S	when a UE GGSN and pacts how
Summary of chang	je: ૠ		re 13 as well ers at UE deta		s modified	l for c	larific	cation. 1	Implicit	deacti	vation o	of MBMS
Consequences if not approved:	\mathfrak{H}		nderstanding ation procedu		S deactiva	tion p	roced	lure and	misalig	nment	with M	BMS
			aron procedi									
Clauses affected:	Ж	8.7										
Other specs affected:	¥	Y N X X	Test speci	fications		*						
Other comments:	\mathbb{H}											

How to create CRs using this form:

- 1) Fill out the above form. The symbols above marked \(\mathcal{H} \) contain pop-up help information about the field that they are closest to.
- 2) Obtain the latest version for the release of the specification to which the change is proposed. Use the MS Word "revision marks" feature (also known as "track changes") when making the changes. All 3GPP specifications can be downloaded from the 3GPP server under ftp://ftp.3gpp.org/specs/ For the latest version, look for the directory name with the latest date e.g. 2001-03 contains the specifications resulting from the March 2001 TSG meetings.
- 3) With "track changes" disabled, paste the entire CR form (use CTRL-A to select it) into the specification just in front of the clause containing the first piece of changed text. Delete those parts of the specification which are not relevant to the change request.


8.7 MBMS Multicast Service Deactivation

The multicast service deactivation is a signalling procedure between the UE and the network. The procedure removes the MBMS UE Context from the UE, SGSN and GGSN for a particular MBMS multicast service. The multicast service deactivation can be initiated by:

- The UE;
- The GGSN;
- The BM-SC; or
- The SGSN

All these cases are contained in the procedure illustrated in figure 13. The UE initiated Multicast Service Deactivation starts with step 1), the BM-SC initiated Multicast Service Deactivation starts with step 3), the GGSN initiated Multicast Service Deactivation starts with step 4), and the SGSN initiated Multicast Service Deactivation starts with step 5) or 8).

At GPRS detach, all MBMS UE contexts of the UE are implicitly deactivated in the UE, SGSN and GGSN, i.e. the SGSN performs the deactivation procedure starting with step 8).

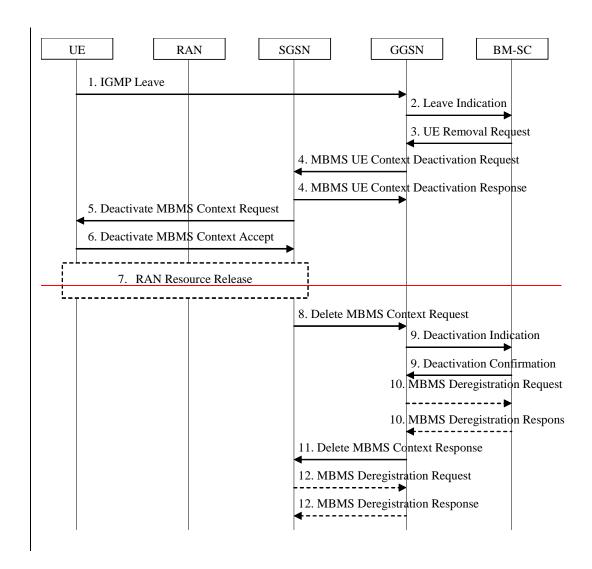

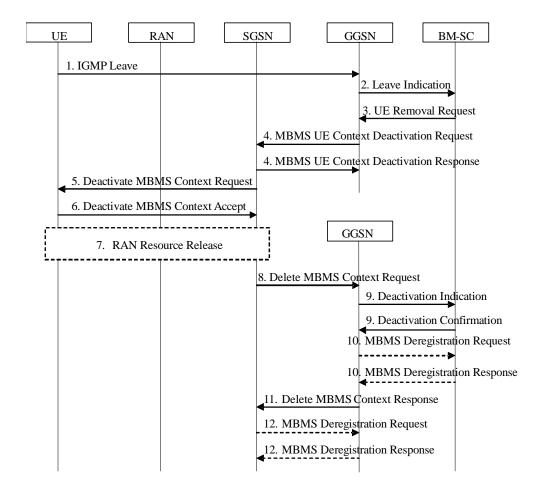


Figure 13: MBMS Multicast Service Deactivation

- 1. The UE sends an IGMP (IPv4) or MLD (IPv6) Leave message over the default PDP context to leave a particular multicast service identified by an IP multicast address.
- 2. The GGSN sends a Leave Indication (IP multicast address, IMSI) to the BM-SC, indicating that the UE is requesting to leave the multicast service identified by the IP multicast address. The exact nature of the signalling between GGSN and BM-SC is however FFS in general.
- 3. Upon reception of the Leave Indication, the BM-SC verifies that the IP multicast address corresponds to a valid MBMS <u>bearer</u> service and sends a UE Removal Request (IP multicast address, APN, IMSI) to the GGSN that originated the Leave Indication. The APN shall be the same that was provided during service activation (see "MBMS Multicast Service Activation"). The exact nature of the signalling between GGSN and BM-SC is however FFS in general. The BM-SC may also initiate the deactivation of an MBMS UE Context for service-specific reasons (e.g. the service is terminated but the UE has not yet left the multicast group) by directly sending a UE Removal Request message to the GGSN.

- 4. Upon reception of the UE Removal Request or for other reasons (e.g. Error cases), The GGSN sends an MBMS UE Context Deactivation Request (IP multicast address, APN, IMSI) to the SGSN. The IP multicast address, APN and IMSI together identify the MBMS UE Context to be deleted by the SGSN. The APN is the one received in step 3. The SGSN acknowledges reception of the MBMS UE Context Deactivation Request by sending an MBMS UE Context Deactivation Response to the GGSN.
- 5. Upon reception of the MBMS UE Context Deactivation Request or for other reasons (e.g. due to a change in the roaming restrictions for the user) the SGSN sends a Deactivate MBMS Context Request (TI) to the UE. The TI identifies the MBMS UE Context to be deleted by the UE.
- 6. The UE deletes the MBMS UE Context and sends a Deactivate MBMS Context Accept (TI) to the SGSN.
- 7. If dedicated radio resources are currently assigned to the UE for the reception of the MBMS data, the RAN releases these radio resources. If shared radio resources are currently assigned for the distribution of the MBMS data, the RAN may decide to move the remaining UEs to dedicated resources. The detailed procedures and conditions are FFS depending on ongoing work in RAN groups.
- 8. Upon reception of the Deactivate MBMS Context Accept or for other reasons (e.g. due to missing periodic updates) the SGSN sends a Delete MBMS Context Request (NSAPI) to the GGSN that holds the MBMS UE Context. <u>This GGSN may be different from the GGSN that receives IGMP Leave request in step 1.</u>
- 9. The GGSN deletes the MBMS UE Context and sends a Deactivation Indication to the BM-SC to confirm the successful deactivation of the MBMS UE Context. The BM-SC, after receiving the Deactivation Indication, deletes the MBMS UE Context and sends a confirmation to the GGSN. The exact nature of the signalling between GGSN and BM-SC is however FFS in general.
- 10. If the GGSN does not have any more users interested in this MBMS multicast <u>bearer</u> service and the "list of downstream nodes" in the corresponding MBSM Bearer Context is empty, the GGSN sends a MBMS De-Registration Request to the BM-SC. The BM-SC responds with a MBMS De-Registration Response and removes the identifier of the GGSN from the "list of downstream nodes" parameter in its MBMS Bearer Context. See subclause "MBMS De-Registration Procedure".
- 11. The GGSN confirms the deactivation of the MBMS UE Context to the SGSN by sending a Delete MBMS Context Response to the SGSN, which then deletes the MBMS UE Context.
- 12. If the SGSN does not have any more users interested in this MBMS multicastbearer service and the "list of downstream nodes" in the corresponding MBMS Bearer Context is empty, the SGSN sends an MBMS De-Registration Request to the GGSN. The GGSN responds with an MBMS De-Registration Response and removes the identifier of the SGSN from the "list of downstream nodes" parameter in its MBMS Bearer Context. See subclause "MBMS De-Registration Procedure".

Tdoc #S2-033997 rev of \$2-033983, \$2-033856

			(CHANG	GE RE	QUE	ST					CR-Form-v7
*		23.246	CR	027	жre	v 2	¥	Current	versi	ion:	6.0.0	*
For <u>HELP</u>	on u	sing this fo	rm, see	bottom of	f this page	or look	at the	е рор-ир	text	over	the ¥ sy	mbols.
Proposed cha	nge a	affects:	UICC a	npps#	ME	Rae	dio A	ccess Ne	twor	k X	Core N	etwork X
Title:	ж	MBMS S	ervice	Request P	rocedure							
Source:	¥	Samsun	g, Norte	el Networks	s, Alcatel							
Work item cod	de:₩	MBMS						Date	e: Ж	22/	10/2003	
Category:	*	F (co A (co B (ao C (fui D (eo	rrection) rrespond Idition of nctional litorial m splanatio	ds to a corre feature), modification odification) ons of the ab	ection in an)		2	n <u>e</u> of t 6 7 3 9 -4 -5	the fol (GSM (Relea (Relea (Relea (Relea (Relea (Relea	-6 llowing re. 1 Phase 2 ase 1997 ase 1998 ase 1999 ase 4) ase 5) ase 6))))
Reason for ch	ange	the n cell, i state Also could inforr UTR. The o proce Futhe CON RNC Link	umber it will re it will be reum the CAN for I current edure. ermore, NECTE in this is descrip	2-033325, of users the quest some as S2-03390 ased (with some as N that it needs to the control of the control	at are interest at are interest at are interest at a count the dicating the ecase hi	rested in procession of the test of the te	n a spang UE dicate der in PMN show to MBMS MBM MBM in se d in F	es that Sovestigation Source Source	BMS sit to ervice on) to cted so f Se ntext es) ne 1 ME (R2-	e Recording and a service and a service arvice arvice arvice and a service arvice arvice and a service arvice arvice arvice and a service arvice arvi	quest production on request PMM- o be knould be be knould be be knould be knould be	ent in a ECTED occedure E to est of the t own in ext" in UE issing. LS

Summary of change: # A clarification of UE linking procedure is captured in 6.1 and a new section 8.15 is added to fully describe the UE linking procedure. Also a new clause 8.16 is introduced to incorporate a "Service Request Procedure" tailored to the MBMS feature.

provided to UTRAN when the UE moves to PMM CONNECTED state for the purpose of MBMS when an MBMS session is active. The current TS needs to be

It is also proposed to add a new section to clarify the way "UE Linking" is done instead of keeping just a slight description of it in section 6.1 which is dedicated to

updated to add this case.

"MBMS UE Context" element description.

Consequences if not approved:	# PMM-IDLE state UEs will be unable to move to PMM-CONNECTED state for MBMS purpose and will not be counted by the UTRAN.
Clauses affected:	第 6.1, new 8.15 and new 8.16
Other specs affected:	Y N W Other core specifications 米 Test specifications O&M Specifications
Other comments:	*

How to create CRs using this form:

- 1) Fill out the above form. The symbols above marked \$\mathbb{X}\$ contain pop-up help information about the field that they are closest to.
- 2) Obtain the latest version for the release of the specification to which the change is proposed. Use the MS Word "revision marks" feature (also known as "track changes") when making the changes. All 3GPP specifications can be downloaded from the 3GPP server under ftp://ftp.3gpp.org/specs/ For the latest version, look for the directory name with the latest date e.g. 2001-03 contains the specifications resulting from the March 2001 TSG meetings.
- 3) With "track changes" disabled, paste the entire CR form (use CTRL-A to select it) into the specification just in front of the clause containing the first piece of changed text. Delete those parts of the specification which are not relevant to the change request.

6.1 MBMS UE Context

The MBMS UE Context contains UE-specific information related to a particular MBMS bearer <u>service</u> that the UE has joined. An MBMS UE Context is created in the UE, SGSN and GGSN when the UE joins an MBMS bearer <u>service</u>. In the SGSN, an MBMS UE Context is also created as a result of an inter-SGSN routing area update after the transfer of the MBMS UE Context from the old SGSN. It is FFS whether MBMS UE Contexts are created in the BM-SC.

In Iu mode, aAII MBMS UE Contexts of a UE (referenced as "UE Link" in RNC) are provided via MBMS_UE dedicated Iu procedure(s)Linking mechanism to the BSC/SRNC at least when the first PS RAB is established for the UE, or when the UE performs MBMS Multicast Service Activation. MBMS UE Contexts are provided to the BSC/SRNC regardless whether MBMS Sessions are ongoing or not (i.e. before, between and after Sessions). In addition, all MBMS UE Contexts of a UE are provided via MBMS UE Linking mechanism when a UE, which has an MBMS context active, moves to PMM-Connected state via the MBMS Service Request procedure for the purpose of MBMS.

------ Next changes -----

8.15 MBMS UE Linking mechanism

UE Linking is the process by which UE MBMS context(s) is (are) provided to RAN.

MBMS UE linking procedure is performed when the UE is PMM-CONNECTED at least in the following cases.

- When a UE which has joined MBMS is moved to the PMM CONNECTED state and sets up a PS RAB. This may happen at any point in time i.e. before, during and between Sessions.
- When a UE joins the service and is in the PMM CONNECTED state due to an existing PS RAB. This may happen at any point in time i.e. before, during and between Sessions.
- When a UE is moved to the PMM CONNECTED state only for MBMS purpose via Service Request procedure.

 This may happen at any point in time during a MBMS session.

The UE linking is performed to link a specific UE to an MBMS service. It provides the list of MBMS Service Ids activated by the UE to the SRNC. If no MBMS service context related to the MBMS service Id exists then SRNC creates an MBMS service context after this procedure.

8.16 MBMS Service Request Procedure

For MBMS, when UTRAN wants to count the number of users that are interested in a specific MBMS service present in a cell, it will request a percentage of the interested UEs to transit to PMM-CONNECTED state. The MBMS Service Request procedure is used by a UE in PMM-IDLE state to move to PMM-CONNECTED state.

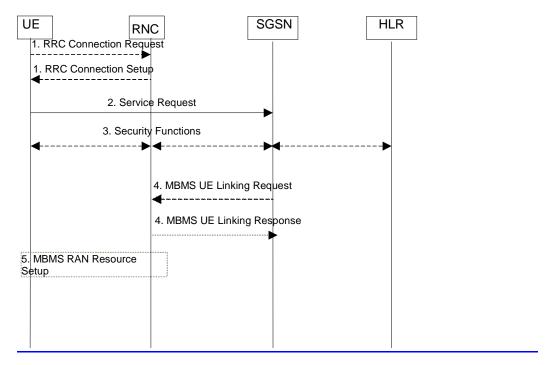


Figure x: MBMS Service Request procedure

- 2) The UE sends a Service Request message to the SGSN if required to do so by the RAN after a MBMS Session Starts.
- 3) The SGSN may perform the security functions.
- 4) The SGSN provides RAN with the MBMS UE context(s) via MBMS UE Linking procedure
- 5) The RNC establishes the necessary radio resources for the transfer of MBMS data to the interested UEs.

3GPP TSG-SA2 Meeting #36 New-York, USA, 24 th – 28 th November 2003

Tdoc #S2-033984

			CHAN	NGE RE	QUE	ST	•			CR-Form-v7
æ	23.2	246 C	R 28	жre	v -	¥	Current ver	sion:	6.0.0	¥
For <u>HELP</u> on u	using th	is form,	see bottom	of this page	or look	at th	e pop-up tex	t over	the # syr	nbols.
Proposed change	affects	s: UIC	C appsℋ <mark></mark>	ME	: Ra	dio A	ccess Netwo	ork	Core Ne	etwork X
Title:	Rem	oval of E	G from ME	MS Archite	cture Fig	jure				
Source: #	Bam	boo Med	liaCasting I	_td.						
 Work item code: ₩	MDN	10					Date: \$	P 10/	11/2003	
	יוטועו פ	10					Date.	6 13/	11/2003	
Category: #	F A B C D Detaile	(correcti (corresp (addition (function (editorial ed explan	oonds to a co n of feature), nal modificat al modificatio	orrection in artion of feature n) above catego)		2	f the for (GSN (Rele (Rele (Rele (Rele (Rele (Rele	I-6 Illowing rele Illowing rel	eases:
Reason for change		entity na descript At prese architec	amed "BG" a ion as to the ent the BG o ture.	as being cor e purpose a does not see	nected nd funct m to pro	to the ions o ovide	AS architecture GGSN via of the BG are any addition	a Gi ir e foun nal ber	nterface. Note of the terminal	lo S. MBMS
										1.2.
Consequences if not approved:			tural figure ibed entity.	remains un	clear wit	h reg	ards to the p	resen	ce of an	
	00	4.0	•							
Other specs affected:	*	X Te	her core spest specifica		ૠ					
Other comments:	æ									


How to create CRs using this form:

- 1) Fill out the above form. The symbols above marked \$\mathbb{X}\$ contain pop-up help information about the field that they are closest to.
- 2) Obtain the latest version for the release of the specification to which the change is proposed. Use the MS Word "revision marks" feature (also known as "track changes") when making the changes. All 3GPP specifications can be

3GPP TS 23.246 v6.0.0 (2003-09)

- downloaded from the 3GPP server under $\underline{\text{ftp://ftp.3gpp.org/specs/}}$ For the latest version, look for the directory name with the latest date e.g. 2001-03 contains the specifications resulting from the March 2001 TSG meetings.
- 3) With "track changes" disabled, paste the entire CR form (use CTRL-A to select it) into the specification just in front of the clause containing the first piece of changed text. Delete those parts of the specification which are not relevant to the change request.

4.2 Reference Architecture Model

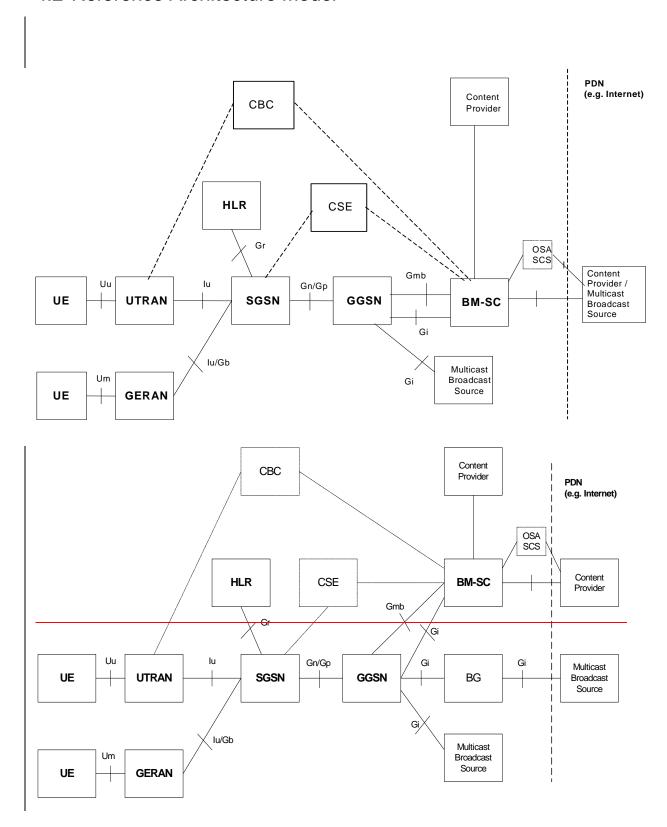

3GPP TS 23.246 v6.0.0 (2003-09)

dotted lines means functions / reference points that are FFS. Gp applies only when SGSN and GGSN are in different PLMN. Note:

Figure 1: Reference architecture to support MBMS

3GPP TSG-SA2 Meeting #36 New York, US 24th – 28th November 2003

Tdoc #S2-034381

		CHAN	GE REQU	JES1	7		CR-Form-v7
ж	23.246	CR <mark>030</mark>	жrev	¥	Current version:	6.0.0	Ħ

For **HELP** on using this form, see bottom of this page or look at the pop-up text over the \(\mathbb{X} \) symbols.

Proposed change affects: UICC apps# X ME X Radio Access Network X Core Network X

Title:	\mathfrak{R}	Re	emoval of security information in	TS 23.246		
			ĺ			
Source:	\mathfrak{R}	3				
Work item code.	: #:	ME	BMS		Date: ₩	28/11/2003
			-			
Category:	\mathfrak{R}	F			Release: ₩	Rel-6
•		Use	one of the following categories:		Use one of	the following releases:
			F (correction)			(GSM Phase 2)
			A (corresponds to a correction in a	n earlier release		(Release 1996)
			B (addition of feature),	•		(Release 1997)
			C (functional modification of feature	e)	R98	(Release 1998)
			D (editorial modification)	•	R99	(Release 1999)
		Deta	ailed explanations of the above cate	gories can	Rel-4	(Release 4)
		be fo	ound in 3GPP <u>TR 21.900</u> .		Rel-5	(Release 5)
					Rel-6	(Release 6)

Reason for change: #	TS 23.246 was approved at SA#21 with the understanding that the security for MBMS is described in 33.246. Hence security information in 23.246 should be removed and a reference to 33.246 added.
Summary of change: #	New reference added, removal of security information and reference made to 33.246
Consequences if # not approved:	Current requirements in TS 23.246 contradict 33.246.

Clauses affected:	₩ 2,9	
Other specs affected:	Y N X Other core specifications Test specifications O&M Specifications	*
Other comments:	* · · · · · · · · · · · · · · · · · · ·	

How to create CRs using this form:

- 1) Fill out the above form. The symbols above marked \$\mathbb{X}\$ contain pop-up help information about the field that they are closest to.
- 2) Obtain the latest version for the release of the specification to which the change is proposed. Use the MS Word "revision marks" feature (also known as "track changes") when making the changes. All 3GPP specifications can be downloaded from the 3GPP server under ftp://ftp.3gpp.org/specs/ For the latest version, look for the directory name with the latest date e.g. 2001-03 contains the specifications resulting from the March 2001 TSG meetings.

3GPP TS 23.246 v6.0.0 (2003-09)

3)	With "track changes" disabled, paste the entire CR form (use CTRL-A to select it) into the specification just in front of
	the clause containing the first piece of changed text. Delete those parts of the specification which are not relevant to
	the change request.

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document.*
- [1] 3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
- [2] 3GPP TS 22.146: "Multimedia Broadcast/Multicast Service; Stage 1".
- [3] 3GPP TS 23.107: "Quality of Service (QoS) concept and architecture".
- [4] 3GPP TS 29.061: "Interworking between the Public Land Mobile Network (PLMN) supporting packet based services and Packet Data Networks (PDN)".
- [5] 3GPP TS 33.246: "Security of Multimedia Broadcast/Multicast Service"

9 Security

- —Security of MBMS is found in 3GPP TS 33.246 [5]
 - A SIM or USIM shall be present in the UE to receive MBMS multicast services.
 - MBMS multicast data transmission to the UEs shall be secured.
 - MBMS security shall be provided by encryption and integrity protection between the UE and the BM-SC.
 - -The BM-SC shall be able to authenticate and authorize each MBMS content provider.
 - The integrity of MBMS data received from the content provider shall be guaranteed.