3GPP TSG-N meet Nice, France, 13 th -	ing #6 - 15 th December 1999		NP-99428 or 3GPP use the format TP-99xxx for SMG, use the format P-99-xxx
	CHANGE REQU	JEST Please see embedded help page for instructions on hor	o file at the bottom of this w to fill in this form correctly.
	03.46	CR Current Vers	
GSM (AA.BB) or 3G (AA.BBB		↑ CR number as allocated by MCC	
For submission to: C	N#6 for approval ere↑ for information	X strat	0
Form: CR cove	er sheet, version 2 for 3GPP and SMG The latest	version of this form is available from: ftp://ftp.3gpp	o.org/Information/CR-Form-v2.doc
Proposed change affer (at least one should be marked with		X UTRAN / Radio	Core Network X
Source: NTT	DoCoMo	Date	7/12/99
Subject: UMT	S particular 23.146 based on GS	M 03.46	
Work item: Real-	time non-transparent FAX in UM	TS	
(only one category B Addi shall be marked C Func	ection esponds to a correction in an ear tion of feature stional modification of feature orial modification	lier release	Phase 2 Release 96 Release 97 Release 98 Release 99 X Release 00
Reason for change: Introd	uction of Real-time non-transparent	FAX in UMTS	
Clauses affected:	See attached pages		
affected: Other Other MS tes BSS te	GSM core specifications at specifications est specifications	 → List of CRs: 27.001, 27.00 → List of CRs:)3
Other comments:			
help.doc			

<----- double-click here for help and instructions on how to create a CR.

-ETSI TS 100 539 V7.0.0 (1999-08

Technical Specificati



Digital cellular telecommunications System (Phase 2+); Technical realization of facsimile group 3 non-transparent (GSM 03.46 version 7.0.0 Release 1998)

Reference

RTS/SMG-040346Q7 (4zo03i03.PDF)

Keywords

Digital cellular telecommunications system, Global System for Mobile communications (GSM)

ETSI

Postal address F-06921 Sophia Antipolis Cedex - FRANCE

Office address

650 Route des Lucioles - Sophia Antipolis Valbonne - FRANCE Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16 Siret Nº 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

Internet

secretariat@etsi.fr Individual copies of this ETSI deliverable can be downloaded from http://www.etsi.org If you find errors in the present document, send your comment te: editor@etsi.fr

Copyright Notification

No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

> © European Telecommunications Standards Institute 1999. All rights reserved.

Contents

Intellectual Property Rights	
Foreword	
1 Scope	6
2 References	6
2 Abbreviations	
	,
3 Service definition	
4 Network architecture	
5 Reference configuration at the mobile station	
5.1 Fax adaptor functionality	
5.2 GSM facsimile machine functionality	
6 Connection types	
6.1 Protocol model	
6.2 Principles of the Facsimile Protocol Adaptation	
6.2.1 Fax Adaptor Protocol	
6.2.2 Interactions and interventions within the fax adaptors	
6.2.3 Training Check	
6.2.4 Mobile to mobile calls 6.2.5 Facsimile Message Transfer	
6.2.5.1 Message Transcoding	
6.2.5.2 Generation of the normal data element	
6.2.5.2 Generation of the normal data element	
6.3 Procedure interrupts	
6.4 Radio channel modification	
6.5 Performance constraints	
7 Use of terminal adaptation functions	
7.1 Standard TAFs for synchronous services	
7.2 Specific TAFs for facsimile service	
7.2.1 BCS phase	
7.2.1.1 BCS command/response procedures 7.2.1.2 Compatibility checking	
7.2.1.2 Compatibility enecking	
7.2.1.4 Control of transmission rate	
7.2.1.5 Clocking	
7.2.2 Message phase	24
7.2.2.1 Normal facsimile data	24
7.2.2.2 Error correction facsimile data	24
7.2.2.3 Buffering of facsimile coded data	
7.2.2.3.1 Transmitter adaptation function	
7.2.2.3.2 Receiver adaptation function	
7.2.3 Disconnect procedure	
7.2.4 Timeouts	
8 Signalling aspects	
8.1 Handling of tonal signals	
8.2 Call establishment	
8.2.1 Mobile terminated call	
8.2.1.1 Speech then facsimile	
8.2.1.2 Auto answer	
8.2.2 Mobile originated calls	
8.2.2.1 Speech then facsimile	
8.2.2.2 Auto calling	
8.2.2.3 Manual calling	
9 Interworking to fixed networks	
9.1 Interworking to PSTN	
-	

9.2	Interworking to ISDN	 30
Anne	ex A (normative): Structure and contents of the fax adaptor protocol elements	 31
1	Principle structure of an element	
2	Element discriminator coding	31
2.1	BCS element	
2.2	BCS abort element	
2.3	BCS transmit request element	
2.4	Preamble element	
2.5	Normal fax data element	32
2.6	Error correction fax data element	32
2.7	End of data element	
2.8	TCF element	
<u>3</u> 3.1	Information field content BCS element	
3.2	BCS abort element	
3.3	BCS transmit request element	
3.4	Preamble element	
3.5	Normal fax data element	
3.6	Error correction fax data element	
3.7	End of data element	
3.8	TCF element	
4	- Relationship of FA protocol elements with LAPB, L2RBOP and RLP	34
Appe	endix II (informative): Procedure examples	37
Anne	ex B (informative): Change Request History	 50
Histe	Эгу	51

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for ETSI members and non-members, and can be found in SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available free of charge from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://www.etsi.org/ipr).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Specification (TS) has been produced by the Special Mobile Group (SMG).

The present document defines the technical realization of facsimile group 3 using non-transparent network support for the European digital cellular telecommunications system.

The contents of the present document is subject to continuing work within SMG and may change following formal SMG approval. Should SMG modify the contents of the present document, it will be re-released with an identifying change of release date and an increase in version number as follows:

Version 7.x.y

where:


7 indicates Release 1998 of GSM Phase 2+

- the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- y the third digit is incremented when editorial only changes have been incorporated in the specification.

The specification from which the present document has been derived was originally based on CEPT documentation, hence the presentation of the present document may not be entirely in accordance with the ETSI/PNE rules.

3G TS 23.146 V2.0.0 (1999-12)

Technical Specification

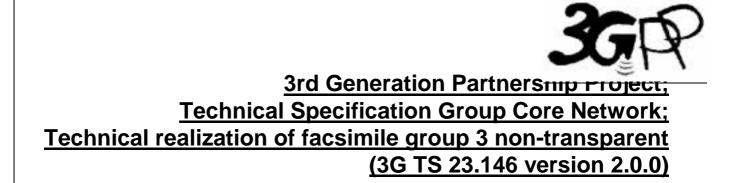

The present document has been developed within the 3rd Generation Partnership Project (3GPPTM) and may be further elaborated for the purposes of 3GPP.

The present document has not been subject to any approval process by the 3GPP Organisational Partners and shall not be implemented. This Specification is provided for future development work within 3GPP only. The Organisational Partners accept no liability for any use of this Specification. Reference DTS/TSGN-0323046U

> Keywords 3GPP, CN

<u> 3GPP</u>

Postal address

<u>3GPP support office address</u> <u>650 Route des Lucioles - Sophia Antipolis</u> <u>Valbonne - FRANCE</u> <u>Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16</u>

Internet

http://www.3gpp.org

Contents

Forew	vord	<u></u> 11
1	Scope	12
2	References	12
2.1	Abbreviations	
3	Service definition	
4	Network architecture	
-		
5	Reference configuration at the mobile station	. <u></u> 15
<u>5.1</u> 5.2	Fax adaptor functionality UMTS facsimile machine functionality	
5.2	-	
6	Connection types	
6.1	Protocol model	
6.2	Principles of the Facsimile Protocol Adaptation	
6.2.1	Fax Adaptor Protocol	<u></u> 20
<u>6.2.2</u>	Interactions and interventions within the fax adaptors	22
6.2.3	Training Check	24
6.2.4	Mobile to mobile calls	
6.2.5	Facsimile Message Transfer	
<u>6.2.5.1</u> 6.2.5.2		
6.2.5.3		
<u>6.3</u>	Procedure interrupts	
<u>6.4</u>	Radio channel modification	
6.5	Performance constraints	
7	Use of terminal adaptation functions	
7.1	Standard TAFs for asynchronous services	
7.2	Specific TAFs for facsimile service	
7.2.1	BCS phase	
<u>7.2.1.1</u> 7.2.1.2		
7.2.1.2		
7.2.2	Message phase	
7.2.2.1		
7.2.2.2		
7.2.2.3		
7.2.2.3		
7.2.2.3		
7.2.3	Disconnect procedure	
7.2.4	Timeouts	<u></u> 35
8	Signalling aspects	
8.1	Handling of tonal signals	
8.2	Call establishment	
8.2.1	Mobile terminated call	
8.2.1.1		
8.2.1.2		
8.2.2	Mobile originated calls	
8.2.2.1	*	
8.2.2.2		
8.2.2.3	3 Manual calling	<u></u> 38
9	Interworking to fixed networks	<u></u> 39
9.1	Interworking to PSTN	
9.2	Interworking to ISDN	

Annex A (normative): Structure and contents of the fax adaptor protocol elements	<u>41</u>
<u>1</u> IFP	41
<u>2</u> UDPTL	41
<u>3 UDP</u>	41
<u>4 IP 41</u>	
<u>5 PPP</u>	41
4 Typical frame mapping within FA protocol and that between FA protocol and RLPL2RCOP	<u>45</u>
Appendix I (informative): Abbreviations from ITU-T Recommendation T.30 and T.4	47
Appendix II (informative): Procedure examples	<u>48</u>
Annex B (informative): Change history	77
History	78

Foreword

This Technical Specification has been produced by the 3GPP.

This specification defines the technical realization of facsimile group 3 using non-transparent network support within the <u>3GPP system.</u>

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of this TS, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;

2 presented to TSG for approval;

- 3 Indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the specification;

1 Scope

The present document deals with the procedures allowing the technical realization of the real time end-to-end facsimile group 3 service within the <u>UMTSGSM-PLMN</u> using non-transparent network support according to the definition of the Teleservices 61 and 62 specified in 02.03. Within this document particular attention is given to Teleservice "Alternate speech/facsimile group 3" (Teleservice 61). However, the definitions apply also to Teleservice "Automatic facsimile group 3" (Teleservice 62) with the exception of all actions concerned with the speech phase. Consequently, in the following descriptions the term "Teleservice" denotes both Teleservice 61 and Teleservice 62 as appropriate.

NOTE: Some facilities associated with alternate speech/ facsimile group 3 may not be available with version 1 of MAP. In particular, the in-call modification procedure following an inter MSC handover is not supported by this version. This imposes the limitation that for all calls it will not be possible to change between speech and facsimile following an inter MSC handover.

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies.
- A non-specific reference to an ETS shall also be taken to refer to later versions published as an EN with the same number.
- [1] GSM 01.04: "Digital cellular telecommunications system (Phase 2+); Abbreviations and acronyms".
- [2] GSM 02.03: "Digital cellular telecommunications system (Phase 2+); Teleservices supported by a GSM Public Land Mobile Network (PLMN)".
- [3] GSM 03.10: "Digital cellular telecommunications system (Phase 2+); GSM Public Land Mobile Network (PLMN) connection types".
- [4] GSM 04.02: "Digital cellular telecommunications system (Phase 2+); GSM Public Land Mobile Network (PLMN) access reference configuration".
- [5] 3G TS 24.008: "Mobile radio interface layer 3 specification".
- [5] GSM 04.08: "Digital cellular telecommunications system (Phase 2+); Mobile radio interface layer 3 specification".
- [6] GSM 04.21: "Digital cellular telecommunications system (Phase 2+); Rate adaption on the Mobile Station Base Station System (MS BSS) interface".
- [7] 3G TS 27.001: "General on Terminal Adaptation Functions (TAF) for Mobile Stations (MS)".
- [7] GSM 07.01: "Digital cellular telecommunications system (Phase 2+); General on Terminal Adaptation Functions (TAF) for Mobile Stations (MS)".
- [8] 3G TS 27.002: "Terminal Adaptation Functions (TAF) for services using asynchronous bearer capabilities".
- [8] GSM 07.03: "Digital cellular telecommunications system (Phase 2+); Terminal Adaptation Functions (TAF) for services using synchronous bearer capabilities".

[9]	3G TS 29.007: "3GPP; TSG CN; General requirements on interworking between the Public Land Mobile Network (PLMN) and the Integrated Services Digital Network (ISDN) or Public Switched
[9]	<u>Telephone Network (PSTN)".</u> <u>GSM 09.07: "Digital cellular telecommunications system (Phase 2+); General requirements on</u> interworking between the Public Land Mobile Network (PLMN) and the Integrated Services Digital Network (ISDN) or Public Switched Telephone Network (PSTN)".
[10]	CCITTITU-T Recommendation F.160: "General operational provisions for the international public facsimile services".
[11]	CCITTITU-T Recommendation T.4: "Standardization of group 3 facsimile apparatus for document transmission".
[12]	CCITTITU-T Recommendation T.30: "Procedures for document facsimile transmission in the general switched telephone network".
[13]	CCITT Recommendation T.35: "Procedure for the allocation of CCITT members' codes".
[1 4 <u>13]</u>	CCITT <u>ITU-T</u> Recommendation V.21: "300 bits per second duplex modem standardized for use in the general switched telephone network".
[15<u>14]</u>	CCITTITU-T Recommendation V.24: "List of definitions for interchange circuits between data terminal equipment (DTE) and data circuit-terminating equipment (DCE)".
[16]	CCITT Recommendation V.25 bis: "Automatic calling and/or answering equipment on the general switched telephone network (GSTN) using the 100 series interchange circuits".
[17<u>16]</u>	CCITTITU-T Recommendation V.27 ter: "4 800/2 400 bits per second modem standardized for use in the general switched telephone network".
[18<u>17]</u>	CCITTITU-T Recommendation V.29: "9 600 bits per second modem standardized for use on point-to-point 4-wire leased telephone-type circuits".
[18]	ITU-T Recommendation V.17: "A 2-wire modem for facsimile applications with rates up to 14400 <u>bit/s".</u>
[19]	CCITT <u>ITU-T</u> Recommendation X.300: "General principles and arrangements for interworking between public data networks, and between public data networks and other networks".
[20]	ITU-T Recommendation T.38: "Procedures for real-time Group 3 facsimile communication over IP <u>networks".</u>
[21]	ITU-T Recommendation X.691: "Information technology – ASN.1 encoding rules – Specification of Packed Encoding Rules (PER)".
[22]	IETF RFC 1662: "PPP in HDLC-like Framing"
[23]	IETF RFC 1661: "The Point-to-Point Protocol (PPP)"
[24]	IETF RFC 1570: "PPP LCP Extensions"
[25]	IETF RFC 1332: "The PPP Internet Protocol Control Protocol (IPCP)"
[26]	IETF RFC 791: "Internet Protocol".
[27]	IETF RFC 768: "User Datagram Protocol".

2.1 Abbreviations

In addition to those below abbreviations used in the present document are listed in GSM 01.04.

BCSBinary coded signallingCCTCircuit(s)

I/F	Interface
RA1,RA1',RA2	Rate adaptation functions
SREJ	Selective reject
T-FAX	Transmission side facsimile
T-TAF	Transmission side terminal adaptation function
R-FAX	Reception side facsimile
R-TAF	Reception side terminal adaptation function
T-adaptor	Transmission side facsimile adaptor
R-adaptor	Reception side facsimile adaptor

The abbreviations for the facsimile specific protocol elements and signals are listed in appendix I.

3 Service definition

The fixed network facsimile group 3 service, as basically defined in <u>CCITTITU-T</u> Recommendation F.160, is an international telematic service for document transmission between two facsimile group 3 terminals.

The service specifications are comprised of two parts:

- the control procedures described in CCITTITU-T Recommendation T.30 and
- the document transmission coding described in CCITTITU-T Recommendation T.4.

The <u>GSM-UMTS</u> facsimile group 3 Teleservice is intended to allow connections between facsimile group 3 terminals using:

- a UMTSGSM PLMN as stand-alone facility for mobile-to-mobile communication;
- a <u>UMTSGSM</u> PLMN to have access to fixed networks PSTN and/or ISDN for mobile to/from fixed network communication.

For this Teleservice, the coding of the facsimile document is as per <u>CCITTITU-T</u> Recommendation T.4 and the protocol as per <u>CCITTITU-T</u> Recommendation T.30 both modified within the PLMN as detailed in this specification.

The interworking between different networks is based on CCITTITU-T Recommendation X.300.

The particular features of this Teleservice are:

- it uses point-to-point communication;
- the information transfer mode is circuit, duplex, <u>a</u>synchronous;
- the information transfer capability is alternate speech/ facsimile group 3 or facsimile group 3 only;
- both mobile originated and mobile terminated calls are supported;
- different end-to-end message speeds as per <u>CCITTITU-T</u> Recommendation T.30 may be used within the same connection to match the appropriate quality requirements;
- use of the standard <u>a</u>synchronous terminal adaptation function for non-transparent network support (as per <u>GSM 07.033G TS 27.002</u>) within the <u>MSUE</u> is envisaged.

4 Network architecture

The network architecture applicable to this Teleservice is shown in figure 1/03.4623.146 below.

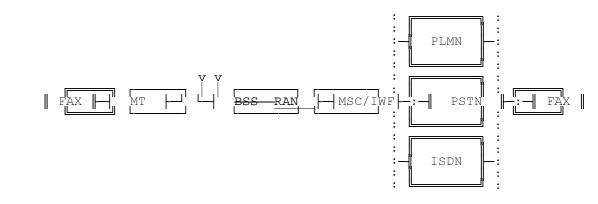


Figure 1/03.4623.146: Network architecture

It shows the case of mobile to fixed network interworking. For mobile-to-mobile calls, there would effectively be a loop back within the PLMN using two IWFs.

5 Reference configuration at the mobile station

The mobile station reference configurations described in this clause are defined as per GSM 04.02.

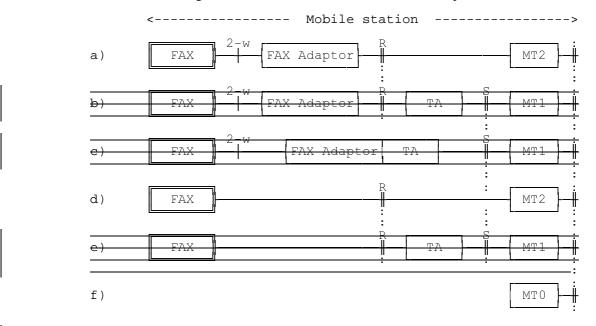


Figure 2/03.4623.146: Reference configurations

The teleservice definitions in GSM 02.03 regard the facsimile group 3 terminal as a 2-wire analogue terminated equipment. In order to connect this to the MT2 a separate "fax adaptor" device is necessary. This configuration, shown in figure 2a/03.4623.146, has to be considered as the standard configuration, so that all the existing facsimile group 3 terminals can be connected to the PLMN.

An alternative realization would be to combine a facsimile group 3 terminal and the fax adaptor into a special "<u>UMTSGSM</u> facsimile machine", directly providing a digital output. Although such a terminal must appear to the MT2 as identical as the fax adaptor (i.e. with an identical interface and protocol), it would allow for a significantly smaller and simpler facsimile machine. This configuration is shown in figure 2d/03.46.

In addition of course, it is always possible to realize an MT0, as per figure 2f/03.46, where both the facsimile and mobile termination functions are considered to be part of one integrated unit.

The remaining configurations concern the use of an S interface and are considered as optional configurations. Their use is for further study.

The particular terminal adaptation functions used are those detailed in <u>3G TS 27.002GSM 07.03</u>-for non-transparent bearer capability. The interface to the MT2 used is according to <u>CCITTITU-T</u> Recommendation V.24 with an option for support of <u>3G TS 27.007</u> <u>CCITT Recommendation V.25bis</u> procedures for auto calling and auto answering.

5.1 Fax adaptor functionality

The fax adaptor block, figure 3/03.4623.146, is intended to specifically complement the facsimile group 3 terminal in order to be able to communicate over a GSM-UMTS PLMN.



Figure 3/23.14603.46: Fax adaptor scheme

Whether it has to be a function internal to the <u>UMTSGSM</u> PLMN, or an external accessory associated with the facsimile group 3 terminal, is beyond the scope of this specification, and in any case, does not affect the working of the procedure as described here.

It can be functionally partitioned in two sections:

- an analogue section, dealing with:
 - the modulation and demodulation processes according to <u>CCITTITU-T</u> Recommendation V.21, V.27ter, and V.29 and V.17 as explained in <u>CCITTITU-T</u> Recommendation T.4 and T.30;
 - handling of the signalling on the 2-wire path to the associated facsimile terminal, including auto calling and auto answering functions where necessary (see clause 8).
- a digital section, dealing with:
 - overall control of the adaptor;
 - monitoring and, where necessary, manipulating the <u>CCITTITU-T</u> Recommendation T.30 protocol as detailed in this specification;
 - connection to the MT using the interface according to <u>CCITTITU-T</u> Recommendation V.24 as described in <u>3G TS 27.002GSM 07.03</u>;
 - buffering of facsimile data;
 - transcoding of the <u>CCITTITU-T</u> Recommendation T.4 document content for transmission across the radio interface as detailed in this specification;
 - where necessary, auto calling and auto answering functions according to CCITT-3G TS 27.007Recommendation V.25bis.

5.2 GSM-UMTS facsimile machine functionality

The special <u>GSM-UMTS</u> facsimile machine shown in the <u>MSUE</u> configuration of figure 2d/23.14603.46 is similar to the digital part of the fax adaptor, but without any of the analogue portions.

It appears at the <u>CCITTITU-T</u> Recommendation V.24 interface as identical as the fax adaptor, i.e. the MT2 needs to have no knowledge of the particular configuration used.

6 Connection types

<u>In UMTS, followingTable 1/03.46 shows the</u> connection elements attributes applicable to these Teleservices, extracted from GSM 03.10.

Protocol type	Access to TAF	Radio interface	Intermediate	BS MSC/IWF			
of fig. 6	of the Mobile	connection element	rate	connection			
GSM 03.10	Station		RA1 to RA2	element			
Model 6: Speech	<u> </u>	Speech/GSM		CCITT A law			
Model 7:	C/D/S-UDI	C/D/S UDI	C/D/S UDI	C/D/S UDI			
Facsimile	<u>-9.6 kbit/s</u>	-12 kbit/s	-16 kbit/s	-64-kbit/s			
Group 3 NT	(-4.8 kbit/s)						
_	(2.4 kbit/s)						
C = circuit switched S = synchronous							
D = duplex UDI = unrestricted digital information							

Table 1/03.46: Connection elements

bit/s)	
synchronous	
stricted digital inf	ormation
Non-trai	nsparent
Full Du	olex
Asynchronous	
14.4 or 9.6[kbp	s
28.8[kbps]	
	stricted digital inf Non-tran Full Duj Asynchronous 14.4 or 9.6[kbp

Layer 1 at R interface conforms to 3G TS 27.002. Layer 2 at R interface (Layer2 protocol between FAXadaptor and TAF) is not specified in 3GPP. Figure 4/03.46 shows the scheme of a typical GSM PLMN connection for these teleservices, considering R and S access, respectively, at network termination.

To support the <u>CCITTITU-T</u> Recommendation T.30, requiring different transmission rates, the following strategy shall be implemented:

- the channel on the radio interface in <u>UMTS</u> shall be a full rate channel used for <u>RLP</u> protocol transmission (non transparent network support);
- no modification procedure (Channel Mode Modify: CMM) shall be performed during the data phase of the call;
- the user rate of the MT2 is preferably set to 9-60028800 bit/s;
- the transmission rate between the fax adaptor and the associated facsimile terminal at both ends shall be the same, i.e. there will be only one common end-to-end transmission rate at any given time;
- the negotiation of the message speed shall be end-to-end between the two facsimile terminals; this allows also for a message speed of 2400, 4800, 7 200, 9600, or 12000 bit/s to be used;
- the connection between the fax terminals is divided into three logical sections (fax terminal -(1)- fax adaptor -(2)- fax adaptor -(3)- fax terminal);
- flag stuffing is applied by the fax adaptor towards the associated facsimile terminal within the constraints of <u>CCITTITU-T</u> Recommendation T.30, to keep the data link active whenever a procedure delay occurs;
- the BCS protocol elements and the facsimile coded data are buffered at both ends of the radio interface (in the fax adaptors), if necessary, to guarantee data integrity;
- a specific fax adaptor protocol (FA protocol) is provided between both the fax adaptors to cater for the appropriate link control.

		ĐT	<u>E</u>	R	I)CE			
			<	114 115					C r o
p			<	108 107	>		P	M	u P
	2-w	Fax Adaptor	< <	105 106 109	>	MT 2	 M		 3 *
		L	<	125			<u>N</u>	I 	 r m
i n 			<	103 104	>				-i n a
<u>_</u>			<	102					

Figure 4a/03.46: Standard Teleservice connection

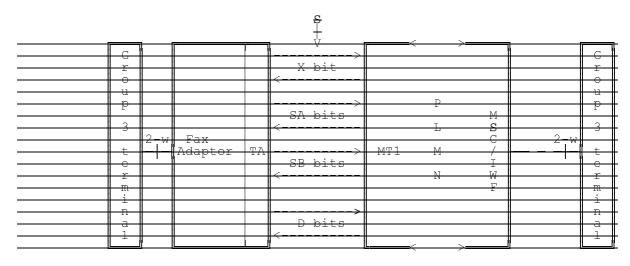


Figure 4b/03.46: Optional Teleservice connection

6.1 Protocol model

Figure 5/23.14603.46 depicts the protocol model for this Teleservice, deduced from model 7 of figure 6/GSM 03.10.

It should be noted that depending on the particular implementation the R reference point may not explicitly exist. In this case the <u>LAPB Layer2 protocol between FAXadaptor and TAF-protocol</u> and consequently the <u>LAPB Layer2 protocol</u> between FAXadaptor and TAF-protocol and consequently the <u>LAPB Layer2 protocol</u> between FAXadaptor and TAF-entities operating across this interface may be omitted. The protocol stack at the radio interface, however, is not affected by this consideration, i.e. RLP and <u>L2RBOPL2RCOP</u> always apply.

The main point to be underlined is that all the protocol modules specific for this Teleservice are confined in the fax adaptor functions at both the MT and MSC/IWF ends. This includes the layer 2 protocol between FAXadaptor and TAF entity function for LAPB to be operated towards the standard TAF for asynchronous non-transparent bearer capability.

(GSM 03.46 version 7.0.0 Release 1998)3G TS 23.146 version 2.0.0

Mobile station			Base station						MSC/	MSC/IWF						
			Radio I/F BSS-MSC I/F							Fax adaptor						
 30	· · · · · ·	>				FA	 _prot	ocol		1				<	 l	T.30
	Fax Adaptor			L2				L2RBC	P	+		L2R			Fax Adaptor	
	Function		LAPB	<u>}</u> −	RLP		<u> </u>	RLP				RLP			Function	-
	\]			 //			 			+		J	ł	<u> </u>		_
			///////////////////////////////////////	/	RZ	1		A1' F	_/	+	RZ	1				
		· · · · · · · · · · · · · · · · · · ·	//			1	/	_	1	+	/			-		
	I,	/F cct	I/F cct			FEC			RA2		RA2					

Figure 5/03.46: Protocol model for non-transparent support

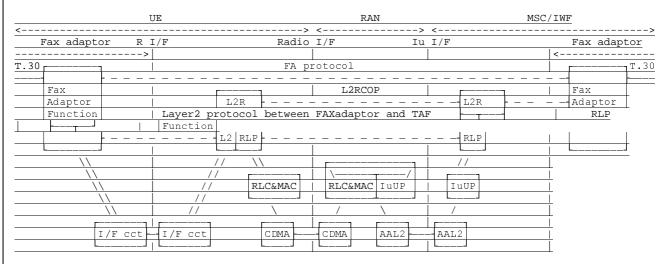


Figure 5/23.046: Protocol model for non-transparent support in UMTS

6.2 Principles of the Facsimile Protocol Adaptation

The basic approach of this specification for facsimile group 3 is:

- to use the standard non-transparent network support (including e.g. standard MT) as basically defined in technical specifications <u>3G TS 27.001, 27.002 and 29.007GSM 07.01, GSM 07.03, and GSM 09.07;</u>
- to use the <u>CCITTITU-T</u> Recommendation T.30 procedure at both ends of the connection between the fax adaptor and the associated facsimile terminal and to pass the protocol elements according to <u>CCITTITU-T</u> Recommendation T.30 functionally unchanged wherever possible;
- to use a specific protocol between both the fax adaptors across the radio interface; and
- to intervene within the fax adaptors in order to concatenate the applicable connection sections.

Basically there are four problem areas:

- support of facsimile group 3 with a digital connection type;
- unpredictable delays on the radio interface due to actual RLP working conditions (ARQ);
- the need to change the transmission rate "locally" in the fax adaptors both in the <u>UEMS</u> and in the MSC/IWF and to adapt it to the constant user rate of the TAF;
- the inability to support some CCITTITU-T Recommendation T.30 features.


To overcome these problems some particular functions within the fax adaptors are necessary, such as:

- buffering of BCS frames and facsimile coded data prior to transfer;
- autonomous interventions such as BCS command inhibiting within the fax adaptors;
- autonomous interactions between any fax adaptor and the associated facsimile terminal such as BCS command/response repetition; and
- provision of a fax adaptor protocol as interchange protocol by flow control between the fax adaptors.

Following this strategy, an interchange model is defined concentrating on the facsimile relevant components. According to this model three connection sections can be distinguished:

- a) between fax adaptor and associated facsimile terminal;
- b) between the both fax adaptors and again;
- c) between fax adaptor and associated facsimile terminal.

The fax adaptors fully relying on the standard supporting layers (e.g. TAF) will also have to cater for the correct establishment and control of these layers including traffic channel synchronization and status information exchange in particular with respect to circuit 106 and circuit 109 (according to <u>CCITTITU-T</u> Recommendation V.24). Once these circuits have been set to ON (traffic channel synchronization), they must be kept in the ON condition during the entire facsimile phase of a connection (refer subclause 6.3 "Procedure Interrupts").

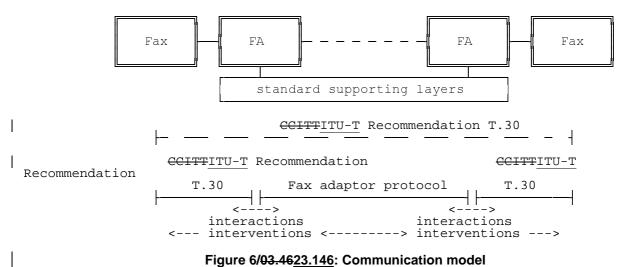

6.2.1 Fax Adaptor Protocol

To cater for the appropriate facsimile transmission some protocol elements and their use (procedure) are defined. These protocol elements are exchanged between both fax adaptors. They are defined as follows and are structured as outlined in annex A:

- BCS element:

The BCS element is used to relay <u>CCITTITU-T</u> Recommendation T.30 BCS frames. It includes the possibility also to transmit parts of an entire BCS frame (segmentation). This will apply when the BCS frame content - excluding the address and control fields of the BCS frame - to be included exceeds a length of 20 octets (e.g. non standardized frames) which otherwise would cause unacceptable delays when relaying the BCS frame as a whole. For that purpose, the BCS frame element carries information on the integrity of a BCS frame element.

To guarantee the overall integrity of the BCS frames each single element includes a sequence number which is set to zero within each first BCS element carrying either a BCS command or BCS response (i.e. triggered by the preamble). It is incremented by one with each successive element belonging to the same BCS command/response transmitted across the radio interface. The counting is carried out independently for each direction of the element transmission. The number of BCS elements which can be transmitted within one sequence (BCS command/response) is limited to 256.

The fax adaptor receiving those elements checks the correct sequence of the numbers and, by this means, is able to detect loss of BCS elements and to act accordingly.

- BCS abort element:

The BCS abort element is used to indicate to the remote fax adaptor that an error occurred during the BCS frame reception and the transmission of the related BCS frame is to be aborted.

BCS transmit request element:

The BCS transmit request element is used in two ways:

- a) to request initial transmission of a BCS command or response after the preamble element preceding each BCS element sequence carrying such a command/response has been recognized;
- b) to request retransmission of previously transmitted BCS elements in case of an error between both the fax adaptors. This applies e.g. if a sequence error has been recognized. The retransmission starts with the BCS element the number of which is indicated in the transmit request.
- Preamble element:

The preamble element is transmitted once for each received preamble as soon as the preamble has been recognized. It is used to switch on the fax modem and to start transmitting the preamble at the remote side of the radio interface 300 ms after the preamble element reception. The duration of the preamble must be the minimum still permitted by CCITT Recommendation T.30.

- Normal data element:

The normal data element is used to relay buffered facsimile data which have been received and transcoded when not operating in error correction mode.

- Error correction data element:

The error correction data element is used to relay buffered facsimile data frames received when operating in error correcting mode. It contains the entire respective data frame excluding the address and control fields of the frame.

- End of data element:

The end of data element is used to indicate the end of the message transmission. Subsequently, a preamble element is to follow.

- TCF element:

The TCF element TCF_OK or TCF_NOK is used to inform the opposite fax adaptor function about the result of the autonomously performed TCF phase.

- TCF error detection element:

The TCF error detection element is used to inform the opposite adaptor of the TCF error.

- CNG element:

CNG element is used to notify to the adaptor, which received this element from the radio network, that it is in reception side.

- CED element:

CED element is used to notify to the adaptor, which received this element from the radio network, that it is in transmission side.

- DCN transmission confirmation element:

DCN transmission confirmation element is used to indicate the R- adaptor informs the T- adaptor that the R- adaptor transmitted DCN to the R-FAX.

6.2.2 Interactions and interventions within the fax adaptors

Interactions and interventions within the fax adaptors are necessary:

- where protocol elements cannot be passed due to the differences between the PSTN and the GSM-UMTS system;
- where the content of protocol elements has to be aligned with the capabilities of the supporting <u>UMTSGSM</u> PLMN;
- where BCS commands are repeated by the facsimile terminal after a time-out due to transmission delay across the radio interface;
- where BCS commands must be repeated autonomously by the fax adaptor after a time-out when no response has been received from the associated facsimile terminal;
- where the retransmission of BCS commands is requested by the associated facsimile terminal sending a CRP frame due to recognized transmission errors;
- where the retransmission of BCS element(s) is requested by any fax adaptor using <u>flow control by RLP without</u> being conscious of the BCS elementthe BCS transmit request;
- during the transmission of facsimile coded data where the document content is transcoded to save transmission capacity at the radio interface (however, this does not apply when using the <u>CCITTITU-T</u> Recommendation T.30 error correction mode).
- Flow control between the T- adaptor and the R- adaptor is started at the time when the connection of L2RCOP is established and finishes when the connection of L2RCOP is released. The adaptor distinguishes the state of the opposite adaptor by using the busy flag in the transmission and reception frame. Then it transmits the dummy signal to the associated Fax. The following description shows the phases using the flow control.
 - After the transmission of EOP from the T- adaptor to the R- adaptor, the T- adaptor distinguishes whether it itself or the R- adaptor is busy or not. If either is busy, the T- adaptor should proceed the following process.

1. Change the interval between EOP received from the associated FAX and the preamble /MCF.

- 2. If the first step is not sufficient, send non-response or RTN instead of MCF.
- After the transmission of MPS from the T- adaptor to the R- adaptor, the T- adaptor distinguishes whether it itself or the R- adaptor is busy or not. If either is busy, the T- adaptor should proceed the following process.
 - 1. Change the interval between MPS received from the associated FAX and preamble /MCF.
 - 2. If the first step is not sufficient, send RTP instead of MCF.
- After the transmission of EOM from the T- adaptor to the R- adaptor, the T- adaptor distinguishes whether it itself or the R- adaptor is busy or not. If either is busy, the T- adaptor should proceed the following process.
 - 1. Change the interval between EOM received from the associated FAX and preamble /MCF.
 - 2. If the first step is not sufficient, send non-response instead of MCF.
- After the transmission of CTC from the T- adaptor to the R- adaptor, the T- adaptor distinguishes whether it itself or the R- adaptor is busy or not. If either is busy, the T- adaptor should proceed the following process.
 - 1. Change the interval between CTC received from the associated FAX and preamble /CTR.
- After the transmission of PPS-Q from the T- adaptor to the R- adaptor, the T- adaptor distinguishes whether it itself or the R- adaptor is busy or not. If either is busy, the T- adaptor should proceed the following process.

1. Change the timer between PPS-Q received from the associated FAX and preamble /MCF.

2. If the first step is not sufficient, send PPR or RNR instead of MCF.

- After the transmission of EOR-Q from the T- adaptor to the R- adaptor, the T- adaptor distinguishes whether it itself or the R- adaptor is busy or not. If either is busy, the T- adaptor should proceed the following process.

1. Change the timer between EOR-Q received from the associated FAX and preamble /MCF.

- 2. If the first step is not sufficient, send ERR or RNR.
- After the T- adaptor receives the RR from the T-FAX, if PPS-Q was received as the post message, the Tadaptor distinguishes whether the state of itself or the R- adaptor is busy or not. If either is busy, the Tadaptor should proceed the following process.

1.Change the timer between RR received from the associated FAX and preamble /MCF.

2. If the first step is not sufficient, send PPR or ERR or RNR

To perform the necessary interactions and interventions the fax adaptors both in the MS and in the MSC/IWF have to monitor the BCS frames and the facsimile coded data exchanged between the two facsimile terminals and to act as detailed below:

- reception of <u>CCITTITU-T</u> Recommendation T.30 BCS protocol elements from the associated facsimile terminal discarding BCS commands repetitively received due to time-out in the facsimile terminal;
- transmission of <u>CCITTITU-T</u> Recommendation T.30 BCS protocol elements to the associated facsimile terminal autonomously repeating BCS commands towards the accepting facsimile terminal if necessary after time-out or on request by CRP;
- control of the half duplex connections between the fax adaptor and the associated facsimile terminal;
- storage of BCS commands/responses completely received from the associated facsimile terminal;
- relay of the <u>CCITTITU-T</u> Recommendation T.30 protocol elements between the two facsimile terminals by using the appropriate FA protocol elements and mapping them onto the particular L2R protocol (<u>L2RBOPL2RCOP</u>) elements and vice versa as indicated below;
- changing information elements of the BCS frames indicating capabilities which cannot be supported by the PLMN;
- transmission/reception of the <u>CCITTITU-T</u> Recommendation T.30 training check frames (TCF) to/from the associated facsimile terminal;
 - phasing/training with the associated facsimile terminal;
 - transcoding of the normal facsimile coded data received from the facsimile terminal and writing them into a buffer in the fax adaptor associated with the transmitting facsimile terminal;
 - reading of the facsimile coded data from the buffer for transmission across the radio interface using the appropriate FA protocol elements;
 - writing of the facsimile coded data received across the radio interface into a buffer at the receiving end of the connection section between MS and MSC/IWF;
 - reading and reverse transcoding of the buffered normal facsimile coded data and transmitting them to the associated facsimile terminal;
 - control of a response transmission timer, to guarantee the reception of a response right in time (refer to subclause 7.2.1.1).
 - The adaptor transmits dummy signal, which means the T.30 procedure, to avoid the timer time -out.
 - The adaptor adjusts the time interval.

- If the facsimile coded data in the memory of the adaptor is over the busy threshold of the adaptor, the T- adaptor indicates busy flag on. If it is not over, the adaptor indicates busy flag off.

The algorithm for mapping the <u>CCITTITU-T</u> Recommendation T.30 information onto the L2R protocol elements consists of three steps:

- generation of the appropriate FA protocol element including the <u>CCITTITU-T</u> Recommendation T.30 protocol element (BCS frames or facsimile coded data);
- generation of a single <u>LAPB_Layer2 protocol between FAXadaptor and TAF</u> I-frame including the FA protocol element in the information field;
- segmentation of a particular <u>LAPB_Layer2 protocol between FAXadaptor and TAF</u> I-frame into <u>L2RBOPL2RCOP</u> PDUs according to <u>3G TS 27.002GSM 07.03</u>.

To regenerate the original <u>CCITTITU-T</u> Recommendation T.30 protocol element the actions must be reversed at the remote fax adaptor.

The support of guard tones by the fax adaptor in the MSC/IWF is an implementation option.

6.2.3 Training Check

The training check sequence (TCF) as per <u>CCITTITU-T</u> Recommendation T.30 is exchanged only locally between the fax adaptor and the associated facsimile terminal. <u>The training check sequence sent by the fax adaptor must have the minimum duration permitted (ref. to ITU-T Recommendation T.30). Because the CFR is not the signal transmitted between end-end the T- adaptor selects the signal (CFR, FTT), that should be sent to the T-FAX, by using the flow flag control function to monitor the state of the R- adaptor However, the subsequent exchange of CFR or FTT is, in principle, end to end. The training check sequence sent by the fax adaptor must have the minimum duration permitted (ref. to <u>CCITTITU-T</u> Recommendation T.30).</u>

As a consequence of this local procedure, the fax adaptors have to check the received TCF whether the quality requirements are satisfied. Depending on the result of that check, the fax adaptor recognizing a bad line will eventually change the CFR to be a FTT. If the T- adaptor receives incorrect TFC from the T-FAX, it transmits the TCF error detection element to the R- adaptor. On the other hand, if the R- adaptor receives the TCF error detection element from the radio network, it transmits the TCF error to the R-FAX, indicating a negative training result and transmits the TCF_element (TCF_OK or TCF_NOK).

With the knowledge of the TCF check result of the opposite fax adaptor function and the received response frame (CFR or FTT) from the fax apparatus, the fax adaptor, which generated the TCF, is able to deduce the following phase.

The message transfer phase in the receiving fax adaptor function is entered upon reception of TCF element TCF_OK and CFR. The modem training at transmission speed shall start if R- adaptor receives the facsimile coded data within Ts after the receipt of CFR from the associated FAX. The modem training at transmission speed shall start after reception of the first facsimile coded data from the opposite fax adaptor function or autonomously 5.5s after reception of CFR.

In the other cases, the transmitting fax adaptor function shall repeat the last DCS/TCF sequence 3s after reception of the response, if no new DCS frame from the opposite fax adaptor function is available.

The T- adaptor transmits the TCF error detection to the R- adaptor if TCF transmitted by the T-FAX is incorrect, whether the call was mobile to mobile call or mobile to fixed. Only in case of a mobile to mobile call (refer to subclause 6.2.4/ GSM 03.46) a TCF_NOK leads to transmission of an invalid TCF.

The R- adaptor transmits the TSI, DCS to the R-FAX, if it can not receive the facsimile coded data within Ts after the receipt of the CFR from the R-FAX. If no TCF element was received, because of a RLP link reset, until a CFR is received from the fax apparatus, the message phase shall be entered autonomously 5.5s after reception of the CFR or the first facsimile coded data in the receiving adaptation function.

6.2.4 Mobile to mobile calls

Tandem operation is applied to mobile to mobile calls. Support of tandem free operation is F.F.S.

In this section, an interim solution is described. The final solution depends on the progress in the ITU T and is expected by the end of 1995.

To get the information about the nature of the call, a GSM specific country code inside the NSF frame is used to identify an inter MSC call.

The GSM country code (refer to CCITT Recommendation T.35) is coded as follows:



In case no NSF has to be transmitted, the IWF shall insert a special NSF frame defined as follows:

FCF	FIE
1.01	111
1	

NSF, GSM country code, stuff byte (0)

After reception of an NSF frame in the IWF with a GSM country code, the IWF shall enter a specific inter MSC procedure with the following interventions:

- Insertion of NSC respectively NSS with the above mentioned coding before sending of (CIG)DTC or (TSI)DCS.
- Discarding of received NSC and NSS frames which are generated by the opposite IWF.
- The transmission of TCF sequence is triggered by the reception of the TCF Discriminator. In case of TCF_NOK, an invalid TCF is transmitted to the opposite IWF.
- To save time and to check also the quality of link between the two MSCs, a BCS frame FTT is generated by the IWF and sent to the opposite IWF after reception of an invalid TCF.
 In this case the response CFR or FTT from the mobile side shall not be transferred to the other MSC. If an IWF receives an FTT from the opposite IWF the preceding DCS frame should not be automatically repeated after expiration of the command/response timer (T=3s, refer to CCITT RecommendationT.30).
- The response time supervision (Ts=1.6s, refer to subclause 7.2.1.1) within the IWFs is inactive, that means, a response shall be accepted as a valid frame by the receiving IWF when the BCS carrier is detected within 3s after transmission of the previous command.

— The message transfer phase is only entered after reception of the first facsimile coded data from the radio link.

The facsimile coded data shall be transferred between the IWFs with minimum scan line transmission time equal to 0 ms (refer to CCITT Recommendation T.4).

6.2.5 Facsimile Message Transfer

6.2.5.1 Message Transcoding

To save transmission capacity at the radio interface the content of the document shall be transcoded. This applies only, when using the normal facsimile data transfer, i.e. not with the error correction mode.

The facsimile coded data received by the fax adaptor from the facsimile terminal is transcoded and transmitted to the corresponding fax adaptor across the radio interface, where it is transcoded in the reverse direction and transmitted to the receiving facsimile terminal.

The transcoding is based on the minimum line length capability of the T.30 protocol for the normal facsimile data transfer. According to this the transmitting facsimile terminal has to fill up each coded scan line with FILL information to conform to this requirement (ref. <u>CCITTITU-T</u> Recommendation T.4).

To take advantage from that, the fax adaptor associated with the transmitting facsimile terminal will force this to use (at least) the standard value of 20 ms by replacing the applicable parameter value of the exchanged DIS/DTC messages. All FILL information of the facsimile coded data received from the facsimile terminal will be deleted prior to forwarding the data across the radio interface. The fax adaptor associated with the receiving facsimile terminal must recognize and store the originally requested minimum line length to be able to regenerate to correct line length.

It should be noted that the <u>CCITTITU-T</u> Recommendation T.4 document coding may be 1-dimensional or 2-dimensional and, in addition, uncompressed. The fax adaptors have to take care of this when transcoding the document content.

6.2.5.2 Generation of the normal data element

The normal facsimile coded data which have been transcoded and buffered as described in this specification is segmented for transmission across the radio interface into blocks of max. <u>1400 Octets</u> 936 bits (afterwards constituting a sequence of max. <u>5 L2RBOPL2RCOP</u> PDUs). Each such block is contained in the information field of a normal data element of the FA protocol (see annex A).

The facsimile message transfer is finalized by a trailing end of data element which allows the transmitting fax adaptor to switch off the message speed modem.

It may be necessary to align the content of the normal data element to octet boundary at the end of the facsimile message transmission, i.e. after the RTC. This is done by appending '0's to the RTC. This fill information may be omitted by the remote fax adaptor.

6.2.5.3 Generation of the error correction data element

The content of a FCD frame, if received correctly, is stored by the fax adaptor. Each such block is contained in the information field of a error correction data element of the FA protocol (see annex A).

The facsimile message transfer is finalized by a trailing end of data element which allows the transmitting fax adaptor to switch off the message speed modem.

6.3 Procedure interrupts

Procedure interrupts are only supported in Teleservices 61; in case of Teleservice 62 any attempt to invoke procedure interrupts by MMI on the MT (see subclause 6.4 below) will have no effect.

6.4 Radio channel modification

This applies to Teleservice 61 only, if a change of the radio channel during the call swapping from speech to facsimile or vice versa is required. For this purpose the in-call modification procedure (ICM) as detailed in <u>3G TS</u> <u>24.008</u> <u>GSM 04.08</u> is carried out.

The change from speech to facsimile is initiated by MMI at the <u>MS-UE</u> as in other data services starting the ICM procedure via MODIFY signalling . As a basic requirement for this transition, circuit 108.2 (according to <u>CCITTITU-T</u> Recommendation V.24) towards the MT must be in the ON condition.

Additionally the data call direction (DCD) must be known to both the FAs because of a correct tone handling. The DCD identifies the call direction from the calling to the called station according to <u>CCITTITU-T</u> Recommendation T.30 phase A tonal signals. The DCD is derived from the evaluation of the behaviour of the mobile fax machine. No later than 3 sec after connecting the fax apparatus to the line the FA/MT is able to determine the DCD. If a CNG tone or nothing is detected by the FA/MT the mobile fax station is the called station, if a CED tone or a BCS signal is detected by the FA/MT the mobile fax station. The FA/MT indicates this towards the MT by means of CT105: CT105 in OFF condition indicates "mobile terminated", whereas CT105 ON indicates "mobile originated". The detection of the CT105 condition and subsequent triggering of the MODIFY message has to be done 3 sec after the reception of the ON condition of CT108.2.

A reverse DCD compared with the initial call setup direction is indicated to the FA/IWF by means of the "Reverse Call Setup Direction (RCSD)" IE within the MODIFY message. If the MODIFY message has contained this IE, the same IE shall be included in the MODIFY COMPLETE (ACK) message. On the basis of RCSD and additional information about the initial call setup direction (e.g. transaction identifier flag - ref. <u>3G TS 24.00704.07</u>), the FA/IWF shall resolve the actual DCD.

At DCD condition "mobile originated" the FA/IWF has to transmit a CNG tone if neither CED nor a BCS signal has been already received, otherwise nothing. At DCD condition "mobile terminated" the FA/IWF has to transmit a CED. At the moment when CT107 goes to ON condition the FA/MT has to generate CED if CT105 was in ON condition, otherwise nothing (see subclauses 8.2.1.1 and 8.2.2.1).

If during the facsimile call the return to speech is necessary (T.30 procedure interrupt request), this must be initiated by the mobile fax machine as well as by the fixed network fax machine (ref. to the diagrams in figure II.14/15). Upon receipt of the alert operator tone the request will be accepted by manual intervention via MT (phone off-hook) and is reflected to the FA by CT106 and CT109 going to OFF condition. Upon monitoring the transit of the necessary sequence of BCS signals specific for PRI the CT108.2 goes to OFF condition causing ICM from the fax data phase to the speech phase.

In case of procedure interrupt request from the PSTN side a guard timer is necessary to protect against the possible loss of the response to the PRI-Q(PIN/PIP) sent by the <u>MSUE</u>. After the execution of ICM (MODIFY message), CT107 is set to OFF condition finishing the fax data phase. Subsequent re-selection of the data phase will be done by manual intervention via the <u>MS-UE</u> causing CT108.2 going to ON condition initiating ICM.

During the speech phase of a procedure interrupt, the phone off-hook condition of the MT is reported via the FA R-I/F (CT106/109 in OFF condition) to the fax apparatus which must remain functionally connected to the FA to maintain the connection.

A subsequent reverse change to facsimile phase is also carried out by manual intervention at the MT causing ICM. This will be immediately reflected by circuit 107 going to OFF condition. The successful completion of ICM is indicated towards the fax adaptor by circuit 107 going to ON (provided circuit 108/2 is still in the ON condition).

During the speech phase of a procedure interrupt, the condition of the facsimile terminal of the $\frac{MS-UE}{III}$ is not reported across the $\frac{CCITTIIU-T}{IIII}$ Recommendation V.24 interface. It may remain functionally connected to the fax adaptor, but in a suspended state.

The precise operation of the fax adaptor for the support of procedure interrupt is implementation dependent.

6.5 Performance constraints

In order to perform the procedures described in this specification the <u>UEMS</u> and the IWF environment should be designed to be able to transmit and receive facsimile data continuously without any need to flow control the procedure by themselves. This applies specifically for the RLP, L2R, and the <u>LAPB Layer2 protocol between FAXadaptor and TAF</u> entities within the MT or the IWF, respectively, as well as for the fax adaptor itself. <u>L2RCOP is for flow control</u> and the information is transmitted to the adaptor by the Layer2 protocol between FAXadaptor and TAF.

Furthermore, the RLP entity should be able to make error recovery by using the SREJ command/response. The parameters (timers, repetition counters, etc.) should be set to appropriate values using the negotiation capability of the RLP.

The appropriate setting of parameter values applies also for the <u>LAPB_Layer2 protocol between FAXadaptor and TAF</u> procedure.

In addition it is strongly recommended specified to operate at the an maximum user access rate of $288009 \cdot 600$ bit/s, even if the facsimile terminal(s) are not able to work with $144009 \cdot 600$ bit/s message speed.

7 Use of terminal adaptation functions

According to the protocol model of the connection types (figure 5/23.14603.46) there are two classes of TAFs to be considered.

7.1 Standard TAFs for <u>a</u>synchronous services

The TAFs are those described in <u>3G TS 27.002</u> <u>GSM 07.03</u> for <u>a</u>synchronous bearer capabilities in the non-transparent mode, i.e. presently for LAPB only. The rate adaptation functions shall comply with GSM 04.21. The interchange signalling mapping is in accordance with <u>3G TS 27.002</u> <u>GSM 07.03</u>.

7.2 Specific TAFs for facsimile service

Integral part of an end-to-end connection for this Teleservice is the fax adaptor function, located at both the PLMN ends and in charge of:

- establishment and maintenance of a <u>LAPB Layer2 protocol between FAXadaptor and TAF</u> link between the fax adaptation function and the standard synchronous terminal adaptation function according to <u>3G TS</u> <u>27.002GSM 07.03</u>, where applicable;
- establishment and maintenance of an <u>L2RBOPL2RCOP</u> link between the fax adaptors in the <u>UEMS</u> and in the MSC/IWF according to <u>3G TS 27.002GSM 07.03</u>;
- transcoding of the document content to be transmitted across the radio interface as described in clause 6 of this specification;
- adaptation of the <u>CCITTITU-T</u> Recommendation T.30 protocol procedures to the <u>UMTSGSM</u> PLMN environment and generation of the fax adaptor protocol elements as described in clause 6 of this specification.

The main features relevant to the <u>CCITTITU-T</u> Recommendation T.30 adaptation functions are detailed in the following.

For better clarification only, in the following a double configuration will be referenced:

- transmitter adaptation function, established at the PLMN side where the terminal is located actually performing document transmission;
- receiver adaptation function, established at the PLMN side where the terminal is located actually receiving the facsimile document.

The proper configuration is settled on both network sides by detecting DIS/DTC frame just at the beginning of the phase B in the <u>CCITTITU-T</u> Recommendation T.30 protocol procedure.

The optional error correction mode, as defined in <u>CCITTITU-T</u> Recommendation T.4-Annex A and <u>CCITTITU-T</u> Recommendation T.30-Annex A may be fully supported, provided some specific features are included in the fax adaptor procedure.

These features are relevant to:

- additional BCS frames to be detected;
- handling of the message phase.

The overall framework as described in clause 6 of this specification applies, i.e. also the procedures of the error correction mode are, in principle, <u>run between the T-FAX and the T-TAF</u>, the T-TAF and the R-TAF, and the R-TAF and the R-TAF, and the R-TAF and the R-FAX.

The error correction mode is entered upon detection of the relevant bits in the DIS/DTC frame.

The working principle of this specification is based on the detection, control, deletion, and generation of key messages between the T-FAX and the T-TAF, the T-TAF and the R-TAF, and the R-TAF and R-FAX. in the end-to-end dialogue between the facsimile terminals.

While in BCS phases, the following frames have to be detected:

- DIS/DTC, to monitor all operational parameters of the transmitting terminal;
- DCS, to realize the actual operational parameters, e.g. message transmission speed accepted by the sender terminal and the relevant message transfer direction (see table 2/CCITT<u>ITU-T</u> Recommendation T.30);
- CFR and MCF, to trigger the message phase;
- CTC/EOR, fixing the retransmission strategy by the facsimile transmitting terminal (error correction mode);
- CTR/ERR, acting as confirmation message and so closing a BCS phase before a new message phase;
- PPR, as above, but after the fourth consecutive PPR request, the BCS phase continues with either CTC or EOR (error correction mode);
- DCN, to initiate the call release procedure.

Furthermore, all BCS command messages have to be monitored to eliminate repeated command messages at the local fax adaptation function and to initiate a repetition of those command messages, if necessary, at the remote fax adaptation function. Additionally, all BCS response messages have to be monitored to be able to clear the former condition.

7.2.1 BCS phase

7.2.1.1 BCS command/response procedures

The <u>CCITTITU-T</u> Recommendation T.30 procedure is segmented in sections of associated BCS commands and responses. Any command sent by a facsimile terminal must be answered by an appropriate BCS response (refer to Appendix III, <u>CCITTITU-T</u> Recommendation T.30). To guarantee that transmission and reception of responses take place right in time, the response time after reception of previous command is fixed when the opposite TAF is not busy. On the other hand, the interval is to be long when the opposite TAF is busy.a response transmission (including preamble) shall never be started by the fax adaptor function associated with the command sending terminal later than Ts (response time supervision = 1.6s) after reception of previous command. According to the command/response relationship, the fax adaptor receiving a BCS command from its associated facsimile terminal is further on designated as commanding fax adaptor. Similarly, the fax adaptor receiving a BCS response is called the responding fax adaptor. The procedure is as follows:

The adaptor should not transmit the preamble from the associated FAX to the radio network, and the adaptor records the procedure signal from the radio network and transmits the preamble and procedure signal to the associated FAX within the proper timing. Prior to receiving any BCS command/response the preceding preamble is recognized and the "preamble element" is transmitted to the remote fax adaptor. There it is used to start transmission of the preamble towards the associated facsimile terminal with a delay of 300 ms. The preamble preceding a BCS response must be sent with minimum duration permitted (ref. to CCITT Recommendation T.30). If necessary, a preamble must be "aborted" and restarted after an appropriate period as indicated in CCITT Recommendation T.30.

In addition, the recognition of the "preamble element" is immediately confirmed to the other fax adaptor by sending a "BCS transmit request element" (with sequence number set to zero). As this confines a synchronization point, no further protocol transaction can take place except exchanging another "preamble element" until the "BCS transmit request element" has been recognized by the related fax adaptor.

The commanding fax adaptor when receiving the initial "BCS transmit request element" as confirmation to the "preamble element" (condition 1), starts forwarding the received BCS command using "BCS elements" and applying segmentation, if necessary (ref. to subclause 6.2.1). A BCS command which has been received correctly from the associated facsimile terminal (condition 2), is stored within the commanding fax adaptor. If both-conditions 1 and 2 apply applies, -any forwarding of BCS commands repetitively received from the facsimile terminal is further on inhibited. Any "BCS transmit request element" received from the responding fax adaptor is answered accordingly, i.e. by the requested BCS element(s), if any. If an error occurs during the reception of the BCS command from the associated facsimile terminal, the commanding fax adaptor transmits a "BCS abort element" towards the responding fax

adaptor and regards the whole BCS command as not received. Any "BCS transmit request element" is ignored at this stage. the commanding fax adaptor should re-transmit the latest procedure signal to the associated FAX and request the proper procedure signal. The commanding fax adaptor should not transmit the incorrect procedure signal received from the associated FAX to the radio network. The inhibit status is cleared when either an appropriate BCS response is received and forwarded to the facsimile terminal or the connection is released.

The responding fax adaptor receiving "BCS elements" checks their correct sequence (refer to subclause 6.2.1) and starts reassembling and transmitting the BCS command once either a complete BCS frame or at least the second element of a segmented BCS frame is received from the commanding fax adaptor and no sequence error has been detected. Any "BCS element" received after successful reception of a complete BCS command is ignored. If a BCS command consists of a sequence of BCS frames preceded by a single preamble each BCS frame is forwarded separately across the radio interface. The sequence has to be reconstituted at the responding fax adaptor when sending to the associated facsimile terminal. If necessary, flags are transmitted between the BCS frames.

The re-transmission procedure proceeds using RLP without BCS element (BCS transmit request element etc). If during a transmission any required subsequent element is not available, the responding fax adaptor aborts the BCS command transmission to the facsimile terminal, and the rest of the BCS command is not transmitted. The same applies, if due to residual errors on the radio interface (e.g. RLP link reset) "BCS elements" are missing which can be detected by a wrong sequence number. In these cases, any "BCS element" following the error event (e.g. with a number out of sequence) is ignored. The responding fax adaptor may therefore need to use a "BCS transmit request element" in order to ask for (re)transmission of outstanding elements, if any.

If a "BCS abort element" has been received by the responding fax adaptor and the transmission is aborted due to this fact, the complete BCS command including the preceding "preamble element" will be retransmitted autonomously by the commanding fax adaptor.

Contiguously received parts of a BCS command received from the radio interface are stored in the responding fax adaptor. The stored BCS command when completed, is used for autonomous retransmissions towards the associated facsimile terminal which may start at the earliest possible time according to <u>CCITTITU-T</u> Recommendation T.30. No repetition counter is provided.

The responding fax adaptor when receiving the initial "BCS transmit request element" as confirmation to the "preamble element" (condition 1), starts forwarding the received BCS response using "BCS elements" and applying segmentation, if necessary (ref. subclause 6.2.1). A BCS response which has been received correctly from the associated facsimile terminal (condition 2), is stored within the responding fax adaptor. Any "BCS transmit request element" received from the commanding fax adaptor is answered accordingly, i.e. by the requested BCS element(s), if any.

If an error occurs during the reception of the BCS response from the associated facsimile terminal, the responding fax adaptor should re-transmit the latest procedure signal to the associated FAX and request the proper procedure signal. The commanding fax adaptor should not transmit the incorrect procedure signal received from the associated FAX to the radio network, the responding fax adaptor transmits a "BCS abort element" towards the commanding fax adaptor and regards the whole BCS response as not received. Any "BCS transmit request element" is ignored at this stage. The autonomous command repeat status is cleared when both conditions 1 and 2 apply.

The commanding fax adaptor receiving "BCS elements" checks their correct sequence (refer to subclause 6.2.1) and starts reassembling and transmitting the BCS response once either a complete BCS frame or at least the second element of a segmented BCS frame is received from the responding fax adaptor and no sequence error has been detected. Any "BCS element" received after successful reception of a complete BCS response is ignored. If a BCS response consists of a sequence of BCS frames preceded by a single preamble each BCS frame is forwarded separately across the radio interface. The sequence has to be reconstituted at the commanding fax adaptor when sending to the associated facsimile terminal. If necessary, flags are transmitted between the BCS frames.

The re-transmission procedure proceeds using RLP without BCS element (BCS transmit request element etc). If during a transmission any required subsequent element is not available, the commanding fax adaptor aborts the BCS frame transmission to the facsimile terminal, and the rest of the BCS frame is not transmitted. The same applies, if due to residual errors on the radio interface (e.g. RLP link reset) "BCS elements" are missing which can be detected by a wrong sequence number. In these cases, any "BCS element" following the error event (e.g. with a number out of sequence) is ignored. The commanding fax adaptor may therefore need to use a "BCS transmit request element" in order to ask for (re)transmission of outstanding elements, if any.

If a "BCS abort element" has been received by the commanding fax adaptor and the transmission is aborted due to this fact, the complete BCS response including the preceding "preamble element" will be retransmitted autonomously by the responding fax adaptor.

Contiguously received parts of a BCS response received from the radio interface are stored in the commanding fax adaptor. The stored BCS response when completed, is used for autonomous answering towards the associated facsimile terminal which may start at the earliest possible time according to <u>CCITTITU-T</u> Recommendation T.30.

After transmission of a response towards the fax apparatus by the fax adaptor function, after which the fax adaptor function waits for message data (CFR, CTR, MCF after MPS, PPS_MPS, PPS_NULL, ERR after EOR_MPS, EOR_NULL) a repeated BCS command shall be locally responded, without transferring a preamble element towards the radio link.

The fax adaptors have to take care of the control of the local modem. The condition is derived from the reception of certain fax adaptor protocol elements. Additionally, there must be a control of the half duplex transmission path towards the associated facsimile terminal. For that purpose, the receiver signal is monitored and the transmitter is only activated, if no receive signal is active.

7.2.1.2 Compatibility checking

Some features cannot be supported in the <u>UMTSGSM</u> PLMN environment. The fax adaptor function is in charge of dealing with such compatibility checking which is carried out by monitoring certain BCS frames (DIS/DTC).

- Group 1 and group 2 equipments are not supported by the Teleservice as described in this specification.
- Error limiting mode cannot be supported.
- Only standard 300 bit/s Binary Coded Signalling is supported. To this purpose the fax adaptor will ignore the 2400 bit/s capability within the phase B of the <u>CCITTITU-T</u> Recommendation T.30 procedure by looking for DIS frames from <u>CCITTITU-T</u> Recommendation V.21 modem only.
- Only facsimile message speeds up to and including <u>144009</u> 600 bit/s are supported. For this purpose the fax adaptors are responsible to carry out appropriate actions, e.g. to set the applicable fields in the DIS frame accordingly.
- It is not possible to support non-standard facilities since some of these contain proprietary methods of changing the modem speed, invisible to the IWF and hence impossible to track. If an NSF frame occurs, the country code has to be exchanged in the IWF to the GSM specific country code, which is not supported by a standard fax group 3 apparatus and therefore no private procedure is entered (refer to subclause 6.2.4).
 However, non-standard BCS frames may carry information which does not affect the correct operation within the PLMN, but is essential for the user (e.g. passwords). Those elements, if any, will be passed end to end by the fax adaptors unless an explicit deletion is required by the user (e.g. by specific input at the fax adaptor associated with the mobile station).

7.2.1.3 Message speed checking

Although i<u>I</u>t is strongly recommended<u>specified</u> to use the maximum user rate of the MT2 (<u>28800</u><u>9</u><u>-600</u> bit/s),<u>When</u> a particular user may signal a lower user rate. In this case, the fax adaptors have to <u>select the user rate on in-channel</u>, but <u>bearer rate is still 28800[bit/s]</u>.carry out the following additional procedures:

max speed indicated in the call set up message is 4 800 bit/s:

 if the fax adaptor receives a DIS or DTC indicating CCITT Recommendation V.29 only, the call shall be released;

- if other values are indicated, no action has to be taken;

max speed indicated in the call set up message is 2 400 bit/s:

if the fax adaptor receives a DIS or DTC indicating CCITT Recommendation V.29 only, the call shall be released;

- if CCITT Recommendation V.29 and V.27ter or V.27ter only is indicated, this shall be changed to V.27ter fallback;

if CCITT Recommendation V.27ter fallback is indicated, no action shall be taken.

7.2.1.4 Control of transmission rate

The controlling entity of the fax adaptor recognizes when a change of the transmission rate - and in conjunction with this a change of the modem function - has to commence. The transmission rate is then changed only locally, i.e. between the facsimile terminal and the fax adaptor at both the MSC/IWF and the <u>UEMS</u> ends.

The actual message speed and the modem function are derived from the content of the related BCS frames (DIS/DTC, DCS, CTC).

7.2.1.5 Clocking

The fax adaptor or the GSM facsimile machine will acquire received data bit timing on circuit 115 (according to CCITT Recommendation V.24). The transmitter element timing circuit 114 shall be synchronized to circuit 115.

The clock rate at the CCITT Recommendation V.24 interface will reflect the user rate of the MT2 as indicated in the set up message.

7.2.2 Message phase

- to identify the start of message phase;
- to control the buffer level;
- to mark the end of message phase (6 consecutive instances).

7.2.2.1 Normal facsimile data

The T-TAF starts the message phase by transmitting CFR or MCF to the T-FAX. The R-TAF enters the message phase by receiving CFR or MCF from the R-FAX. The message phase (see figure II.6/GSM 03.46 and II.7/GSM 03.46, respectively) at both the PLMN ends is triggered by the transit of a frame (either the CFR or the MCF) sent by the receiving terminal to confirm a previous frame from the transmitting terminal, and marking the end of a BCS phase.

The terminal adaptation function associated with the receiving terminal after receiving facsimile coded data or autonomously 5.5s after detecting the trigger frame (CFR or MCF) will change the modem function to V.27ter or V.29 CCITT Recommendation and initiate the training at the applicable speed.

- If the R-TAF could not receive the facsimile coded data within Ts from the radio network after receiving CFR from the R-FAX, it re-transmits a preamble of 1.0s and the latest TSI, DCS to the R-FAX after changing the modem to V.21.
- If the R-TAF could receive the facsimile coded data within Ts from radio network after receiving MCF from the R-FAX, it transmits the training to the R-FAX after changing the modem to V.17, V.27ter or V. 29.
- If the R-TAF could not receive the facsimile coded data within Ts from the radio network after receiving MCF from the R-FAX, it re-transmits a preamble of 1.0s and the latest MPS to the R-FAX after changing the modem to V.21.
- If the R-TAF could receive the facsimile coded data within Ts from the radio network after receiving MCF from the R-FAX, it transmits the training to the R-FAX after changing the modem to V.17, V.27ter or V. 29.

Following the training segment, 0s bits will be stuffed towards the facsimile terminal (FILL sequence, see subclause 4.1.2 of <u>CCITTITU-T</u> Recommendation T.4), disregarding all information received from the radio interface,

until a EOL character is detected, that will mark the beginning of the real phase C (see figure $1/\frac{\text{CCITT}_{\text{ITU-T}}}{\text{Recommendation T.4}}$).

If due to a preceding error the message phase cannot be entered, this training must be aborted when a new BCS element is received by the transmitting fax adaptor.

7.2.2.2 Error correction facsimile data

As these facsimile coded data between the fax adaptor and the facsimile terminal are structured in HDLC frames, the handling of this procedure segment will exploit such formatting. The content of such an HDLC frame is further on called a block.

Each such block is included in the information field of a error correction data element of the FA protocol which is processed for transmission across the radio interface as outlined in clause 6.

The message phase (see figure II.8/GSM 03.4623.146) at both the PLMN ends is triggered by the transit of a confirmation frame (CFR, MCF, PPR, CTR or ERR) sent by the receiving terminal and marking the end of the BCS phase.

The PPR that the TAF sends to the associated FAX means the following process.

- PPR is used to request re-transmission of the facsimile coded data. When the TAF receives error facsimile coded data, it requests correct facsimile coded data to the associated FAX. (T.30 Recommendation)
- <u>PPR is used to avoid the timer timeout of the T.30 protocol.</u>
 <u>If one of the TAFs or both TAFs are busy, The T-TAF should transmit PPR to the T-FAX.</u>

If four consecutive PPR are counted within the same "partial page", the BCS phase continues.

The transmitter adaptation function will enter the message phase as per <u>CCITTITU-T</u> Recommendation T.30 standard procedure.

The terminal adaptation function associated with the receiving terminal after receiving facsimile coded data or autonomously 5.5s after detecting the trigger frame will change the modem function to V.27ter or V.29 CCITT Recommendation and initiate the training at the applicable speed.

- If the R-TAF could not receive the facsimile coded data within Ts from the radio network after receiving CFR from the R-FAX, it re-transmits a preamble of 1.0s and the latest TSI, DCS to the R-FAX after changing the modem to V.21.
- If the R-TAF could receive the facsimile coded data within Ts from radio network after receiving MCF from the R-FAX, it transmits the training to the R-FAX after changing the modem to V.17, V.27ter or V. 29.
- If the R-TAF could not receive the facsimile coded data within Ts from the radio network after receiving MCF from the R-FAX, it re-transmits a preamble of 1.0s and the latest MPS to the R-FAX after changing the modem to V.21.
- If the R-TAF could receive the facsimile coded data within Ts from the radio network after receiving MCF from the R-FAX, it transmits the training to the R-FAX after changing the modem to V.17, V.27ter or V. 29.

Following the training segment, HDLC flags will be stuffed towards the facsimile terminal until a FCD frame is detected, that will mark the beginning of the real phase C.

If due to a preceding error the message phase cannot be entered, this training must be aborted when a new BCS element is received by the transmitting fax adaptor.

7.2.2.3 Buffering of facsimile coded data

The following subclauses only apply, when using the normal facsimile data transfer, i.e. not with the error correction mode.

7.2.2.3.1 Transmitter adaptation function

In the transmitter adaptation function the facsimile coded data being received from the facsimile terminal are transcoded stripping of FILL information and written into the buffer.

If there is enough information available, this data is read out from the buffer, and a FA protocol element is generated which is processed as described in clause 6 to be transferred to the receiver adaptation function using one of the standard TAFs referred to in subclause 7.1. For that purpose the data is segmented in blocks (see subclause 6.2.5.2).

Due to the ARQ techniques of the RLP the throughput across the radio interface may be less than the message speed between the transmitting facsimile terminal and the transmitter adaptation function, i.e. the content of the buffer may increase. When a certain threshold is reached from which the fax adaptor can derive that the actual page cannot be transmitted successfully, the connection may be prematurely released.

If the throughput at the radio interface is greater than the message speed between the transmitting facsimile terminal and the transmitter adaptation function (e.g. when the end-to-end speed is lower than 144009-600 bit/s), the buffer may be empty most of the time.

7.2.2.3.2 Receiver adaptation function

In the receiver adaptation function FILL information is transmitted to the facsimile terminal at the beginning of each page, if necessary, to bridge the gap between the training sequence and the real facsimile coded data. In case of normal fax data the FILL 0's can be expanded up to 5s only and therefore after these up to two white scan lines should be inserted, if necessary.

The facsimile coded data received across the radio interface are re-generated from the <u>LAPB Layer2 protocol between</u> <u>FAXadaptor and TAF</u>, L2R and FA protocol elements, reversely transcoded according to the knowledge of the fax adaptor, and written into the buffer. The reverse transcoding consists of insertion of FILL information before the facsimile coded data is forwarded to the facsimile terminal to comply with the recognized minimum line length as defined in <u>CCITTITU-T</u> Recommendation T.4.

At the beginning of each page the facsimile coded data to be sent to the facsimile terminal is not read out from the buffer until <u>either</u> at least 2 instances of EOL <u>and the buffer size is 0.28kbytes or more have been received</u>, or an RTC have been received, or the 1.4kbyte buffer size limit, which does not depend on the end-to-end data transfer rate, has been exceeded. <u>2kbyte</u> or the following buffer size limit, depending on the end to end data transfer rate, has been exceeded:

2 kByte for 2,400 bit/s;

4 kByte for 4,800 bit/s;

6 kByte for 7,200 bit/s;

8 kByte for 9,600 bit/s.

- Fill insertion method for NON- ECM

The reception side Adaptor controls FILL insertion according to the accumulation value of image signals.

- The condition for starting FILL insertion

- When the pix memory accumulation value is 0.28kbytes or less.

- The condition for stopping FILL insertion

- When the pix memory value is 0.9kbytes or more.

- When the pix memory value is not over 0.9kbytes and the interval between EOLs (one line period) reaches 4.5s, the reception side adaptor stops FILL insertion, and start to transmit EOL and the next facsimile coded line. ("Image signal memory fill insertion control" will start again)

- Control algorithm for image signal reception side facsimile (without transmitted image signal to the reception side facsimile)

After inserting FILL information for 4.5s, when the value of the transmitted image signals to reception side facsimile is below the level of "the forced RTC transmission value", the reception side adaptor will send RTC to the reception side facsimile to force end of Phase C. Then it will wait for a post-message (EOP,EOM,MPS) received from the air interface.

- Flag insertion method for ECM

The reception side Adaptor controls FLAG insertion according to the accumulation value of image signals.

- The condition for starting Flag insertion

- When pix memory accumulation value is 0.28kbytes or less.

- The condition for stopping Flag insertion

- When the pix memory value exceeds 0.6kbytes.

Once this procedure has been started, i.e. during the page transmission, the facsimile coded data is transmitted, however, the following EOL is delayed by inserting additional FILL information, if necessary, until the pre-set threshold (2 EOLs or the buffer size limit) is reached again. If the actual coding line is going to exceed 5 s, the threshold is temporarily reduced, i.e. the following EOL is sent. However, the buffering algorithm shall try to reach the pre-set threshold again as fast as possible (by inserting FILL also before following EOLs). If no EOL is available to be transmitted to the facsimile terminal for a period greater than 5 s, the connection will be released by an ordinary receiving facsimile terminal (ref. CCITT Recommendation T.4).

7.2.3 Disconnect procedure

The transmitter adaptation function, upon detection of the DCN frame (see <u>CCITTITU-T</u> Recommendation T.30) sent by the local terminal to indicate the end of the facsimile transmission, initiates the disconnect procedure. <u>The R-TAF</u> <u>trasmits DCN to the R-FAX after receiving DCN from the radio network, and transmits the DCN transmission</u> <u>confirmation element to the T-TAF</u>

7.2.4 Timeouts

The T.30 timer between the T-FAX and T-TAF and the T.30 timer between the R-FAX and R-TAF are independent of each other. Therefore, the overall fax adaptation function is in principle bound to the timing constraints associated with the associated FAX ITU-T Recommendation T.30 procedure. The overall fax adaptation function is in principle bound to the timing constraints associated with the end to end CCITT Recommendation T.30 procedure. This means that, no matter of the reference configuration used at the mobile station, either the "standard" one (figure 2a/GSM 03.4623.146) or the "GSMUMTS facsimile machine" (figure 2d/GSM-23.14603.46), the progress of the call will be mainly subject to the CCITTITU-T Recommendation T.30 typical timing protections, settled externally.

However, due to the specific conditions caused by the <u>GSMUMTS</u> PLMN system, there is the need for a special support with respect to BCS command repetitions as explained above. For that purpose, the fax adaptors will provide means for local time-out. The timer will be started and stopped as described in the applicable clauses of the <u>CCITTITU-T</u> Recommendation T.30.

8 Signalling aspects

<u>3G TS 27.002</u> <u>GSM 07.03</u> identifies the bearer capability requirements to be supported by the terminal adaptation function in the MT (see <u>3G TS 27.001GSM 07.01</u> for BC and HLC coding). The specific signalling requirements are those for "speech" and "facsimile group 3" or "facsimile group 3" only, respectively. The MT indicates in the call set up

request the requirements, e.g. first speech, second facsimile by sending the bearer capability information element(s) in the appropriate order. For an "auto calling" facsimile request, the facsimile group 3 bearer capability is sent as the first or the only bearer capability for Teleservice 61 or 62, respectively.

For interworking between Teleservice 61 and Teleservice 62 refer to GSM 02.03 and <u>3G TS 27.00107.01</u>.

8.1 Handling of tonal signals

Because the <u>CCITTITU-T</u> defined service uses modems, there are some signals received from the analogue link at the MSC/IWF and (where used) the fax adaptor which do not have a direct binary representation. These signals cannot therefore be passed across the radio interface in the same way as the <u>CCITTITU-T</u> Recommendation T.30 and <u>CCITTITU-T</u> Recommendation T.4 information.

These signals are the modem called (CED) and calling (CNG) tones sent at the start of each fax data phase of the call; they are generated locally by the FA/MT and/or FA/IWF, exploiting an end-to-end time alignment mechanism, triggered by appropriate messages on the <u>UMTSGSM</u> signalling channel. The procedure is detailed in the <u>following3G TS_27.007</u>.

8.2 Call establishment

8.2.1 Mobile terminated call

The PSTN facsimile group 3 terminal may be manually or automatically calling.

8.2.1.1 Speech then facsimile

Refer to the diagram in figure II.1a/ $\underline{23.146}$ $\underline{03.46}$ and II.1b/ $\underline{23.146}$ $\underline{03.46}$. In both of the figures the initial call setup is mobile terminated. In figure II.1a $\underline{23.146}$ $\underline{/03.46}$ the DCD is also mobile terminated (MT), while the DCD in figure II.1b/ $\underline{23.146}$ $\underline{03.46}$ is mobile originated (MO).

In order to make the transition from the speech phase to the facsimile phase, the MODIFY command must be initiated by MMI at the <u>MSUE</u>.

In the case where a <u>GSM-UMTS</u> facsimile machine is used, it will turn on circuit 108/2 when it is connected to the line by manual intervention.

After turning on circuit 180/2, a fax adaptor sends "ATA" to TAF according to 3G TS 27.007.

In the case where a fax adaptor at MT is used, it will turn on circuit 108/2, when the mobile fax apparatus is connected to the line by manual intervention.

After determination of the DCD and ICM (see subclause 6.4) and on completion of the synchronization process over the radio interface or the RLP establishment, CT107 shall be turned on by the MT; in case where a FA is used, on receipt of CT107 from MT, the FA will complete the tonal handshaking according to the rules in subclause 6.4.

The analogue link at the FA/IWF side will be established in accordance with the T.30 rec.; provided the synchronization process <u>or the RLP establishment</u> is completed (CT108.2 ON condition), the appropriate tone according to the rules in subclause 6.4 shall be transmitted. In case of DCD mobile terminated the CED tone shall be transmitted after a silence of 1.8 to 2.5 sec (see T.30, 4.3.3.2) from the call being answered; during transmission of CED tone (2.6 sec minimum duration, followed by a delay period of 75 +/- 20 ms) the FA/IWF will process data received from the <u>UMTS-DGSM-</u>TCH as usual, but relevant information (e.g. preamble of a BCS frame) shall be discarded without any buffering. Note that circuit 109 and circuit 106 (according <u>CCITT-ITU-T</u>Recommendation V.24) at the R interface of the MT must be turned on by the fax adaptor at the IWF before any further procedure can be carried out between the fax adaptors and consequently end-to-end. Once the connection is established, both circuit 106 and circuit 109 are clamped to the ON condition by the fax adaptor at the IWF, so fixing a full duplex mode throughout the whole facsimile phase of the call.

8.2.1.2 Auto answer

Refer to diagram in figure II.2/<u>23.146</u>GSM 03.46. A call received from the PSTN will cause the MT to turn on send circuit 125 "Ring" (according to CCITT Recommendation V.243G TS 27.007) at the R interface.

In the case where a <u>GSM-UMTS</u> facsimile machine is used, <u>3G TS 27.007</u> CCITT Recommendation V.25bis auto answering process is handled directly by turning on circuit 108/2.

In the case where a fax adaptor is used, <u>"Ring"circuit 125</u>-will cause ring current to be sent to the mobile facsimile terminal. The fax adaptor will turn on circuit 108/2, when the mobile facsimile terminal answers the call.

After turning on circuit 180/2, a fax adaptor sends "ATA" to TAF according to 3G TS 27.007.

On receipt of circuit 108/2, the MT will answer the call and initiate the synchronization process and the establishment of the RLP across the radio interface. On completion of the synchronization process or RLP establishment, the modem at IWF will automatically be selected and send CED to PSTN facsimile terminal. Also circuit 107 shall be turned on by the MT.

In the case where a fax adaptor is used, on receipt of circuit 107 from MT, the fax adaptor will initiate the tonal hand-shake by sending CNG (mandatory).

The analogue links at both the PSTN side and the mobile side (where a fax adaptor is used) will be established in accordance with the appropriate V. series recommendation.

Note that circuit 109 and circuit 106 at the R interface of the MT must be turned on by the fax adaptor at the IWF before any further procedure can be carried out between the fax adaptors and consequently end-to-end. Once the connection is established, both circuit 106 and circuit 109 are clamped to the ON condition by the fax adaptor at the IWF, so fixing a full duplex mode throughout the whole facsimile phase of the call.

8.2.2 Mobile originated calls

The PSTN facsimile group 3 terminal may be manually or automatically answered.

8.2.2.1 Speech then facsimile

Refer to the diagram in figure II.3a/03.4623.146 and figure II.3b/23.14603.46. In both of the figures the initial call setup is mobile terminated. In figure II.3a/23.14603.46 the DCD is also MO, while in figure II.3b/23.14603.46 the DCD is MT.

In order to make the transition from the speech phase to the facsimile phase, the MODIFY command must be initiated by MMI at the <u>MSUE</u>, which will result in an establishment of the RLP across the radio interface and connection to line of the FA/IWF.

In the case where a fax adaptor is used, the mobile facsimile terminal must be connected to line by manual intervention at this stage, and will cause the fax adaptor to turn on circuit 108/2 (according to <u>CCITT-ITU-T</u>Recommendation V.24) towards the MT.

In the case where a <u>GSM-UMTS</u> facsimile machine is used, circuit 108/2 shall be turned on when the <u>GSM-UMTS</u> facsimile machine is connected to line by manual intervention.

After turning on circuit 180/2, a fax adaptor sends "ATD" to TAF according to 3G TS 27.007.

After determination of the DCD and ICM (see subclause 6.4) and on completion of the synchronization process across the radio interface or the establishment of RLP, the modem at the IWF will be automatically selected and send the appropriate modem tone according to the rules in subclause 6.4 to PSTN facsimile terminal. Also circuit 107 shall be turned on by the MT, whereupon the FA/MT will complete the tonal handshaking according to the rules in subclause 6.4.

In the case where a fax adaptor is used, the receipt of circuit 107 shall cause the fax adaptor to connect to line.

The analogue links at both the PSTN side and the mobile side (where a fax adaptor is used) will be established in accordance with the appropriate CCITT-ITU-TV. series recommendation.

Note that circuit 109 and circuit 106 at the R interface of the MT must be turned on by the fax adaptor at the IWF before any further procedure can be carried out between the fax adaptors and consequently end-to-end. Once the connection is established, both circuit 106 and circuit 109 are clamped to the ON condition by the fax adaptor at the IWF, so fixing a full duplex mode throughout the whole facsimile phase of the call.

8.2.2.2 Auto calling

Refer to diagram in figure II.4/GSM $\underline{23.14603.46}$. The auto calling procedure of $\underline{3G TS 27.007}$ CCITT Recommendation V.25bis ("ATD xxxx") is initiated at the CCITT-ITU-T Recommendation V.24 interface. This is done either directly from the $\underline{GSM-UMTS}$ facsimile machine or, in the case where a fax adaptor is used, by loop disconnect or DTMF dialling information between the mobile facsimile terminal and the fax adaptor.

When the call is answered, the synchronization process will be started and the RLP will be established across the radio interface.

On completion of the synchronization process across the radio interface or RLP establishment, the modem at the IWF will be automatically selected and send CNG (mandatory) to PSTN facsimile terminal. Also CT107 shall be turned on by the MT.

In the case where a fax adaptor is used, the receipt of circuit 107 shall cause the fax adaptor to connect to line.

The analogue links at both the PSTN side and the mobile side (where a fax adaptor is used) will be established in accordance with the appropriate V. series recommendation.

Note that circuit 109 and circuit 106 (according to <u>CCITT-ITU-T</u>Recommendation V.24) at the R interface of the MT must be turned on by the fax adaptor at the IWF before any further procedure can be carried out between the fax adaptors and consequently end-to-end. Once the connection is established, both circuit 106 and circuit 109 are clamped to the ON condition by the fax adaptor at the IWF, so fixing a full duplex mode throughout the whole facsimile phase of the call.

8.2.2.3 Manual calling

Refer to diagram in figure II.5/GSM <u>23.14603.46</u>. When the call is answered, the RLP will be established across the radio interface providing circuit 108/2 in ON condition.

In the case where a fax adaptor is used, the mobile facsimile terminal must be connected to line by manual intervention at this stage, and will cause the fax adaptor to turn on circuit 108/2 (according to <u>CCITT-ITU-T</u> Recommendation V.24) towards the MT.

In the case where a <u>GSM-UMTS</u> facsimile machine is used, circuit 108/2 shall be turned on when the <u>GSM-UMTS</u> facsimile machine is connected to line by manual intervention.

After turning on circuit 180/2, a fax adaptor sends "ATD" to TAF according to 3G TS 27.007.

On completion of the synchronization process across the radio interface or RLP establishment, the modem at the IWF will be automatically selected and send CNG (mandatory) to PSTN facsimile terminal. Also circuit 107 shall be turned on by the MT.

In the case where a fax adaptor is used, the receipt of circuit 107 shall cause the fax adaptor to connect to line.

The analogue links at both the PSTN side and the mobile side (where a fax adaptor is used) will be established in accordance with the appropriate <u>CCITT-ITU-T</u>V. series recommendation.

Note that circuit 109 and circuit 106 at the R interface of the MT must be turned on by the fax adaptor at the IWF before any further procedure can be carried out between the fax adaptors and consequently end-to-end. Once the connection is established, both circuit 106 and circuit 109 are clamped to the ON condition by the fax adaptor at the IWF, so fixing a full duplex mode throughout the whole facsimile phase of the call.

9 Interworking to fixed networks

PSTN and ISDN only are considered, both used as transit networks to complement the PLMN in the end-to-end connection between facsimile group 3 terminal, figure 7/GSM 03.4623.146.

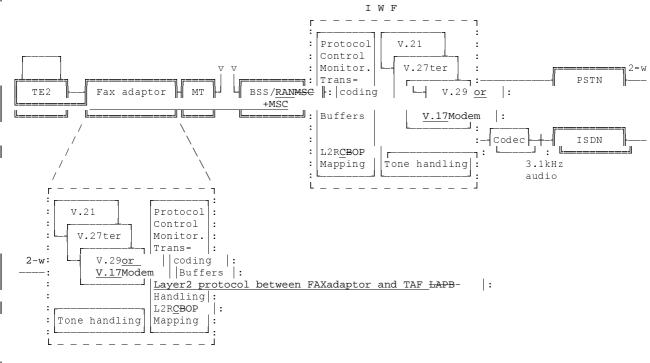


Figure 7/23.14603.46: Network interworking

9.1 Interworking to PSTN

As the standard access of facsimile group 3 terminals for this Teleservice is a 2-wire analogue interface, all the technical requirements for network interworking to PSTN are identical in principle to those encountered for the terminal connection to the MT. The key functional block is the fax adaptor described in clause 6 of this specification.

As far as network interworking is concerned, the main function to be performed by such a block is the correct managing of a composite modem, in accordance with the requirements of <u>CCITTIU-T</u> Recommendation T.30:

- CCITTITU-T Recommendation V.21 synchronous mode, as standard facility for all BCS phases;
- CCITTITU-T Recommendation V.27ter for message speeds of 4 800 and 2 400 bit/s;
- CCITTITU-T Recommendation V.29 for message speeds of 9 600 and 7 200 bit/s.
- ITU-T Recommendation V.17 for message speeds of 14400 and 12000 bit/s.

The mechanism for selecting the right modem is the following:

- the actual message speed is obtained by detecting the DCS frame (see table 2/CCITT<u>I</u>TU-T Recommendation T.30) while in BCS phase;
- on entering the message phase, there is an interchange between the V.21 modem and the actual modem agreed upon between the terminals for message transmission;
- on exiting the message phase (RTC) the CCITTITU-T Recommendation V.21 modem is selected again.

Times for settling the modem will be in accordance with the requirements of CCITTITU-T Recommendation T.30.

9.2 Interworking to ISDN

The use of 3.1 kHz audio bearer capability of ISDN allows for an interworking of PLMN very similar in practice to the scheme for PSTN, figure $7/\frac{\text{GSM} 03.4623.146}{\text{GSM} 03.4623.146}$. The fax adaptor function is in conformance with the description given in clause 4 and subclause 7.1 of this specification.

Annex A (normative): Structure and contents of the fax adaptor protocol elements

Frame format of FA Protocol conforms to T.38.

<u>1 IFP</u>

• T30 INDICATOR

Following packets are only used and other packets are not used.

- 1. V.21 Preamble Flags (BCS)
- 2. CNG
- <u>3. CED</u>
- 4. DCN transmission confirmation (newly added to T.38)
- 5. TCF error detection (newly added to T.38)
- In T30 DATA, maximum length of T.4-Non-ECM/HDLC data is equal to 1400[Octs].

Aligned Packet Encoding Rule[21] is applied to ANS.1.

2 UDPTL

No FEC option and No redundant message option

<u>3 UDP</u>

Prot number at client side is ephemeral and port number at server side is manually preassigned by operater.

<u>4 IP</u>

IP address is not actually needed because addressing is based on the way of CS in UMTS. However, IP address is normally treated for co-ordination with real IP.

IP address at UE side and IWF side are assigned by PPP.

<u>5 PPP</u>


4


RFC 1662, 1661, 1570 and 1332 are applied.

Principle structure of an element

Each FA protocol element consists of the element discriminator (one single octet) and the optional information field (arbitrary length).

The elements are transmitted with octet 0, bit 1 first. Received information is forwarded with the same bit sequence as received.

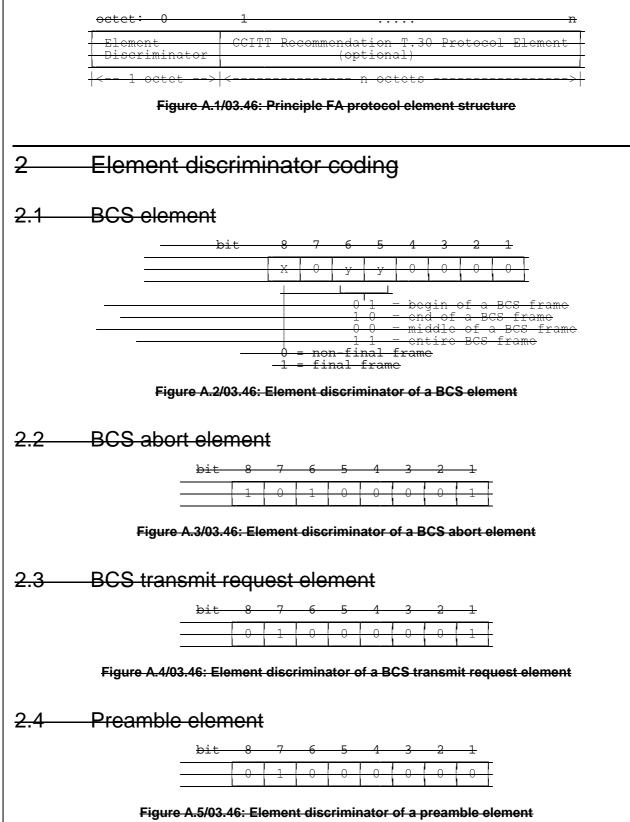

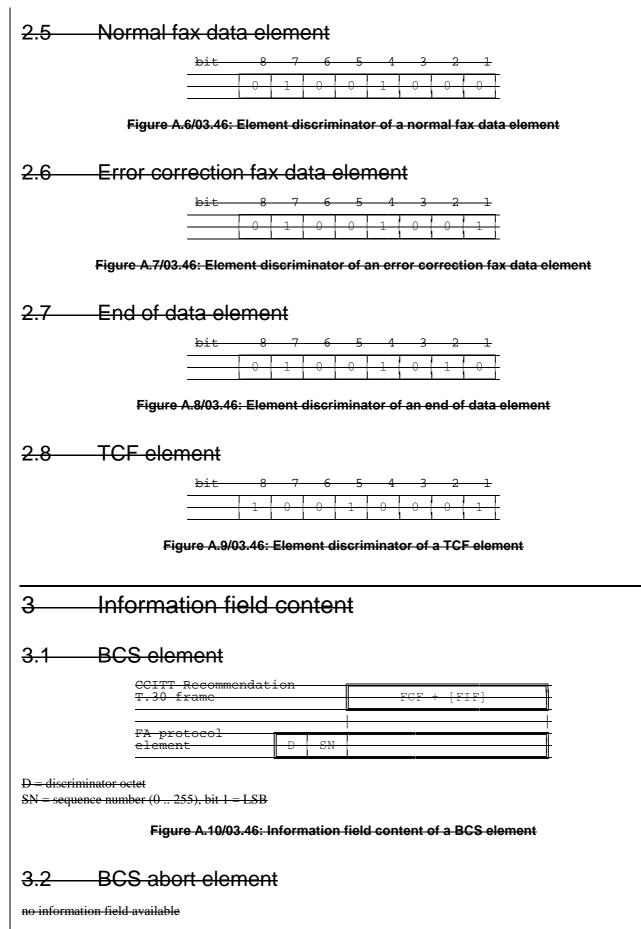

3.3 BCS transmit request element

El protocol	
TA PIOCOCOI	
alomont	CN I
CICIICIIC	DIV I

 $\frac{D = discriminator octet}{SN = sequence number (0 ... 255),}$ bit 1 = LSB = Least significant bit

3.4 Preamble element

no information field available

3.5 Normal fax data element

transcoded facsimile		max.	936	bits	of	facsimile	coded	data
FA protocol								
element	Ð							

D = discriminator octet

Figure A.11/03.46: Information field content of a normal fax data element

3.6 Error correction fax data element

C(T.4 frame	CITT Re	commendation
(FCD or RCP)		FCF + [FIF]
		+
FA protocol		
element	Ð	_

D = discriminator octet

Figure A.12/03.46: Information field content of an error correction fax data element

3.7 End of data element


no information field available

3.8 TCF element



X = 0 : TCF_OK

 $X = 1 : TCF_NOK$



4	Typical frame mapping within FA protocol and that
	between FA protocol and RLPRelationship of FA
	protocol elements with LAPB, L2RBOPL2RCOP and
	RLP

FA protocol element			Ð	option	al info :	rmation			
LAPB I-f informat field		A							
L2RBOP P	ÐU	, c	51				<u>S2</u> S3	3 arbi	trary
RLP block		H							
D = DiscrimA = addressS1, S2, S3 =H = RLP he	field, (status	C = contr octets,					Length o	f typical FA	X data is)
IFP				Type of message	Field type	IFP-Pay (max.1400	load	ger than 14	00[Octs]
UDPTL				Header	UC)PTL-Payload		No FEC	
UDP				Header	U	IDP-Payload			
IP				Header		IP-Payload			
PPP	Flag	Address	Control	Protocol	Р	PP-Payload		FCS	Flag

Figure A.114/23.14603.46: Typical frame Mapping mapping within for a "short" FA protocol element

(GSM 03.46 version 7.0.0 Release 1998)3G TS 23.146 version 2.0.0

FA prot element	ocol	Ð	-informat:	ion .	•••		
LAPB I- informa field			/ \	 			
L2RBOP	PDUs		so	#2 .	<u>S1</u>	#n S2	<u>53</u>
RLP blocks	H	/	-/	<u> </u>	 		
S0, S1, S2 ,	s field, C , S3 = sta	C = control field,					
FA Protocol			FA Pro	tocol-PDU			
L2 protocol b Fax adaptor		L2 protocol b	petween Fax adap	tor and TAF-PD	U		
L2RCOP		s L2RCOP- Payload #1		COP- sor Nothin	L2RCOP- g Payload #3		
RLP Ver.2	Header	RLP-Payload	FCS .	Smea	ans "Status oct	et".	

Figure A.<u>215/23.14603.46</u>: <u>Typical frameMapping mapping between FA Protocol and RLP for a "long"</u> FA protocol element

Appendix I (informative): Abbreviations from CCITTITU-T Recommendation T.30 and T.4


Abbre-	Function	Signal format	T.30	T.30
viation			standard	err.corr.
CED	Called station identification	2100 Hz	Х	Х
CFR	Confirmation to receive	X010 0001	Х	Х
CRP	Command repeat	X101 1000	Х	Х
CIG	Calling subscriber identification	1000 1000	Х	Х
CNG	Calling tone	1100 Hz	Х	Х
CSI	Called subscriber identification	0000 0010	Х	Х
CTC	Continue to correct	X100 1000		Х
CTR	Response to continue to correct	X010 0011		Х
DCN	Disconnect	X101 1111	Х	Х
DCS	Digital command signal	X100 0001	Х	Х
DIS	Digital identification signal	0000 0001	Х	Х
DTC	Digital transmit command	1000 0001	Х	Х
EOM	End of message	X111 0001	Х	
EOP	End of procedure	X111 0100	Х	
EOR	End of retransmission	X111 0011		Х
ERR	Response to end of retransmission	X011 1000		Х
FCD	Facsimile coded data	0110 0000		Х
FCF	Facsimile control field		Х	Х
FCS	Frame checking sequence	16 bits	Х	Х
FIF	Facsimile information field		Х	Х
FTT	Failure to train	X010 0010	Х	Х
MCF	Message confirmation	X011 0001	Х	Х
MPS	Multi-page signal	X111 0010	Х	
NSC	Non-standard facilities command	1000 0100	Х	Х
NSF	Non-standard facilities	0000 0100	Х	Х
NSS	Non-standard set-up	X100 0100	Х	Х
PIN	Procedural interrupt negative	X011 0100	Х	Х
PIP	Procedural interrupt positive	X011 0101	Х	Х
PIS	Procedure interrupt signal	462 Hz	Х	Х
PPR	Partial page request	X011 1101		Х
PPS	Partial page signal	X111 1101		Х
PRI	Procedure interrupt	X111 XXXX	Х	
RCP	Return to control for partial page	0110 0001		Х
RNR	Receive not ready	X011 0111		Х
RR	Receive ready	X111 0110		Х
RTN	Retrain negative	X011 0010	Х	Х
RTP	Retrain positive	X011 0011	Х	Х
TCF	Training check frame	0 1.5s	Х	Х
TSI	Transmitting subscriber identification	X100 0010	Х	Х


Table I.1/23.14603.46: Abbreviations from CCITTITU-T Recommendation T.30

Table I.2/23.14603.46: Abbreviations from CCITTITU-T Recommendation T.4

Abbre- viation	Function	Signal format
EOL	End of line	0000 0000 0001
RTC	Return to control	6 * EOL

Appendix II (informative): Procedure examples

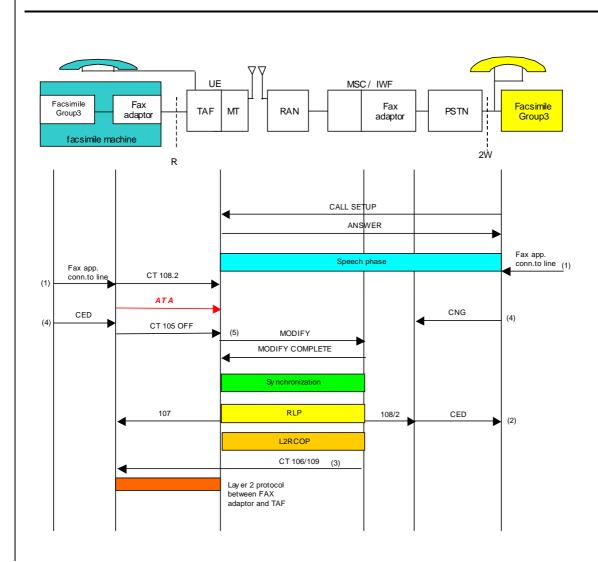


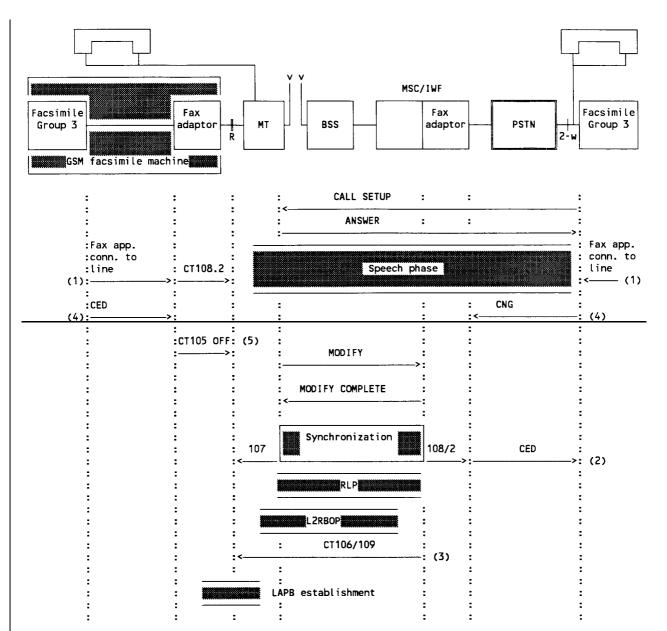



- (1) manual intervention
- (2) mandatory
- (3) locally generated by the fax adaptor at IWF
- (4) optionally
- (5) triggered by delayed CT108.2 (3 sec)

Figure II.1a/03.46<u>23.146</u>:

Mobile terminated call - speech then facsimile DCD mobile terminated




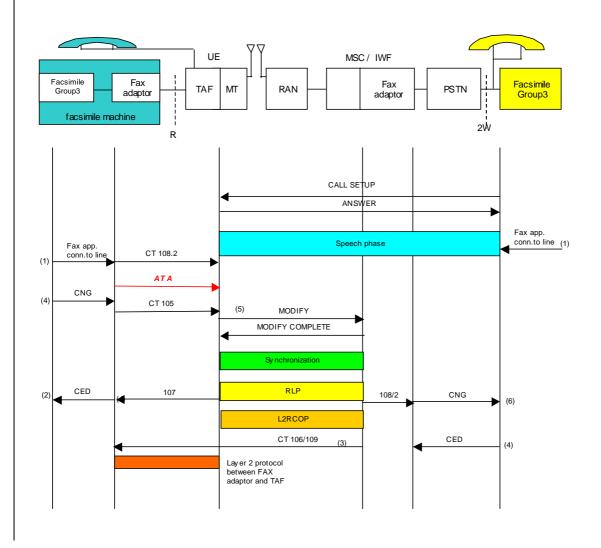


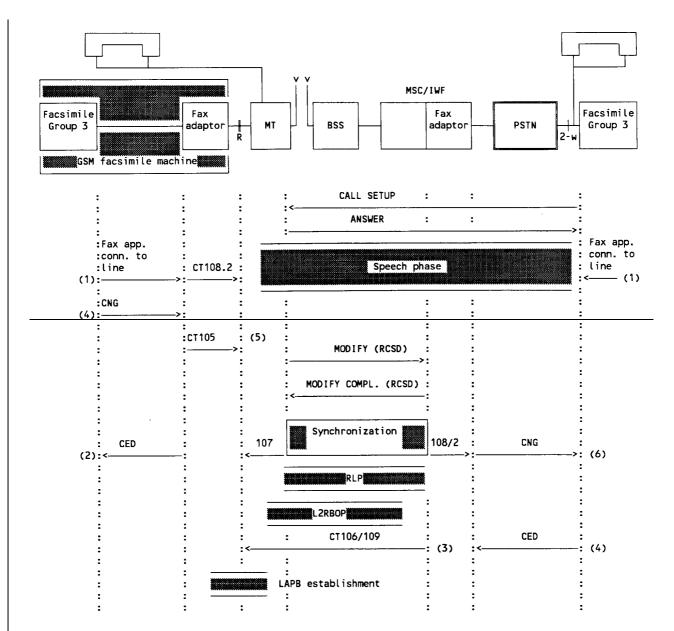


- (1) manual intervention
- (2) mandatory
- (3) locally generated by fax adaptor at IWF
- (4) optionally
- (5) triggered by delayed CT108.2 (3 sec)
- (6) transmitted only if neither CED nor BCS is already received

Figure II.1b/23.14603.46: Mobile terminated call - speech then facsimile DCD mobile originated




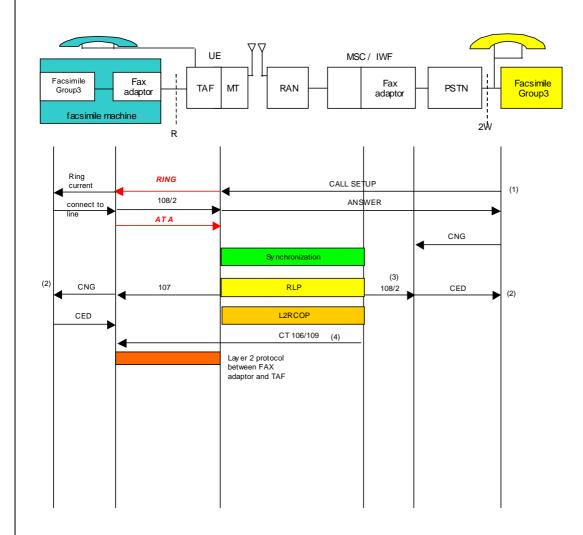


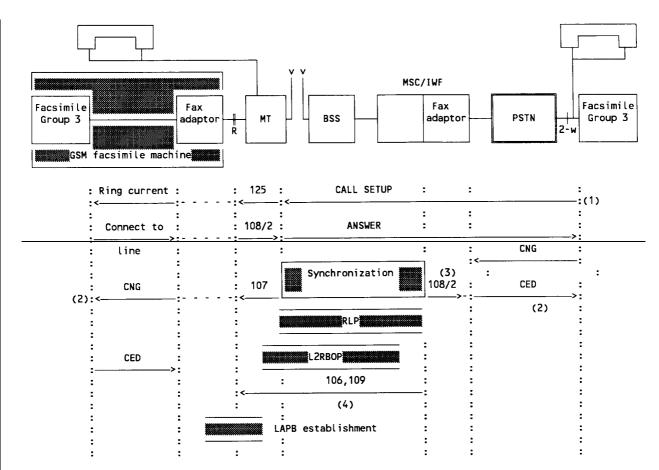

- (1) manual or automatic operation
- (2) mandatory(3) either after s
- (3) either after synchronization or RLP establishment
- (4) locally generated by fax adaptor at IWF

Figure II.2/23.14603.46: Mobile terminated call - auto answer

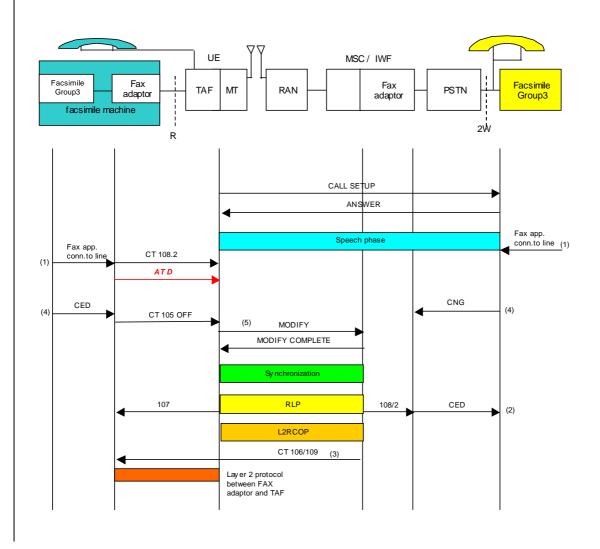


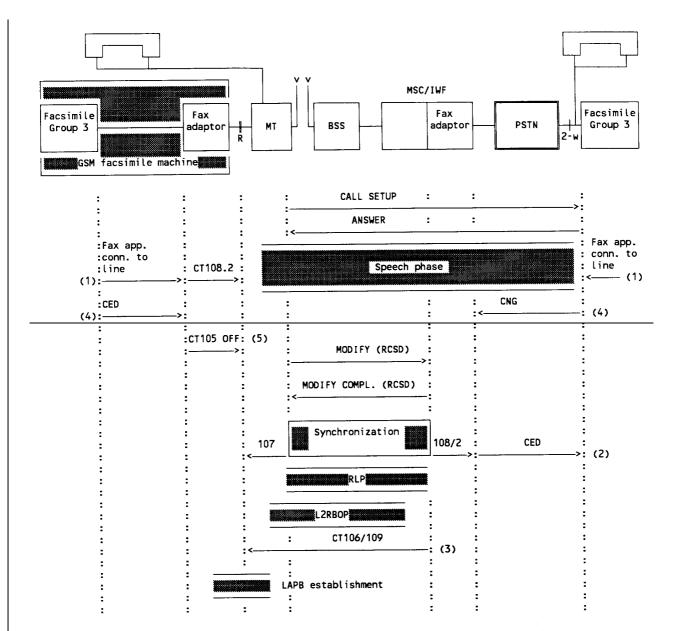


- (1) manual intervention
- (2) mandatory
- (3) locally generated by fax adaptor at IWF
- (4) optionally
- (5) triggered by delayed CT108.2 (3 sec)

Figure II.3a/23.14603.46: Mobile originated call - speech then facsimile DCD mobile terminated

1

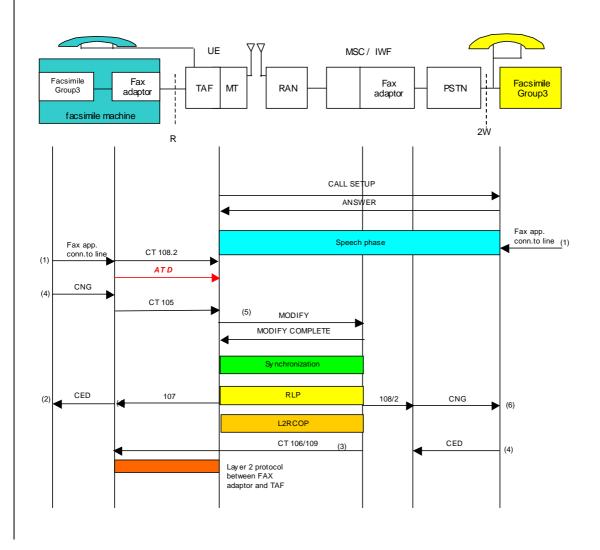


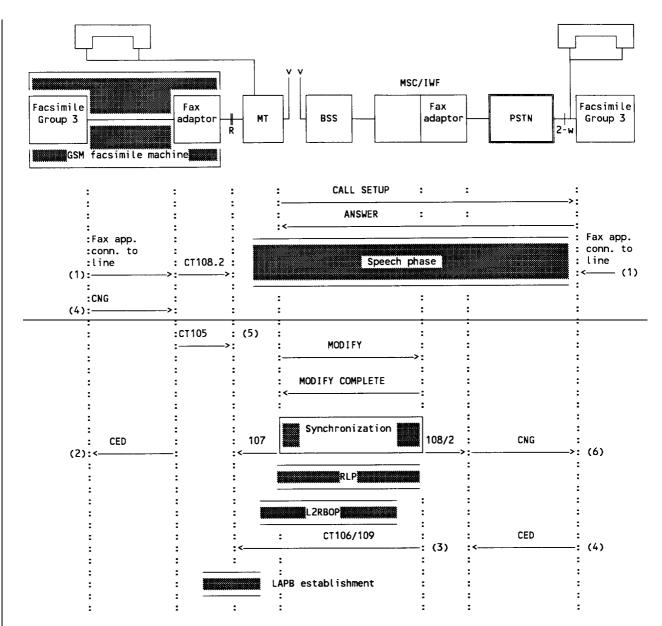


- (1) manual intervention
- (2) mandatory
- (3) locally generated by fax adaptor at IWF
- (4) optionally
- (5) triggered by delayed CT108.2 (3 sec)
- (6) transmitted only if neither CED nor BCS is already received

Figure II.3b/23.14603.46: Mobile originated call - speech then facsimile DCD mobile originated



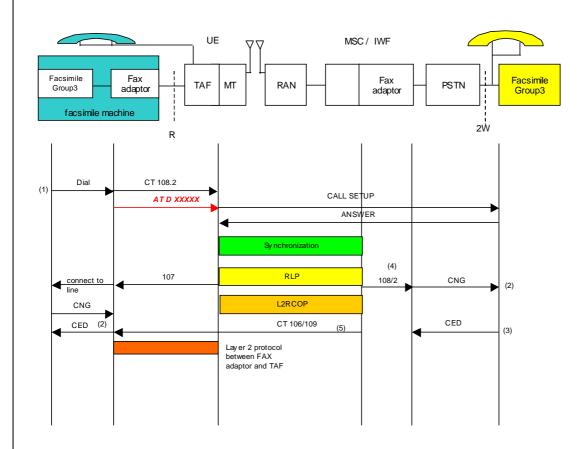

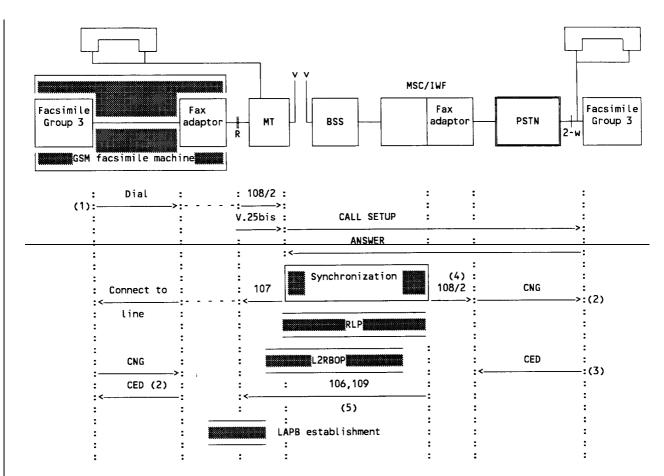

(1) manual intervention

(2) mandatory


(3) PSTN fax terminal may be manually or automatically answered


(4) either after synchronization or RLP establishment

(5) locally generated by fax adaptor at IWF

Figure II.4/23.14603.46: Mobile originated call - auto calling




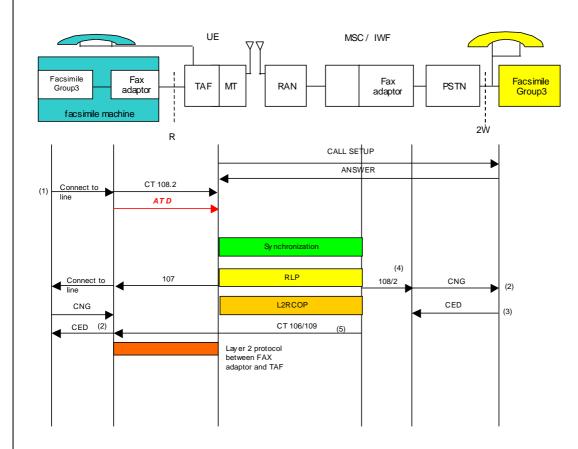


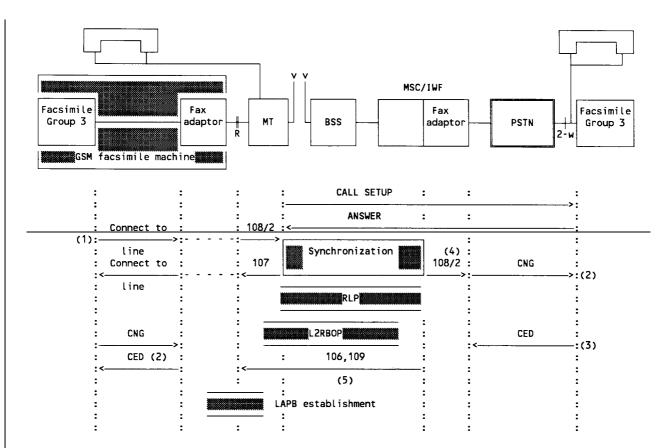

- (1) manual intervention
- (2) mandatory
- (3) PSTN fax terminal may be manually or automatically answered
- (4) either after synchronization or RLP establishment
- (5) locally generated by fax adaptor at IWF


Figure II.5/23.14603.46: Mobile originated call - manual calling

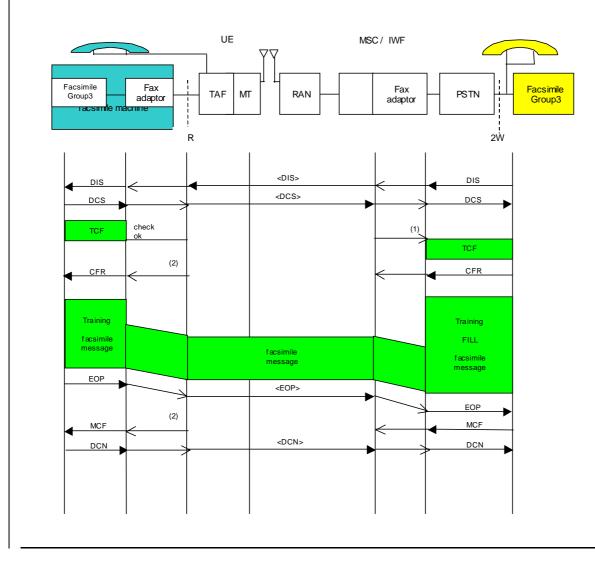


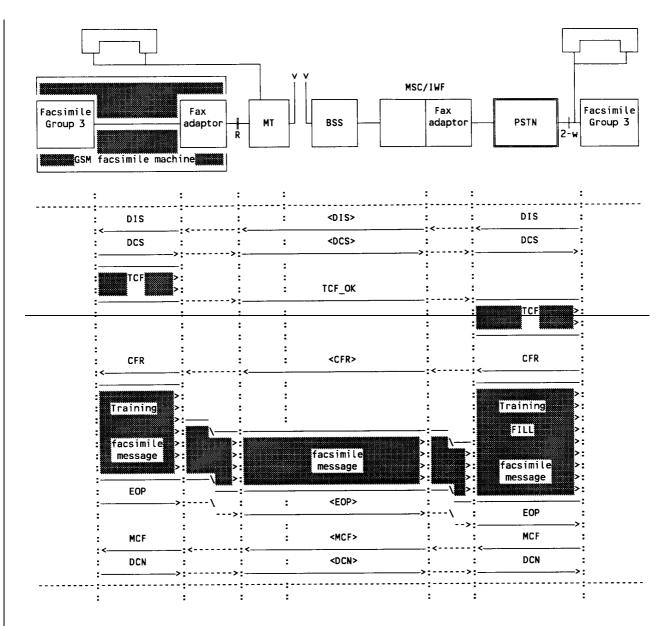

- (1) triggered by delayed DCS(75 ms)
- (2) triggered by busy off(flow control)


Figure II.6/23.14603.46: Mobile originated facsimile transmission

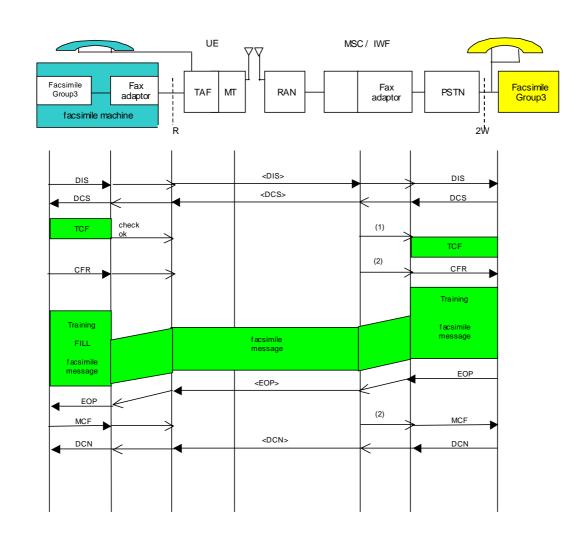


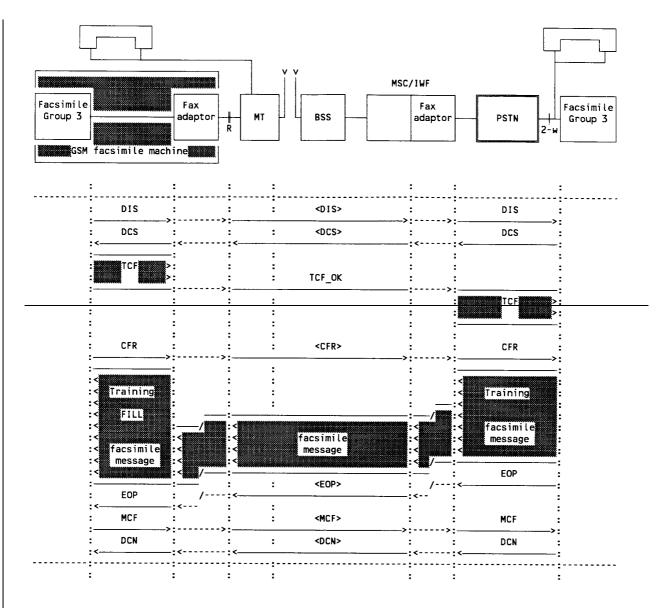

- (1) triggered by delayed DCS(75 ms)
- (2) triggered by busy off (flow control)

Figure II.7/23.14603.46: Mobile terminated facsimile transmission

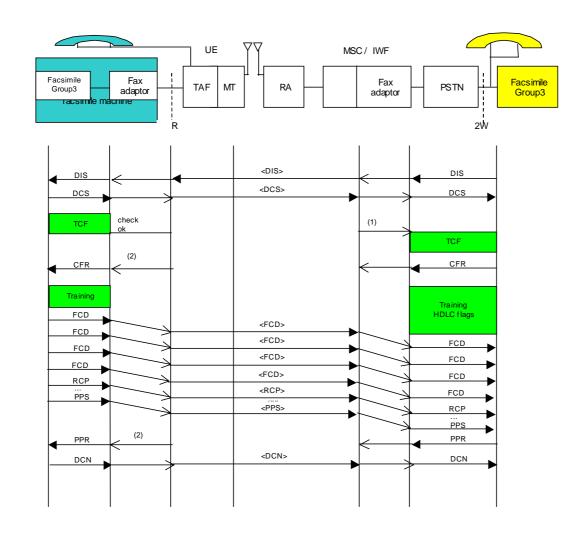

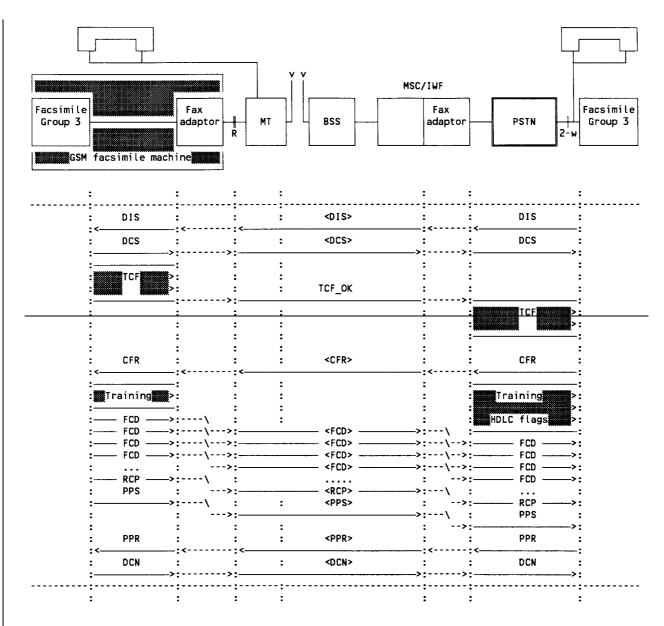

(1) triggered by delayed DCS(75 ms)

(2) triggered by busy off (flow control)

Figure II.8/23.14603.46: Mobile originated facsimile transmission (error correction mode)

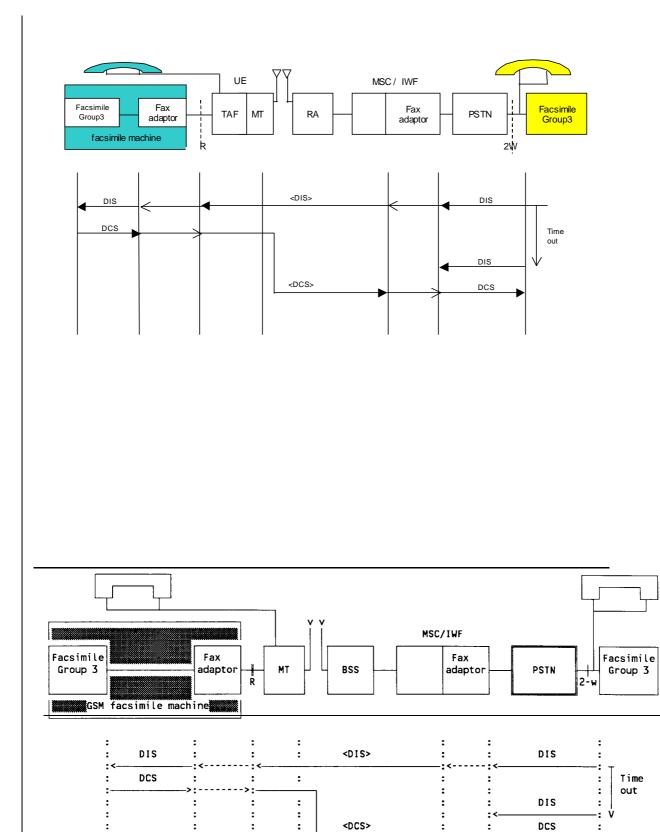


Figure II.9/03.46: Mobile originated facsimile transmission - error recovery (example)

•>:

:

>:

:

:

:

:

:

:

:

:


:

:

:


ETSI3GPP


1

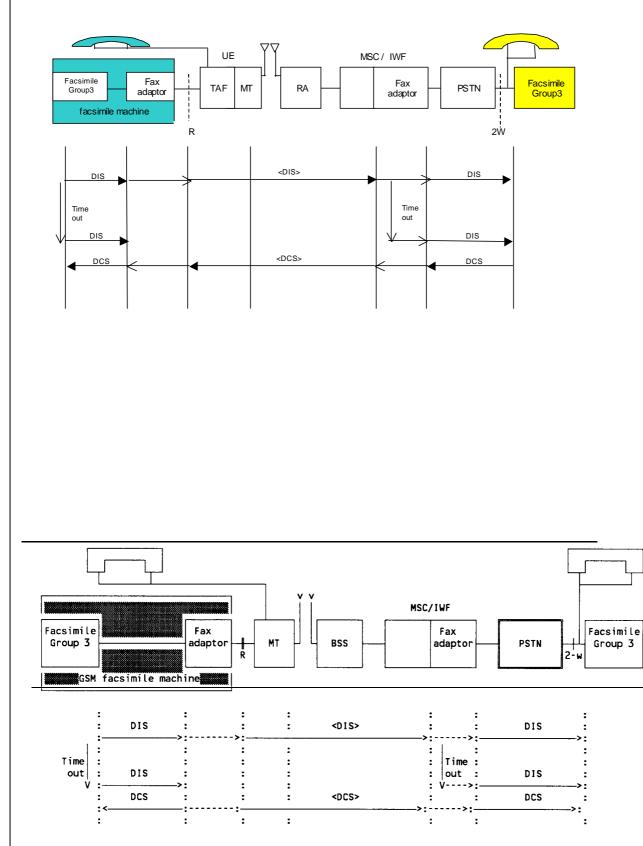



I

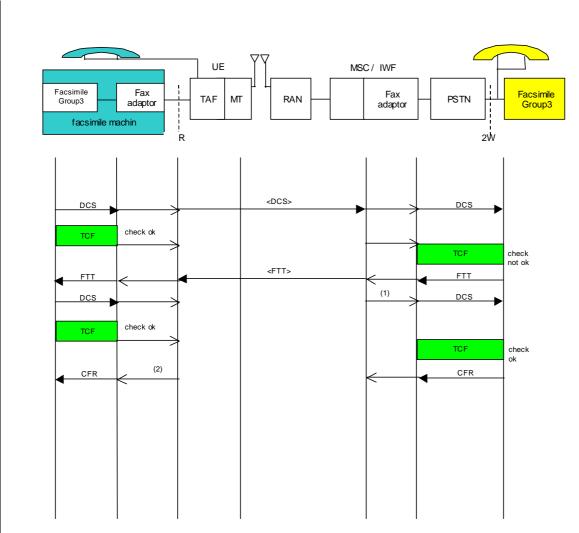

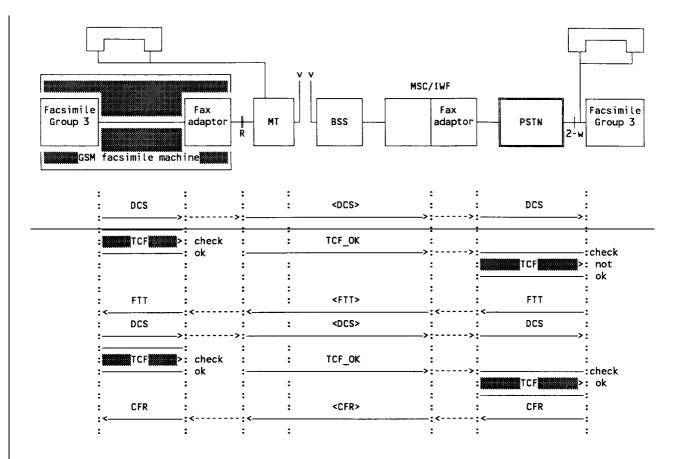

(1) triggered by delayed FTT(75 ms)

(2) triggered by busy off (flow control)

Figure II.11/23.14603.46: Mobile originated facsimile transmission - error recovery (example)




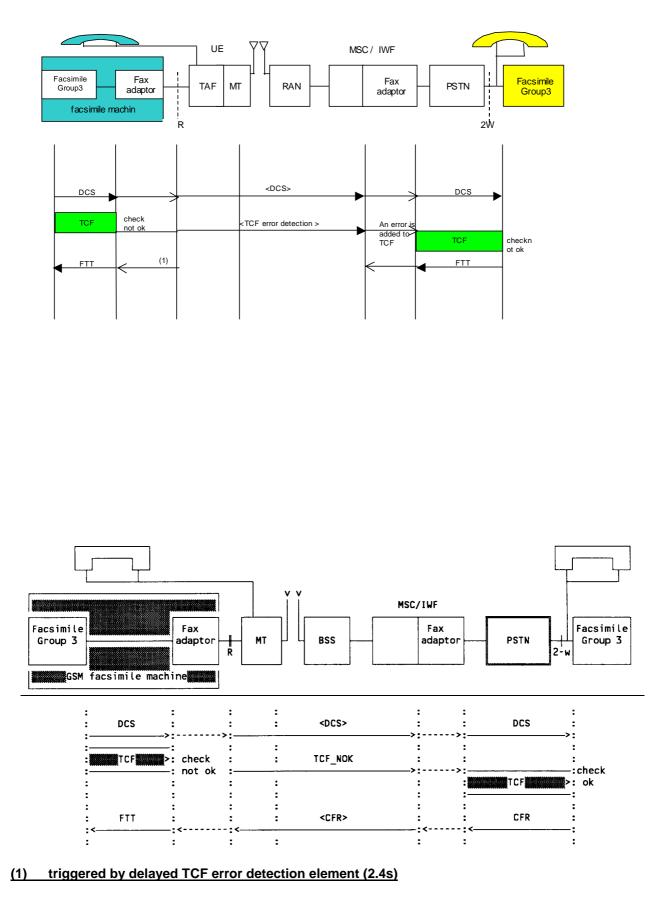


Figure II.12/23.14603.46: Mobile originated facsimile transmission - error recovery (example)



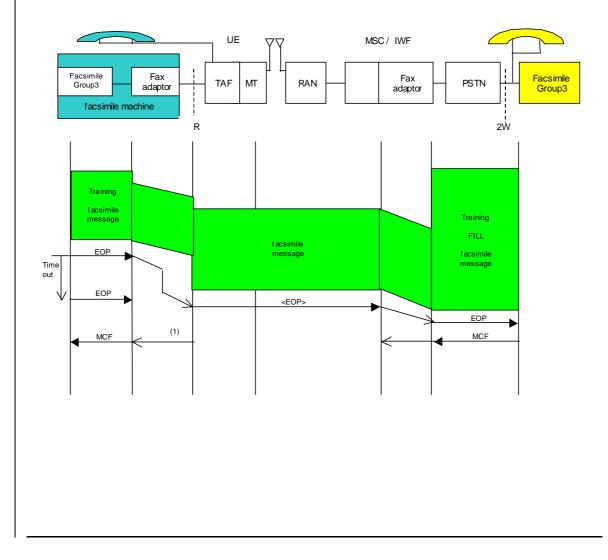

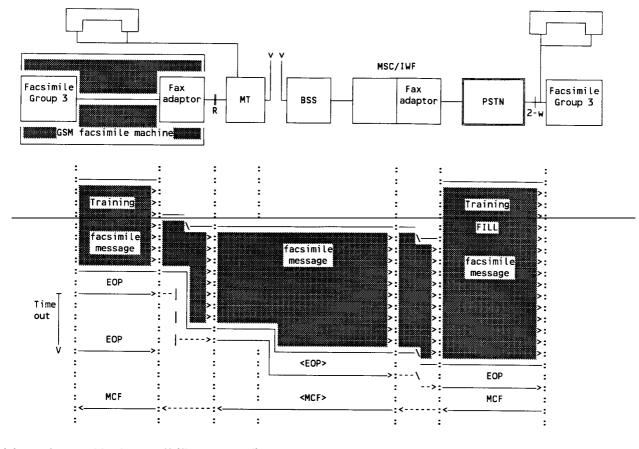

(1) triggered by busy off (flow control)

Figure II.13/23.14603.46: Mobile originated facsimile transmission - error recovery (example)

Annex B (informative): <u>Change history</u>Change Request History

Change history									
SMG No.	TDoc. No.	CR. No.		Section affected		lew ersion	Su	bject/Comments	
SMG#11					4	.1.2	ETS	SI Publication	
SMG#20					5	.0.0	Rele	ease 1996 version	
SMG#27					6	.0.0	Rel	ease 1997 version	
SMG#29					7	.0.0	Rel	ease 1998version	
TSG CN#	Spec	Version	CR	<phase></phase>	>	New Vers	ion	Subject/Comment	
					_				

History

Document history						
V70.0	August 1999	Publication				

ISBN 2-7437-3316-0 Dépôt légal : Août 1999