GTT(01)0009

Technical Specification Group Services and System Aspects Global Text Telephony Workshop, Dusseldorf, Germany, 18-19 April 2001

Source: Ericsson

Title: H.248 Annex F with latest corrections

Document for: Information

Agenda Item: 4

This document is referenced from both CTM and the proposed 23.002 Annex B because it describes methods to handle interworking between text telephony in PSTN and text conversation in other networks.

The reference is informative because it is rather the procedures described than the H.248 environment that is important for the application

The basic document was approved in ITU-T in November 2000. This copy contains minor corrections in parameter values made in 2001.

- 3 -COM 16-126-E

Feb. 2001 **Original: English STUDY PERIOD 2001-2005**

Question: 3/16

STUDY GROUP 16

TITLE: H.248 ANNEX F: FACSIMILE, TEXT CONVERSATION AND CALL **DISCRIMINATION PACKAGES**

Attention: This is not an ITU publication made available to the public, but an internal ITU Document intended only for use by the Member States of the ITU and by its Sector Members and their respective staff and collaborators in their ITU related work. It shall not be made available to, and used by, any other persons or entities without the prior written consent of the ITU.

- 4 -COM 16-126-E

H.248 ANNEX F

Facsimile, Text Conversation and Call Discrimination packages

CONTENTS

		Page
F.1	Summary	6
F.2	Scope	6
F.3	Definitions	6
F.3.1	Hexadecimal octet coding	6
F.3.2	Hexadecimal octet sequence	7
F.4	References	7
F.5	FAX/Textphone/Modem Tones Detection Package	8
F.5.1	Properties	9
F.5.2	Events	9
F.5.3	Signals	10
F.5.4	Statistics	10
F.5.5	Procedures	10
F.6	Text Conversation package	10
F.6.1	Properties	11
F.6.2	Events	13
F.6.3	Signals	13
F.6.4	Statistics	13
F.6.5	Procedures	14
F.7	Text Telephone package	16
F.7.1	Properties	18
F.7.2	Events	22
F.7.3	Signals	22
F.7.4	Statistics	22
F.7.5	Procedures	23
F.8	Call Type Discrimination package	25
F.8.1	Properties	25
F.8.2	Events	27

- 5 -COM 16-126-E

		Page
F.8.3	Signals	27
F.8.4	Statistics	33
F.8.5	Procedures	33
F.9	Fax package	35
F.9.1	Properties	35
F.9.2	Events	37
F.9.3	Signals	38
F.9.4	Statistics	38
F.9.5	Procedures	38
F.10	IP Fax package	39
F.10.1	Properties	39
F.10.2	Events	41
F.10.3	Signals	42
F.10.4	Statistics	42
F.10.5	Procedures	42

F.1 Summary

H.248 Annex F describes packages for fax, text telephone, call type discrimination, and data call detection for use with the H.248 Gateway Control Protocol. As defined in H.248, a "package" is an extension to H.248 that supports specific behaviour.

The packages are intended for control over gateway functions for transport of facsimile or text conversation between different network environments. Extensions can be made for other kinds of data transport.

- The Call Type Discrimination package defines control and monitoring of a PSTN line for the signalling protocols used in the beginning of a session of data transmission for fax, text telephony or data.
- The Text Telephone package defines control of a PSTN text telephone session in any of the modes supported by the automoding text telephone Recommendation V.18.
- The Fax package defines control of a PSTN fax transmission.
- The Fax/Textphone/Modem Tones Detection package defines control over a termination for detection of any signals from a fax, text telephone or data modem during a connection in voice mode.
- The Text Conversation package defines control over a real time interactive text conversation session using a universal presentation format and transferred with a transport method from a multimedia protocol in any network environment.
- The IP Fax package defines control over facsimile transmission in a packet network.

F.2 Scope

H.248 Annex F describes packages for the ITU-T H.248 gateway protocol related to data or telematic services. With terminations implementing these packages, a gateway is expected to handle initial modem negotiations, and the communication in voice, fax and text telephone call types. It contains:

Package "ftmd" for general detection of signals on a fixed telephone line indicating a possible request to enter some data related mode.

Package "ctyp" for general call discrimination to sort out if a call should be handled as voice, fax, text telephone or modem data, and perform the initial negotiation.

Package "txp" for communicating with text telephones in the telephone network.

Package "fax" for communication with facsimile in the telephone network.

Package "txc" for general text conversation in other environments.

Package "ipfax" for fax transmission in IP networks.

F.3 Definitions

F.3.1 Hexadecimal octet coding

Hexadecimal octet coding is a means for representing a string of octets as a string of hexadecimal digits, with two digits representing each octet.

Each octet is issued by the DTE or DCE in the same time sequence as transmitted on the GSTN line, with no intervening characters.

For each octet, the 8-bit sequence is encoded as two hexadecimal digits. Bit 0 is the first transmitted; bit 7 is the last.

Bits 7-4 are encoded as the first hexadecimal digit, with bit 7 as MSB and bit 4 as LSB. Bits 3-0 are encoded as the second hexadecimal digit, with bit 3 as MSB and bit 0 as LSB.

Examples:

Octet bit pattern (time order as specified in V.8 and V.8bis)	Hexadecimal coding	T.50 codes
00011011	D8	4/4, 3/8
11100100	27	3/2, 3/7
10000011 10100010 11001000 00001001	C1451390	4/3, 3/1, 3/4, 3/5, 3/1, 3/3, 3/9, 3/0

F.3.2 Hexadecimal octet sequence

A hexadecimal octet sequence is an even number of hexadecimal digits, terminated by a <CR> (T.50 0/13) character.

F.4 References

- [1] IETF RFC 1889: Schulzrinne, H., et al, RTP: A Transport Protocol for Real-Time Applications, January 1996.
- [2] ITU-T Recommendation T.30 (07/96) *Procedures for document facsimile transmission in the general switched telephone network.*
- [3] ITU-T Recommendation T.38 (06/98) Procedures for real-time Group 3 facsimile communication over IP networks.
- [4] ITU-T Recommendation V.8 (2000) Procedures for starting sessions of data transmission over the public switched telephone network.
- [5] ITU-T Recommendation V.8bis (2000) Procedures for the identification and selection of common modes of operation between data circuit-termination equipments (DCEs).
- [6] ITU-T Recommendation V.18 (2000) Operational and interworking requirements for DCES operating in the text telephone mode.
- [7] ITU-T Recommendation V.25 (1996) Automatic answering equipment and/or parallel automatic calling equipment on the general switched telephone network.
- [8] ITU-T Recommendation T.140 (1998) Text conversation protocol for multimedia application. With Amendment 1 (2000).
- [9] ITU-T Recommendation H.323 Annex G (2000) Text Conversation and Text SET (2000).
- [10] IETF G. Hellström, "RTP Payload for Text Conversation", Internet Engineering Task Force, RFC 2793. (2000)
- [11] ITU-T Recommendation T.134 (1998) Text Chat Application Entity.
- [12] ITU-T Recommendation V.17 (02/91), Recommendation V.17 (02/91) A 2-wire modem for facsimile applications with rates up to 14 400 bit/s.

- [13] ITU-T Recommendation V.27ter (11/88) 4800/2400 bits per second modem standardized for use in the general switched telephone network.
- [14] ITU-T Recommendation V.21 (11/88) 300 bits per second duplex modem standardized for use in the general switched telephone network.
- [15] ITU-T Recommendation V.23 (11/88) 600/1200-baud modem standardized for use in the general switched telephone network.
- [16] ITU-T Recommendation V.34 (02/91) A duplex modem operating at data signalling rates of up to 14 400 bit/s for use on the general switched telephone network and on leased point-to-point 2-wire telephone-type circuit.
- [17] ITU-T Recommendation V.90 (09/98) A digital modem and analogue modem pair for use on the Public Switched Telephone Network (PSTN) at data signalling rates of up to 56 000 bit/s downstream and up to 33 600 bit/s upstream.
- [18] ITU-T Recommendation V.61 (08/96) A simultaneous voice plus data modem, operating at a voice plus data signalling rate of 4 800 bit/s, with optional automatic switching to data-only signalling rates of up to 14 400 bit/s, for use on the General Switched ...
- [19] ITU-T Recommendation T.37 (06/98) Procedures for the transfer of facsimile data via store and forward on the Internet.
- [20] ISO/IEC 10646-1 (1993) Universal Multiple Octet Coded Character Set.
- [21] ITU-T Recommendation T.50 (1992) International Reference Alphabet (IRA) (formerly International Alphabet No. 5 or IA5) Information technology 7-bit coded character set for information interchange.
- [22] ITU-T H.323 Annex D (1998) Facsimile.

F.4.1 Non-normative references

- RFC 2532, Extended Facsimile Using Internet Mail., IETF
- RFC 2530, Indicating Supported Media Features Using Extensions to DSN and MDN.,
 IETF
- RFC 2531, Content Feature Schema for Internet Fax., IETF
- RFC 2301, File Format for Internet Fax., IETF
- RFC 2302, Tag Image File Format (TIFF) image/tiff MIME Sub-type Registration, IETF
- RFC 2303, Minimal PSTN address format in Internet Mail., IETF
- RFC 2304, Minimal FAX address format in Internet Mail., IETF
- RFC 2305, A Simple Mode of Facsimile Using Internet Mail., IETF

F.5 FAX/Textphone/Modem Tones Detection Package

PackageID: ftmd, 0x000E

Version: 1

Extends: tonedet version 1

This package defines an event to detect the presence of data traffic (fax, textphone or modem) on a line. The main intention of this event may be used to effect the compression option on the line so

that an audio codec capable of transmitting modem signals can be invoked to handle the connection when needed. This Package extends the possible values of tone id in the "start tone detected" event. Note that there is no discrimination between tones from this package. If discrimination is desired, the Call Type Discrimination package should be invoked.

F.5.1 Properties

None.

F.5.2 Events

Events are defined as for the tone detection package.

F.5.2.1 Additional tone id value

dtfm, 0x0039

This tone id is generated when any of the following tones are detected.

"Tone"	Description	Applicable to
CNG	a T.30 fax calling	Fax
V21flag	a V21 tone and flags	Fax
CIV18	a V.8 CI with V.18 call function	Textphone
XCI	a V.18 XCI	Textphone
V18txp	a V.18 "txp"	Textphone
Belltone	a Bell 103 carrier, either the high or the low frequency channel (as defined in V.18)	Textphone
Baudot	a Baudot initial tone and character (as def. in V.18)	Textphone
Edt	an EDT initial tone and character (as def. in V.18)	Textphone
CIdata a V.8 CI with any data call function		Data
CT a V.25 calling tone		Text and Data
CIfax a V.8 CI with facsimile call function		Fax
V21tone a V.21 carrier, either the high or the low frequency channel		Text and Data
V23tone	a V.23 carrier, either the high or the low frequency channel	Text and data
V8bis	a V.8bis modem handshaking signal	Fax, Text and Data
ANS	V.25 ANS, equivalent to T.30 CED from answering terminal	Fax, Text and Data
ANSAM	V.8 ANSam	Fax, Text and Data

F.5.3 Signals

None.

F.5.4 Statistics

None.

F.5.5 Procedures

None.

F.6 Text Conversation package

Package Name: Text Conversation

PackageID: txc (0x00F)

Version: 1

Extends: None

Description:

The Text Conversation package is intended for enabling real time text conversation between terminals in different networks or multimedia environments. This package includes the mechanisms

needed to transport T.140 text conversation streams [8] in multimedia environments. The transport mechanism will be different for each environment where the package is used.

F.6.1 Properties

F.6.1.1 Text buffering time

PropertyID: bufftime (0x0001)

Type: Integer Possible values: 0-500

Defined in: LocalControl Characteristics: Read/Write

Description:

This property indicates the time in ms that T.140 [8] data shall be collected before transmission in order to keep overhead from text low. In low bit rate IP networks, a value of 300 ms is recommended. In environments with low overhead or high bit rates this property should have the value 0 enabling immediate transmission of entered characters.

F.6.1.2 Text termination connection state

PropertyID: connstate (0x0002)

Type: Enumeration

Possible values:

Idle (0x0001) for no connection efforts

Prepare (0x0002) for being known in the termination and ready

to accept connections.

(the text capability is offered in session requests)

Initiate (0x0003) for taking the initiative to establish a text

connection opening a text channel

Accept (0x0004) for accepting an incoming request for a text

session

Deny (0x0005) for denying an incoming text connect request

Connected (0x0006) for established connection in text mode

Defined in: TerminationState

Characteristics: Read/Write

Description:

The connection state property is used to register text capability, request a text connection, and reflect details of the achieved text connection. For transport methods having separate channel control procedures, managed by the MGC, only a subset of the values is used: Idle, Prepare, Connected.

F.6.1.3 Text User Identity

PropertyID: txuserid (0x0003)

Type: String

Possible value: String of up to 64 characters in Unicode UTF-8 [20]

Defined in: LocalControl Characteristics: Read/Write

Description:

This parameter holds the optional remote User Identity parameter of a T.140 [8] text conversation session, retrieved from the session.

F.6.1.4 Text Transport

PropertyID: trpt (0x0004)
Type: Enumeration

Possible values:

H224 (0x0001) for H.224 Client ID=2 in H.320

AL1 (0x0002) for AL1 in H.324

TCP (0x0003) for TCP as in H.323 Annex G [9] RTP/T.140 (0x0004) for RTP with T.140 [8] as in H.323

Annex G [9] or IETF SIP

RTP/RED/T.140 (0x0005) for RTP with T.140 and redundancy

coding RED as in H.323 Annex G or

IETF SIP

T.134 (0x0006) for T.134 in the T.120 environment [11] Unassigned (0x0007) When no transport protocol is assigned

Defined in: LocalControl Characteristics: Read/Write

Description:

The Transport parameter reflects the transport mechanism selected for the Text Conversation termination. When the media description has the full capability of describing sessions including the transport mechanism, this parameter is implied by the media descriptor.

F.6.1.5 Text Protocol Version

PropertyID: TextProto (0x0005)

Type: Integer

Possible values: Any integer corresponding to a T.140 version number.

(currently 1)

Defined in: LocalControl Characteristics: Read/Write

Description:

The version of the T.140 protocol used in the connection.

F.6.1.6 Redundancy Level

PropertyID: red(0x0006)

Type: Integer Possible values: 0-6

0 = use default or automatic decision on redundancy level (default)

1 = use no redundancy

2-6 = use specified number of generations of data

Defined in: LocalControl

Characteristics: Read/Write

Description:

The number of generations to use in RTP redundancy coding including the Primary.

F.6.1.7 Txc request timer

PropertyID: txctim (0x0007)

Type: integer Possible values: 0-6000

Default: 0

Defined in: LocalControl Characteristics: Read/Write

Description:

The txctim property is a timer value in tenths of seconds for the requested operation. If the requested operation is not completed within this time, the state is returned to Idle and the result reported in the connchange event. An initial timer value of 0 indicates that no timer control is requested.

F.6.2 Events

F.6.2.1 Connection State Change

Event Id: connchange (0x0001)

EventDescriptorParameters

none

ObservedEventDescriptorParameters

ParameterName: Connection Change
ParameterID: connchng (0X0001)

Type: Enumeration

Possible Value: As property txc/connstate

Description:

This event will occur when the text connection state for the termination has changed. Its parameter is the new contents of the Connection State property.

If a request timed out, the state is returned to Idle.

F.6.3 Signals

None.

F.6.4 Statistics

F.6.4.1 Characters Transferred

StatisticsID: chartrans (0x0001)

Units: count

Description:

No. of bytes of T.140 data transferred through the termination.

F.6.4.2 Lost Packets

StatisticsID: packlost (0x0002)

Units: count

Description:

Number of T.140 packets lost as counted by the receiving T.140 termination.

F.6.5 Procedures

The following are standard transport mechanisms for text conversation in different environments.

– In H.320: H.224 with Client ID=2.

– In H.324: AL1 channel connected with H.245 procedures.

– In T.120: T.134 transport in T.125 communication channel environment.

– In H.323: RTP/T.140 or TCP as selected with H.245 messages.

In IETF SIP: RTP/T.140 as initiated with SDP.

Note that the T.140 text media is also used together with V.18 [6] modems for text telephony, specified in a separate package: Text_Telephone (txp).

The Text Conversation package is intended to be added to a multimedia termination, handling appropriate multiplexing and control.

F.6.5.1 Function

A termination with Text Conversation adds capability declaration for a text conversation channel in the call setup according to procedures defined for each environment. When matching capabilities exist, a T.140 channel can be established according to the transport protocol used in the current environment. T.140 text stream contents received from one termination is transferred for transmission to other T.140 capable terminations in the context. The T.140 contents may be buffered for a short moment for possible collection of more text in the same transmission according to the buffer time property.

F.6.5.2 Informative description

Real time text conversation allows telecom users to carry out a written conversation. The presentation and coding aspects of standardized text conversation are defined in ITU-T T.140. Text is transmitted character by character (or in small blocks) so that the users experience a close interaction. The text and basic editing control is ISO 10646-1, UTF-8 [20] coded. The figure gives an example of how a text conversation can be displayed to the user.

ANNE	EVE
Hi, this is Anne.	Oh, hello Anne, I am glad you are
	calling!
Yes, have you heard that I will come to	It was long since we met!
Paris in November?	
	No, that was new to me. What brings you
	here?

FIGURE

Possible display of a one-to-one text conversation

For each transport environment, a suitable transport protocol must be selected to carry the text. Currently defined and recommended transport environments for T.140 text media streams that can be supported by this package are:

- 1) Packet networks, where the procedures described in H.323 Annex G [9] can be used for setting up and conducting text conversation sessions, using TCP or RTP/T.140 for the transport of T.140.
- 2) Packet networks, where the IETF Session Initiation Protocol SIP can be used for setting up and conducting text conversation sessions using RTP/T.140 for the transport of T.140.
- 3) The H.324 multimedia environment in PSTN, ISDN and Mobile networks, where an AL1 channel connected by H.245 procedures is used for T.140.
- 4) The H.320 multimedia environment, where a H.224 channel with client ID=2 is specified for transport of T.140.
- 5) The T.120 data conferencing environment, that can be used alone or in conjunction with any of the environments above, where T.134 specifies the application entity and T.125 the data channel for T.140.

A separate Text Telephone package (txp) supports text telephony in the PSTN using the ITU-T V.18 modem in native and legacy modes and T.140 for communication with terminations using this package.

Interworking between these forms of Text Conversation can be achieved through the use of gateways with packages defined here.

F.6.5.3 Total Conversation

Most text conversation transport environments are part of multimedia communication systems. With the introduction of text, they enable conversation in video, text and voice simultaneously, called Total Conversation. The total set of communication modes that people tend to use locally can be offered on a distance through Total Conversation. Since the text part is built on the unified presentation level T.140, the task to arrange interoperability of Total Conversation in different network environments through a gateway is simplified.

Video is optional in the multimedia systems. Therefore compatible text-and-voice conversation can also be established within the same framework.

F.6.5.4 Descriptor to use for text conversation

One descriptor value is of specific interest for the Text Conversation and Text Telephone packages. That is the text conversation media stream. It is described here for information.

Text conversation stream

This descriptor is used for the text conversation stream, according to ITU-T T.140 [8]. T.140 gives a general presentation level description for a termination supporting real time text conversation. The text and basic editing control is UTF-8 coded [20]. For each transport environment, a suitable transport protocol must be selected to carry the text.

T.140 is a registered MIME text stream name, that can be specified to be used as it is or in RTP embedding of RFC 2793 [10].

Examples:

From MGC to MG in an ADD command, the T.140 stream could be specified as this example shows:

```
Media { Stream = 4 { LocalControl { Mode = ReceiveOnly, g/NetworkType = RTP/IP4, g/PreferredCodecs=T140}}}
```

The MG would return the SDP specification for the media stream:

```
Media { Stream = 4 {Local = SDP { v=0 c=IN IP4 125.125.125.111 m=text 1111 RTP/AVP 98 a=rtpmap:96 red a=fmtp: 98 96/96 a=rtpmap: 96 t140}}}
```

F.7 Text Telephone package

PackageID: txp (0x001<u>0</u>6)

Version: 1

Extends: None

Description:

The text telephone package is used on a line termination in a Media Gateway, to handle text telephone calls. It includes V.18 [6] text telephone modem functionality that adapts to different legacy text telephone systems in the PSTN as well as it provides communication with V.18 equipped text telephones. The text media stream is UTF-8 coded [20] with a few editing functions as specified in ITU-T T.140 [8]. The text telephone package is intended to be operated together with the Call Type Discrimination package (ctyp) to perform V.18 automoding functions.

Text Telephony

Text Telephony offers a real time conversation in text between two parties. It may be combined with voice conversation. Text telephony in PSTN existed in at least six incompatible legacy modes before the automoding modem Recommendation for text telephony V.18 was introduced by ITU. V.18 is suitable for use in PSTN text telephones, but also in gateways for connection to the PSTN text telephones. When connected, it can operate in one of its native V.18 modes, or in any of the six legacy modes described in V.18 annexes. The legacy modes are Baudot, EDT, DTMF, V.21, Minitel and Bell103. The mode detection and adjustment of the transmission to the selected mode is automatic.

The native modes use ITU-T T.140 for the text coding and control and V.21 [14] or optionally V.61 [19] for the modulation. The legacy modes use different character coding schemes, but when used in a gateway, the text stream to and from the textphone termination is T.140 coded for all modes. The text telephone package described here includes character conversion, filtering and other adaptation needed for conversation with the legacy mode text telephones.

Carrier modes and carrier-less modes

Three of the legacy textphone modes are carrier-less. This means that they do not send any signal at all when there are no characters to transmit. Three legacy modes and the native V.18 modes use a carrier tone transmitted as long as the connection is maintained. If the carrier stops, it is detected but the line is not disconnected, because this is normal behaviour during call transfer and alternating voice and text usage.

Text telephone package considerations above the V.18 modem level


V.18 only specifies an automoding modem and the requirement to use T.140 when V.18 native mode is achieved in a connection. When used in a gateway, there are some general issues that must be handled above the V.18 level.

Character set

The legacy modes have limited character sets. For all legacy modes, appropriate character conversion, filtering and control interception is included in the package functionality, so that the communication with other T140 text terminations in the context is equalized to a T140 text stream.

Embedded termination functionality

There is no need to open all details of the use of V.18 and T.140 to be accessible from the MGC in a gateway. V.18, T.140, character conversion methods and other automated methods are therefore combined in the text telephone package that can be added to suitable terminations of a gateway. This figure describes the text telephone package components.

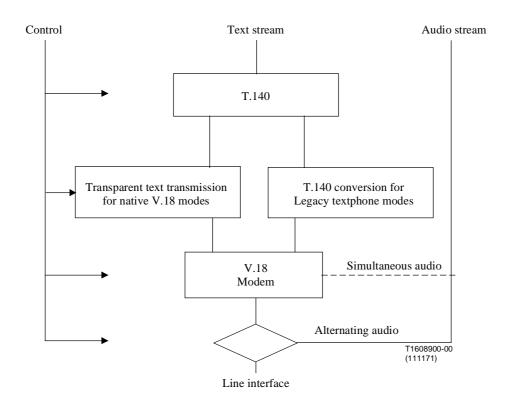

FIGURE

Text telephone package functional view

F.7.1 Properties

F.7.1.1 Conversation mode

PropertyID: convmode (0x0001)

Type: Sub-list

Possible values:

Text-only (0x0001) Basic text only mode, not possible to combine with voice

- 19 -COM 16-126-E

Alternating (0x0002) Text and voice may be alternating Simultaneous (0x0003) Simultaneous text and voice mode

Defined in: Termination state

Characteristics: Read/Write

Description:

The behaviour of the termination is influenced by this property. By setting the property to a selection of the possible values, the number of ways that the conversation can be conducted can be defined. After connection the property contains the actual conversation mode used in the call.

The basic text only mode shall always be supported.

The alternating text and voice mode is most often used to enable one user to speak and read and the other to listen and type. It is used because there was no technology support for simultaneous voice and text when text telephony was introduced. It is only supported for compatibility with the legacy mode text telephone habits.

The simultaneous text and voice mode enables the users to communicate in any combination and order of the two media. No legacy mode terminals operate in this mode. V.18 equipped terminals with V.61 [18] modulation can operate in this mode.

F.7.1.2 Communication Mode

PropertyID: commode (0x0002)

Type: Enumeration

Possible values:

V18-V21Hi	(0x0001)	native V.18 mode transmitting on the high channel for text only or text and voice alternatively
V18-V21Lo	(0x0002)	native V.18 mode transmitting on the low channel for text only or text and voice alternatively
V18-V61C	(0x0003)	native V.18 mode for text and voice simultaneously, transmitting in the caller's channel
V18-V61A	(0x0004)	native V.18 mode for text and voice simultaneously, transmitting in the answering part's channel
V21Hi	(0x0005)	legacy V.21 mode transmitting on the high channel
V21Lo	(0x0006)	legacy V.21 mode transmitting on the low channel
DTMF	(0x0007)	DTMF text telephone mode
EDT	(0x0008)	EDT ("European Deaf Telephone")
Baudot 45	(0x0009)	Baudot 45.45 bit/s
Baudot 47	(0x000A)	Baudot undetermined bit rate
Baudot 50	(0x000B)	Baudot 50 bit/s

- 20 -COM 16-126-E

V23Hi	(0x000C)	V.23 modulation and Minitel coding transmitting on the high channel
V23Lo	(0x000D)	V.23 modulation and Minitel coding, transmitting on the low channel
BellHi	(0x000E)	Bell 103, transmitting on the high channel
BellLo	(0x000F)	Bell 103, transmitting on the low channel
None	(0x0010)	No mode achieved

Defined in: LocalControl Characteristics: Read/Write

Description:

This property indicates what modulation and mode the V.18 modem is operating in, reflecting what type of text telephone it is in connection with. For an explanation of the different modes, see ITU-T V.18 [6].

If a specific mode of operation is wanted, this property is set before the text connection is made.

Normally it is set with the outcome of the V.18 automoding procedure performed with the Call Type Discrimination package.

When a legacy mode textphone signal is detected by the Call Type Discrimination package, the connection result is only reported, but V.18 does not transmit any signal until ordered to do so by setting this property or when probing is invoked.

F.7.1.3 Connection Mode

PropertyID: connmode (0x0003)

Type: Enumeration

Possible values:

Idle (0x0001) No connection established and no efforts to

connect

Connecting (0x0002) For request of the native or legacy mode

indicated in the Communication

Mode property

Connected (0x0003) Connection established in one of the

communication modes

Defined in: Termination State

Characteristics: Read/Write

Description:

This property indicates in what connection phase and mode the V.18 modem is operating. A connection effort is initiated by setting this property to connecting, with the desired mode in the Communication Mode property.

A V.18 modem can be controlled to operate in one of a set of modes for seeking contact with a counterpart. The modes available are listed as values of this property. Determination of the mode is made by the ctyp package, possibly combined with the probing action of that package.

Once connected, the termination operates in the selected mode until the text connection is lost or it is ordered to disconnect. If text connection is lost for a certain time, the automoding procedure can be restarted through the ctyp package, or the modem can stay in the achieved mode trying to reconnect.

The ctyp package may be used on a connected voice line to detect if the remote user wants to enter text mode. It must be noted that for some of the legacy modes (EDT, DTMF and Baudot), the user has to push some keys on the textphone to make the connection when V.18 is set in the automode monitor mode. This is slightly unusual for a textphone user, who normally waits for the answering side to start the conversation. Therefore, the explicit automoding modes should be used when possible, probing as answering and sending V.18 signals as calling.

If a connection request fails, the property returns to Idle state. If the connection request succeeds, the property changes value to Connected.

F.7.1.4 Action at loss of connection

PropertyID: lossconnection (0x0006)

Type: Enumeration

Possible values:

Keep (0x0001) keep selected communication mode

Return (0x0002) return to automoding

Defined in: Termination State

Characteristics: Read/Write

Description:

This property tells how the V.18 modem handles loss of text connection. When "Keep" is selected, the conversation is optimized for the alternating text - voice mode. When "Return" is selected, the communication is optimized for call forwarding between different types of text telephones. For that case, ctyp must be invoked for reconnection.

F.7.1.5 V18 options

PropertyID: v18opt (0x0007)

Type: Enumeration

Possible values: List of:

V.61 capability (0x0001) indicates the ability to use V.61

modulation [19]

Defined in: Termination state

Characteristics: Read/Write

Description:

This property indicates what optional capabilities the V.18 modem implementation has and is allowed to use.

F.7.1.6 Character set

PropertyID: characterset (0x0008)

Type: String

Possible values: ISO registered name for a character set

Defined in: Termination State

Characteristics: Read/Write

Description:

The legacy modes have limited character sets. For all legacy modes, appropriate character conversion, filtering and control interception is included in the package functionality, so that the communication with other T.140 text terminations in the context is equalized to a T.140 text stream. For a user-friendly conversion of received national characters in the limited character sets to ISO 10646-1 used in T.140, there is a need to specify what national translation table to use. This is valid for EDT, DTMF, V.21 and Baudot modes. The Character set parameter is the registered ISO code for the national variant of the ITU-T T.50 [21] character set used. Default is:

- German for EDT,
- Danish for DTMF (suitable also for the Netherlands),
- Swedish/Finnish for V.21 (suitable also for UK),
- International Reference Version for Baudot.

Example: In Norway, the letter "Æ" (A and E together) is used in the same location of the 7-bit character table as used for letter "Ä" (A with umlaut) in Finland and Sweden. The international reference version has the character "[" (left bracket) in the same position. In T.140 these characters have unique positions.

F.7.2 Events

F.7.2.1 Connection mode changed

EventID: connchng (0x0001)

EventDescriptorParameters

none

Observed Event Descriptor Parameters

Same as the property txp/commode

Description:

This event reports the change of communication mode, as a result of a connection effort, or a disconnection.

F.7.3 Signals

None.

F.7.4 Statistics

F.7.4.1 Number of characters transferred

StatisticsID: chartrans (0x0001)

Units: count

Description:

Number of bytes of T.140 data transferred (sent and received).

F.7.4.2 Number of alternating turns

StatisticsID: altturns (0x0002)

Units: count

Description:

Number of alternating turns when using alternating conversation mode.

F.7.5 Procedures

F.7.5.1 Basic operation

After line connection, the termination where the Text Telephone package is implemented should be requested to try a text telephone connection using the functionality of the Call Type Discrimination Package for the modem signalling according to ITU-T V.18 in a selected mode. Once the connection is established, the text telephone package is used for the text communication in the established mode.

After connection in text mode, the result is a gateway context with one textphone termination and one voice line termination connected to the same line. In the same context, the normal case is to have other terminations with audio and text conversation media.

In the simplest text-only case, the audio streams are not used and may be released.

Text received through the V.18 modem is converted if necessary to T.140 [8]. It is embedded in the RTP/T.140 format according to the rules in T.140 and RFC 2793 [10], specifying RTP/T.140. Text received from other text conversation terminations is transmitted through the text telephone termination after extraction from the RTP packets. This process continues until any end disconnects.

F.7.5.2 Informative description

Descriptors to use for text telephony:

Two descriptor values are of specific interest for the Text Telephone package. That is the text conversation media stream and the V.18 modem. The text conversation media stream is described in the Text Conversation package. The V.18 modem descriptor is described here for information.

F.7.5.3 V.18 Modem

Modem name V18.

This modem type is intended for communication with text telephones in the PSTN. Its operational modes are implemented in the textphone package. The logic for setting and detecting the mode according to V.18 is handled by the ctyp package. Some properties of the text telephone package and the Call Type Discrimination package directly reflect parameters for control of the V.18 modem. V.18 modem implementations may have different capabilities reflected in the property values.

A V.18 modem may be operated in automode monitor mode, when it listens on a voice line for text telephone signals. This mode can be used to detect that the user wish to transit from voice to text during a voice call. That is done entirely with the ctyp package.

Alternatively, a V.18 modem may be operated in modes where it actively tries to establish a text telephone connection. The procedure includes transmission of text telephone specific signals on the line. For calling modems, it is done by the CI signal in the ctyp package. For an answering modem

it is done with the ctyp package combined with probing from the textphone package by setting the commode property to the probing mode.

When the mode is discriminated, the commode property should be set to request communication in that mode.

After successful connection in a text telephone mode, the text session is conducted in the specific mode as controlled with the commode property, and the text stream is made available in T.140 format for other text terminations in the context.

The text telephone package only contains the text connection and text media aspects of the termination. It is supposed to be combined with appropriate call control packages, line interface packages and voice channel packages.

F.7.5.4 Operation with alternating text and voice mode

If the involved gateways have the alternating text and voice capability, the following procedure can be applied to give the users a possibility to go back and forth between using text and voice. Between the terminals in the context, two streams are members of the context during the call, the text stream and the audio stream. The procedure is slightly dependent on the terminal type as described in the following section.

F.7.5.5 Alternating text and voice mode with legacy, carrier-less textphones

For the carrier-less types Baudot, DTMF and EDT the following way to operate should be used: When V.18 detects text, the textphone termination stops feeding the audio stream into the audio stream of the context, and instead inserts the detected and T.140 converted characters into the text stream. This mode is continued as long as characters keep coming from the PSTN textphone.

When no more characters arrive, and no textphone signal is received within 1 second, the audio channel is again fed to the Audio-stream channel. If new text comes from the V.18 side, the process is repeated.

It is important that the implementation of V.18 can retrieve characters from the first detected text telephone signals after each mode shift. The leading tones before the characters can be as short as 150 ms.

If text is received from the context through the Text stream, when V.18 is not active receiving text, the voice path is muted, and the characters are sent to the V.18 modem for transmission. When all text is transmitted and no more is received for two seconds, the audio channels are enabled again.

Since the carrier-less systems are one way alternate transmission systems, transmission of characters is possible only in one direction at a time. Once started, reception is given priority.

In the Context, two way simultaneous transmission is possible. Therefore, characters received from the context while V.18 is busy receiving should be buffered (up to a reasonable limit).

All these actions after the initial connections are automatic and are handled within the textphone termination.

F.7.5.6 Alternating voice and text conversation in carrier mode

After a carrier mode text connection is established, loss of carrier can be taken as the indication that the audio stream shall be connected with audio interface of the line. When the remote end is a V.21, Bell or V.18 device, the text communication can be full duplex, so the gateway can just let the text streams flow between the terminations.

When carrier reappears, or text is received through the text system, the audio stream shall be muted, and text transmission noted.

Minitel does not support any voice interworking mode.

F.7.5.7 Simultaneous voice and text mode

In case the simultaneous voice and text method is enabled, the handling of the voice and text channels is trivial. Once connected, the text stream can stay connected with the remote text stream all the time to serve a two-way simultaneous text conversation, and the audio channel can be connected with the remote audio stream to support a two-way simultaneous audio channel. This mode can be supported by V.18 with V.61 modulation.

F.8 Call Type Discrimination package

PackageID: ctyp (0x0011)

Version: 1

Extends: none

Description:

This package monitors the termination for signals indicating presence of a T.30 telefax terminal [2], a V.18 or legacy mode text telephone [6] or data modem. In cooperation with the MGC and the remote MG or endpoint, it can perform exchange of signals until the call type is determined and an appropriate mode for the call can be established.

The package contain modem negotiation functions of ITU-T V.25 [7], V.8 [4], V.8bis [5], V.18 [6] and T.30 [2].

F.8.1 Properties

F.8.1.1 Call Types

PropertyID: calltyp (0x0001)

Type: sub-list

Possible values:

FAX (0x0001) TEXT (0x0002) DATA (0x0003)

Defined in: Termination State

Characteristics: Read/Write

Description:

The Call Types property selects the types of calls for which the termination is monitored. Note that the connection is by default regarded to be capable of handling audio and therefore no specific value is included for that.

F.8.1.2 Text Call Types

PropertyID: ttyp (0x0002)
Type: Sub-list

Possible values:

V21 (0x0001)**DTMF** (0x0002)Baudot45 (0x0003)Baudot50 (0x0004)Bell (0x0005)**EDT** (0x0006)(0x0007)Minitel V18 (0x0008)

Description:

This parameter indicates for what text telephone modes the termination is monitored, used in TEXT mode.

F.8.1.3 V8bissupport

PropertyID: v8bsup(0x0003)

Type: Boolean

Possible values: True V.8bis is supported by the package

False V.8bis is not supported by the package

Defined in: Termination State

Characteristics: Read

Description:

Support of the V.8bis [5] modem negotiating procedure is optional. The V8bissupport property indicates if V.8bis is supported. It can be used in TEXT, FAX and DATA modes.

F.8.1.4 Probe message

PropertyID: probemsg (0x0004)

Type: String

Possible Value: Any string, not more than 20 characters long

Defined in: Termination State

Characteristics: Read/Write

Description:

This property holds a short string that the termination transmits as a stimulating probe message for the carrierless communication modes in the answering modes. The far end user will see this message when it is transmitted in the mode matching the counterpart's textphone, and type a response back, enabling the V.18 modem to detect the type of carrierless text telephone in the connection.

When issued, it is automatically followed by "GA" in Baudot probing, and with "+" in EDT and DTMF probing to reflect the turntaking signal habit in the different user communities. The string could be customized to briefly inform the called user about what service that is reached.

Note that the string is not issued in the carrier modes.

F.8.1.5 Probe order

PropertyID: probeorder (0x0005)

Type: Sub-List

Possible values: (for recommended orders, see V.18)

Any combination of none to six of the type indicators

V21 (0x0001)
DTMF (0x0002)
Baudot (0x0003)
EDT (0x0004)
MINITEL (0x0005)
BELL (0x0006)
in any desired order

Defined in: Termination state

Characteristics: Read/Write

Description:

This property holds an indication on what modes to probe for, and the order the probes will be transmitted. Probing is a time-consuming procedure and it is important that the most likely modes are probed first. The order to select depends on if any legacy mode textphones are on the market in the area where the gateway is installed. An optimized order can be composed by enumerating the desired specific type indicators. Note that leaving out a type from probing may cause connection problems for connection with textphones of that type.

F.8.1.6 PhasereversalDetect

PropertyID: v8bsup (0x0006)

Type: Boolean

Possible values: True Phase reversal detection is supported by the termination

False Phase reversal detection is not supported by the termination

Defined in: Termination State

Characteristics: Read

Description:

This property indicates support of detection of the phase reversals within ANS or ANSam signals. If this property has the value "False", ANS with phase reversals (ANSBAR) will be reported as ANS and ANSam with phase reversals (ANSAMBAR) will be reported as ANSam in the dtone event.

F.8.2 Events

F.8.2.1 Discriminating tone detected

EventID: dtone (0x0001)

Description:

This event indicates that a signal valid for detection and discrimination of mode was detected. The signal name is given as a parameter. Further logic is needed in some cases to discriminate the call type from this information. The V.8bis related parameters are returned only when V.8bis is supported [5].

Note that some textphones operate with DTMF tones. This package decodes initial DTMF signals according to the specification for text telephones in V.18 [6]. DTMF detection may be indicated also from the "dd" package if that is active.

EventsDescriptor parameters:

none

ObservedEventDescriptor parameters:

DiscriminatingToneType

ParameterID: dtt (0x0001)

Type: Enumeration

CI

Possible values:

	For FAX				
	CNG	(0x0001)	a T.30 fax calling tone		
	V21flag	(0x0002)	V21 tone and flags for fax answering		
	For TEXT				
	XCI	(0x0003)	a V.18 XCI		
	V18txp1	(0x0004)	a V.18 txp signal in channel V.21(1)		
	V18txp2	(0x0005)	a V.18 txp signal in channel V.21(2)		
	BellHi	(0x0006)	a Bell 103 carrier on the high channel		
	BellLo	(0x0007)	a Bell 103 low channel		
	Baudot45	(0x0008)	a Baudot45 initial carrier and characters		
	Baudot50	(0x0009)	a Baudot50 initial carrier and characters		
	Edt	(0x000A)	an EDT initial tone and characters		
	DTMF	(0x000B)	DTMF signals		
	For DATA				
	Sig	(0x000B <u>C</u>)	Modulation signal from a mode only used for data, i.e. not V.21, V.23 nor Bell 103		
Common to TEXT and DATA:					
	CT	(0x000€ <u>D</u>)	a V.25 calling tone		
	V21hi	(0x000 <u>PE</u>)	a V.21 carrier on the higher frequency channel		
	V21lo	(0x000 <u>EF</u>)	a V.21 carrier on the low frequency channel		
	V23hi	(0x00 <u>10</u> 0F)	a V.23 high carrier		
	V23lo	(0x001 <u>1</u> 0)	a V.23 low carrier		

(0x00121)

a V.8 CI with contents in

"dtvalue"

Common to FAX, TEXT and DATA:

ANS	(0x001 <u>3</u> 2)	V.25 ANS, equivalent to T.30 CED from answering terminal
ANSbar	(0x00143)	V.25 ANS with phase reversals
ANSAM	(0x001 <u>5</u> 4)	V.8 ANSam
ANSAMbar	(0x001 <u>6</u> 5)	V.8 ANSam with phase reversals
CM	(0x001 <u>7</u> 6)	V.8 CM with contents in "dtvalue"
CJ	(0x001 <u>8</u> 7)	V.8 CJ
JM	(0x001 <u>9</u> 8)	V.8 JM with contents in "dtvalue"
ENDOFSIG	(0x001 <u>A</u> 9)	End of reported signal detected reported for continuous or repeated signals
V8BIS	(0x00 <u>1B</u> 2 0)	V.8bis signal, with signal type in parameter V8bistype and value in "dtvalue"

DiscriminatingToneValue

ParameterID: dtvalue (0x0002)

Type: string

Possible values:

When used for V.8 and V.8bis related messages, the following coding rules applies: If a V.8bis message is detected without a preceding V.8bis signal, the preamble is reported as a 0 <signal> value.

The contents of valid V.8bis message(s), if detected, are reported using hexadecimal octet coded string(s) (F.3.1.1). Flag detection and consumption, flag transparency 0-bit deletion and FCS checking are performed by the MG. The MG shall not report invalid messages (e.g. bad FCS). If two consecutive messages are detected but the first is invalid, the MG shall indicate this with a comma in front of the second message (e.g. <2nd message>). Two concatenated V.8bis messages are reported with two consecutive <message> indications.

V8bistype

ParameterID: v8bist (0x0004) Type: enumeration

Possible values:

ESi	(0x0001)	V.8bis signal ESi
ESr	(0x0002)	V.8bis signal ESr
MRe	(0x0003)	V.8bis signal MRe
MRdi	(0x0004)	V.8bis signal MRd from initiator
MRdr	(0x0005)	V.8bis signal MRd from responder
CRe	(0x0006)	V.8bis signal CRe
CRdi	(0x0007)	V.8bis signal CRd from initiator
CRdr	(0x0008)	V.8bis signal CRd from responder
MS	(0x0009)	V.8bis message MS with contents in "dtvalue"

- 30 -COM 16-126-E

CL	(0x000A)	V.8bis message CL with contents in "dtvalue"
CLR	(0x000B)	V.8bis message CLR with contents in "dtvalue"
ACK	(0x000C)	V.8bis message ACK with contents in "dtvalue"
NAK	$(0x000\underline{D}\underline{E})$	V.8bis message NAK with contents in "dtvalue"

Description: A detected V.8bis [5] signal. V.8bis can be used for all modes.

F.8.3 Signals

F.8.3.1 V8Signal

SignalID: v8sig (0x0001)

SignalType: OO

Parameters:

V.8 Signal Type

Parameter ID: v8styp (0x0001) Type: Enumeration

Possible values:

CM (0x0001) CJ (0x0002) JM (0x0003) CI (0x0004)

v8nosig (0x0005) no signal - used to stop the V.8 signal

Default may be provisioned

V8SigCont

Parameter ID: v8scont (0x0002)

Type: string

Possible values:

Allowed contents of the signals, coded as hexadecimal octet coded string

Default is empty

Description: The V.8 [4] signals carry data for call type and modulation modes. These parameters can be supplied through the v8cont parameter. V.8 can be used for FAX, TEXT and DATA modes.

V18XCIEnable

Parameter ID: v18xcien (x0003)

Type: Boolean

Possible values:

True XCI transmission enabled during V.18 CI transmission

False XCI transmission disabled

Default is True

Description: XCI can be sent intermixed with CI transmission as specified in V.18 to stimulate plainMinitel terminals to respond as text telephones. Used in TEXT mode.

F.8.3.2 AnswerSignal

SignalID: ans (0x0002)

Signal Type: OO

Parameters:

AnsType

ParameterID: AnsType (0x0001)

Type: Enumeration

Possible values:

ANS (0x0001) V.25 ANS (equivalent to T.30 CED)

for all modes

ANSBAR (0x0002) V.25 ANS with phase reversals for all

modes

ANSAM (0x0003) V.8 ANSam for all modes

ANSAMBAR (0x0004) V.8 ANSam with phase reversals for all

modes

V18txp1 (0x0005) a V.18 txp signal played in V.21 channel

(1) for TEXT

V18txp2 (0x0006) a V.18 txp signal played in V.21 channel

(2) for TEXT

ansnosig (0x0007) no signal - used to turn off the signal

Default may be provisioned

F.8.3.3 CallingSignal

SignalID: callsig (0x0003)

SignalType: OO

Parameters:

callSigname

Parameter ID: cSn (0x0001)

Type: Enumeration

Possible values:

CT (0x0001) V.25 Calling Tone used for TEXT and

DATA

CNG (0x0002) T.30 Calling tone used for FAX with

defined cadence

callnosig (0x0003) no signal - used to turn off the signal

Default may be provisioned

F.8.3.4 V8bisSignal

SignalID: v8bs (0x0004)

Signaltype: BR

Parameters: V8bisSigname

ParameterID: V8bsn (0x0001)

Type: Enumeration

Possible values:	
ESi (0x0001)	V.8bis signal ESi
ESr $(0x0002)$	V.8bis signal ESr
MRe $(0x0003)$	V.8bis signal MRe
MRdi (0x0004)	V.8bis signal MRd from initiator
MRdrh (0x0005)	V.8bis signal MRd from responder on high power
MRdrl (0x0006 <u>5</u>)	V.8bis signal MRd from responder on low power
——————————————————————————————————————	V.8bis signal CRe on high power
CRel (0x0006)	V.8bis signal CRe on low power
CRdi (0x0007)	V.8bis signal CRd from initiator
CRdr (0x0008)	V.8bis signal CRd from responder
MS (0x0009)	V.8bis message MS with contents in signalvalue
$CL \qquad (0x000A)$	V.8bis message CL with contents in signalvalue
CLR (0x000B)	V.8bis message CLR with contents in signalvalue
ACK (0x000C)	V.8bis message ACK with contents in signalvalue
NAK (0x000D)	V.8bis message NAK with contents in signalvalue
MRdrh(0x000E)	V.8bis signal MRd from responder on high power
CReh (0x000F)	V.8bis signal CRe on high power

Default may be provisioned

Description: V.8bis [5] signals can be used in all modes. Some V.8bis signals contain data messages, supplied in V8bisSigContents.

V8bisSigContents

ParameterID: V8bscont (0x0002)

Type: string

Possible values: Valid contents for the V.8bis signals

Default is empty

Description: Some of the V.8bis signals are messages. Their contents can be defined with the V8biscont parameter.

V.8bis can be used in TEXT, FAX and DATA modes.

The transmitted V.8bis message frame(s) is specified as hexadecimal octet coded string (F.3.1). Additional messages are delimited by comma characters. Flag generation, flag transparency 0-bit insertion and FCS generation are performed by the MG. If no data is provided by the MGC, no V.21 carrier is generated beyond that used in segment 2. For two concatenated messages, the MG shall insert the required preamble between the first and second messages.

F.8.3.5 V18probe

SignalID: v18prob (0x0005)

SignalType: OO Parameters: none

Description:

This signal transmits the v18 probes in order to stimulate possible text telephones to transmit connect establishing signals. The probes are sent according to the specification in Recommendation V.18. For carrierless probes, the string in the "probemsg" property is transmitted. The probes are sent in the order specified in the property "probeorder".

F.8.4 Statistics

None.

F.8.5 Procedures

The Call Type Discrimination package is invoked for cases when the network connection is established and the call may enter one of the types of voice, fax, text telephone and modem. The package contains functionality to support the decision and connection processes. Once discriminated and the modem handshaking completed, an appropriate specific call type package should be invoked to complete the connection establishment on the modulation level and perform the session.

When used for active modem negotiation, by means of commands from the MGC, the termination shall be made to operate according to the Recommendations for modem negotiation; V.25 [7], V.8 [4], V.8bis [5], V.18 [6] and T.30 [2]. For probing according to V.18 during the negotiating process, the probing mechanism may be applied as defined in this package by turning the signal v18prob ON.

The package may also be used for monitoring and reporting on data activity on the termination.

F.8.5.1 Informative description

If the desired call type is known from the beginning, the call type discrimination package should be invoked in order to actively try to establish a connection by sending out stimulating signals. By contrast this package is also used to monitor the line to detect signals which are to be relayed to the Media Gateway Controller as input to a discrimination decision. In principle, when tones are reported to the MGC as events by an MG, the MG should avoid passing these tones via the media stream where possible, to reduce the possibility of unwanted duplicate tones. Since the Call Type Discrimination package can be invoked to initially only monitor the line, it can be invoked on lines where voice calls are the most common mode of operation. There may be situations where this passive way of working results in less efficient or less reliable connection in fax/text/data mode.

F.8.5.2 Operation

The package is activated on a termination of a line in an outgoing or incoming call where fax, text or data mode may be wanted. The properties are set to the enabled call types.

F.8.5.3 Operation for incoming calls

The call is answered, the destination is evaluated and the remote call initiated using packages and gateway functions outside the scope of this package.

The MGC may order stimulating signals defined in this package to be sent on the line.

The line is monitored for signals for the selected modes as defined in the "dtone" event descriptor.

The MGC is expected to evaluate call type indications of all types; registered type of the destination, offered capabilities of the endpoint, invoked connection efforts of specific types from the endpoint and discriminating events from a call type discriminating package active in setting up the connection with the other endpoint.

As soon as the modem handshaking is complete and a condition is reached that is valid for only one call type, a package for handling that call type should be invoked by the MGC, thus placing the MG into the desired mode of operation.

The package contains components for conducting a negotiation procedure according to the different connection procedures defined in Recommendations V.25 [7], V.8 [4], V.8bis [5], T.30 [2], T.38 [3] and V.18 [6]. (V.8bis support is optional and its availability can be interrogated through the property V8bissupport.)

F.8.5.4 Operation for transit calls, coming from and going to the switched network

If no fax/text/data indication is present in the incoming call, the outgoing call is placed in voice mode, with the Call Type Discrimination package active.

If a valid tone is detected, it is reported to the MGC as an event. By actions of the MGC it can be signalled to be replayed at the other end.

The process continues according to the rules of the connection procedures until the call type can be determined and the mode of operation can be established.

F.8.5.5 Operation for calls having one endpoint in the packet network

If no fax/text/data indication is present in the incoming call, the outgoing call in the packet network is placed in voice mode.

If a request to open a text channel, a fax channel or a data channel is made from the packet endpoint, the corresponding call type is tried on the switched network connection.

If a signal indicating presence of a fax, textphone or a modem is received from the circuit switched network, and the call type can be evaluated, a corresponding channel is requested to the remote packet endpoint. If that request is acknowledged, the connection in the fax/text/data mode is completed on the switched side.

If the call type cannot be evaluated, further signal exchange is performed on the switched interface until the call type is determined, and then the channel establishment continues on the packet side.

F.8.5.6 Cases when the call type cannot be determined from the signals

For cases when the call type cannot be determined by the signal exchange, a decision must be taken by other means, or a transparent transport can be selected.

The other means to make the decision may be a number analysis and comparison to registered user preferences or network defaults.

Cases when the decision is not possible by signal analysis but need to be taken by external means:

- V.21: Used both for text telephony and for credit card transactions. The decision is recommended to be based on regional preferences and registering preference for data per destination number in regions where the default preference is for text telephony.
- V.23: Used both for Minitel-based text telephones and for the Minitel information retrieval system. The conflict is only when an answering endpoint transmits the v23hi signal. A transparent data transport is recommended for this case.

F.8.5.7 Scenarios and call flows

Signal sequence scenarios can be derived from the different connection protocols, with T.38 being the main protocol for fax, V.18 for text telephony and V.8/V.25 for data.

The typical fax scenario is discriminated when CNG is detected from the calling end and a corresponding CED (ANS) and/or V.21flags are detected at the answering end. For instances when

either a CNG or ANS is not reported to the MGC, V21flags detection is sufficient for fax discrimination. Alternatively, a V.8 CM or JM signal with a fax call type may be detected at either end.

The text telephone scenario is discriminated when a text telephone call type is detected in V.8, a text telephone function is negotiated in V.8bis, or a signal valid for text only is detected.

The data scenario is discriminated when a data call type is detected in V.8, a data function is negotiated in V.8bis, or a data mode (not text) is entered by any part.

In all cases the handshaking protocol should be completed using the Call Type Discrimination package, before entering the selected data mode.

F.8.5.8 Initial characters

For carrierless text telephones of the Baudot, EDT and DTMF types the text transmission itself is needed for mode determination, and therefore the characters received during determination shall be stored. They shall be made available by local actions in the MGto be used by the txp package as initially received text for a seamless takeover of a connection.

F.8.5.9 Time critical handling

The default way of handling connection requests should be to propagate the connection request to the remote endpoint, and verify capabilities before positively responding to an incoming connection request for fax, text or data mode. It can however be very time-consuming to verify the endpoint capabilities, and connect appropriate channels. The caller may timeout between detection of off-hook, and receiving a positive signal. Similar time critical steps exist in the V.8, V.8bis, V.18, T.30 and V.25 procedures. The MGC must take action to compromise between the risk of one party timing out because of long waiting for a signal, and the risk of connecting a fax/text/data call before the capabilities of the endpoints are verified and the appropriate channels connected. One possible way to handle this risk is to define default actions to take before any party in the call times out. The ctyp package gives the MGC all necessary control to handle the connection process including such actions.

F.9 Fax package

Package Name: Fax

PackageID: fax (0x0012)

Version: 1

Extends: None

Description:

The fax package is intended for enabling fax communication between terminals/applications in different networks or messaging environments. This package includes the mechanisms needed to identify T.30 [2] fax sessions (signals and data).

F.9.1 Properties

F.9.1.1 Fax connection state

PropertyID: faxstate (0x0001)

Type: Enumeration

Possible values:

Idle	(0x0001)	no connection efforts
Prepare	(0x0002)	known in the termination and ready to accept
		connections
Negotiating	(0x0003)	taking the initiative to establish a fax connection
TrainR	(0x0004)	Fax Phase B or later training as Receiver
TrainT	(0x0005)	Fax Phase B or later training as Transmitting
Connected	(0x0006)	completed connection
EOP	(0x0007)	Procedures Complete
ProcInterrupt	(0x0008)	Procedure Interrupt Processing
Disconnect	(0x0009)	Premature Disconnect

Characteristics: Read/Write

Defined in: Termination State

Description:

After successful phase A connection with the ctyp package, the connection state property is used to request a fax connection. When placing a termination into a fax mode, the initial state shall be set to "Negotiating".

When this property is interrogated, it shall reflect the state of the achieved fax connection.

A connection effort can be cancelled by setting the faxstate property to Idle.

F.9.1.2 Fax Transport

PropertyID: ftrpt (0x0001)

Type: Enumeration

Possible values:

T30 (0x0001) for T.30 PSTN sessions without ECM T30ECM (0x0002) for T.30 PSTN sessions with ECM (non-V.34)

T.30V34 (0x0003) for T.30 PSTN sessions with V.34 (half-duplex)

Characteristics: Read/Write

Defined in: Termination State

Description:

The Transport parameter reflects the transport mechanism selected for the fax termination.

F.9.1.3 TransmissionSpeed

PropertyID: trspd(0x0002)

Type: Integer

Possible values: 1200-33600

Defined in: Termination State

Characteristics: Read/Write

Description:

The Transport parameter reflects the transmission speed seen at the analogue interface for the fax relay or the transmission speed used by the FAX termination (T.30 PSTN).

F.9.1.4 PSTN Interface

PropertyID: pstnif (0x0003)

Type: Enumeration

Possible values:

NA (0x0001) not applicable V17 (0x0002) V27TER (0x0003) V29 (0x0004) V21 (0x0005) V34 (0x0006)

Defined in: Termination State

Characteristics: Read/Write

Description:

The PSTN Interface parameter reflects the interface used to connect to a physical FAX machine.

F.9.2 Events

F.9.2.1 Fax Connection State Change

Event ID: faxconnchange (0x0001)

EventDescriptor Parameters:

none

Observed Event Descriptor Parameters

Fax Connection Change

ParameterID: faxconnchng (0x0001)

Type: Enumeration

Possible Value:

(0x0001)	no connection efforts
(0x0002)	known in the termination and ready
	to accept connections
(0x0003)	taking the initiative to establish a fax
	connection
(0x0004)	Fax Phase B or later training as
	Receiver
(0x0005)	Fax Phase B or later training as
	Transmitting
(0x0006)	completed connection
(0x0007)	Procedures Complete
(0x0008)	Procedure Interrupt Processing
(0x0009)	end of fax session, call
	terminating
(0x000A)	Priority Interrupt; Switch to
	Voice
(0x000B)	Premature Disconnect
	(0x0002) (0x0003) (0x0004) (0x0005) (0x0006) (0x0007) (0x0008) (0x0009) (0x000A)

Description:

This event will occur when the fax connection state for the termination has changed. Its parameter is the new Fax Connection State. A connection effort that timed out returns the termination to the Idle state.

F.9.3 Signals

None.

F.9.4 Statistics

F.9.4.1 Pages Transferred

StatisticsID: pagestrans (0x0001)

Type: integer

Description:

No. of pages of fax image data transferred through the termination.

F.9.4.2 Train Downs

StatisticsID: traindowns (0x0002)

Units: count

Description:

Number of times FAX trained down during transmission.

F.9.5 Procedures

The following are standard transport mechanisms for fax in different environments.

– In T.30: Use T.30 [2] procedures with and without ECM.

– In T.30 Annex C/F: Use T.30 procedures selected via V.8 (Used for V.34 fax).

F.9.5.1 Function

A termination with Fax provides a method for transfer of fax pages preceded by negotiations in the call setup according to procedures defined for each environment. When matching capabilities exist, the appropriate sessions can be established in order to transfer pages of image or binary data.

Real time fax allows telecom users to transfer fax pages in real time. The procedural aspects of GSTN fax are defined in ITU-T T.30 [2]. The compression methods used in transporting fax images are defined in T.4, T.6, T.81, T.82, T.85 and T.44. In traditional T.30 without error correction, images are transferred in a stream one page at a time. In T.30 with error correction, images are transferred in blocks that are also known as partial pages. Numerous examples of fax sessions are contained in Appendix IV to T.30.

1) For each transport environment, a suitable transport protocol must be selected to carry the image. Currently defined and recommended transport environments for T.30 media streams that can be supported by this package are GSTN networks, where the procedures are defined in T.30, T.30 Annex A (for error correction), T.30 Annex C (duplex protocol) and Annex F (half duplex V.34 protocol).

F.9.5.2 Process of Adding Fax Capable Terminations

The MGs are responsible for detecting fax tones and relaying the related events to the MGC. The MGC should conduct Call Discrimination as defined within the Call Type Discrimination Package

in order to determine whether a fax or other mode is applicable. The MGC may choose to skip this if the MG is not capable of the Call Type Discrimination Package. Once the MGC evaluates the tones and determines that the incoming call is fax, the MGC shall execute appropriate Modify commands to place the termination into a "Negotiating" state.

F.9.5.3 Process of Ending a Fax Call

The MGs are responsible for detecting events that would cause the interruption of a fax call. The MGC is responsible for making the determination if this switch can be made and instruct the MGs to switch. It is also responsible for switching it back to fax.

The MGC should receive indication that the fax call ends from the MG before receiving typical call termination indications.

F.10 IP Fax package

Package Name: IPFax

PackageID: ipfax (0x0013)

Version: 1
Extends: None

Description:

The fax package is intended for enabling real time or store and forward fax communication between terminals/applications in different networks or messaging environments. This package includes the mechanisms needed to transport T.30 fax sessions (signals and data) in a real time IP environment. The transport mechanism will be different for each environment where the package is used.

F.10.1 Properties

F.10.1.1 Fax connection state

PropertyID: faxstate (0x0001)

Type: Enumeration

Possible values:

Idle (0x0001)no connection efforts Prepare (0x0002)known in the termination and ready to accept connections Negotiating (0x0003)taking the initiative to establish a fax connection TrainR Fax Phase B or later training as Receiver (0x0004)**TrainT** Fax Phase B or later training as Transmitter (0x0005)Connected (0x0006)for completed connection **Procedures Complete EOP** (0x0007)**Procedure Interrupt Processing** ProcInterrupt (0x0008) Premature Disconnect Disconnect (0x0009)

Characteristics: Read/Write

Defined in: Termination State

Description:

After successful phase A connection with the ctyp package, the connection state property is used to request a fax connection. When placing a termination into a fax mode, the initial state shall be set to "Negotiating".

When this property is interrogated, it shall reflect the state of the achieved fax connection.

F.10.1.2 IPFaxTransport

PropertyID: ipftrpt (0x0001)

Type: Enumeration

Possible values:

T38UDPTL (0x0001) for T.38 [3] using UDPTL T38TCP (0x0002) for T.38 using TCP

T37 (0x0003) for T.37 [19]

AUDIO (0x0004) for audio codec (e.g. G.711 over RTP [1])

Characteristics: Read/Write

Defined in: Termination State

Description:

The IP Fax Transport parameter reflects the transport mechanism selected for the fax termination.

F.10.1.3 TransmissionSpeed

PropertyID: trspd (0x0002)

Type: Integer
Possible values: 0-33600
Characteristics: Read/Write

Defined in: Termination State

Description:

The Transport property reflects the transmission speed seen at the IP interface for the fax relay. A value of zero (0) indicates that there is no speed set.

F.10.1.4 T.38 Capabilities

PropertyID: T38Capabilities (0x0003)

Type: sub-list

Possible values:

FaxFillBitRemoval (0x0001) indication of fill bit removal for MMR transcoding availability FaxTranscodingJBIG (0x0003) for JBIG transcoding availability UDPFEC (0x0004) UDP Forward Error Correction UDPRedundancy (0x0005) UDP Redundancy Error Correction

Characteristics: Read/Write

Defined in: Termination State

Description:

These capabilities describe the T.38 [3] fax termination. They are defined in Recommendation T.38 Annex B. Their SDP equivalents are defined in Recommendation T.38 Annex D.

F.10.1.5 T38MaximumBufferSize

PropertyID: T38MaxBufferSize (0x0004)

Type: Integer

- 41 -COM 16-126-E

Possible values: 0-

Characteristics: Read/Write

Defined in: Termination State

Description:

This capability describes the T.38 fax termination. They are defined in Recommendation T.38 Annex B. Their SDP equivalents are defined in

Recommendation T.38 Annex D.

F.10.1.6 T38MaximumDatagramSize

PropertyID: T38MaxDatagramSize (0x0005)

Type: Integer Possible values: 0-

Characteristics: Read/Write

Defined in: Termination State

Description:

This capability describes the T.38 fax termination. They are defined in Recommendation T.38 Annex B. Their SDP equivalents are defined in

Recommendation T.38 Annex D.

F.10.1.7 T38Version

PropertyID: T38Version (0x0006)

Type: Integer Possible values: 0-

Characteristics: Read/Write

Defined in: Termination State

Description:

This is the T.38 version number.

F.10.2 Events

F.10.2.1 Fax Connection State Change

Event ID: faxconnchange (0x0001)

EventDescriptor Parameters:

none

ObservedEventDescriptorParameters

Fax Connection Change

ParameterID: faxconnchng (0x0001)

Type: Enumeration

Possible Value: Idle (0x0001) no connection efforts

Prepare (0x0002) known in the termination and ready

to accept connections

Negotiating (0x0003) taking the initiative to establish a

fax connection

TrainR (0x0004) Fax Phase B or later training as

Receiver

TrainT	(0x0005)	Fax Phase B or later training as
		Transmitter
Connected	(0x0006)	for completed connection
EOP	(0x0007)	Procedures Complete
ProcInterrupt	(0x0008)	Procedure Interrupt Processing
EOF	(0x0009)	- end of fax session, call
		terminating
PI	(0x000A)	- Priority Interrupt; Switch to
		Voice
Disconnect	(0x000B)	Premature Disconnect

Description:

This event will occur when the fax connection state for the termination has changed. Its parameter reflects the new state. If a connection effort times out, it is reported in this event, with the faxconnching parameter set to Idle.

F.10.3 Signals

None.

F.10.4 Statistics

F.10.4.1 Pages Transferred

StatisticsID: pagestrans (0x0001)

Type: integer

Description:

No. of pages of fax image data transferred through the termination.

F.10.4.2 Train Downs

StatisticsID: traindowns (0x0002)

Units: count

Description:

Number of times FAX trained down during transmission.

F.10.5 Procedures

The following are standard transport mechanisms for fax in different environments.

- In T.38 Annex B: UDPTL or TCP in T.38 fax only communication channel

environment.

– In H.323 Annex D [22]: UDPTL or TCP as selected with H.245 messages.

In T.38 Annex D (SIP): UDPTL or TCP as initiated with SDP.
 In T.38 Annex E: UDPTL or TCP as initiated with H.248.

– In T.37: SMTP (MIME)/TCP.

F.10.5.1 Function

A termination with Fax provides a method for transfer of fax pages preceded by negotiations in the call setup according to procedures defined for each environment. When matching capabilities exist, the appropriate sessions can be established in order to transfer pages of image or binary data.

Real time fax allows telecom users to transfer fax pages in real time. For each transport environment, a suitable transport protocol must be selected to carry the image. Currently defined and recommended transport environments for T.30 media streams that can be supported by this package are:

- 1) Packet networks, where the procedures described in T.38 Annex B [3] can be used for setting up and conducting fax sessions, using TCP or UDPTL for the transport of T.30 signals and data.
- 2) Packet networks, where the procedures described in H.323 Annex D [22] can be used for setting up and conducting fax and voice sessions, using TCP or UDPTL as negotiated via H.245.
- 3) Packet networks, where the IETF Session Initiation Protocol SIP can be used for setting up and conducting fax sessions as defined in T.38 Annex D using UDPTL or TCP for the transport of T.30 signals and data.
- 4) Packet networks, where H.248 can be used for setting up and conducting fax sessions as defined in T.38 Annex E using UDPTL or TCP for the transport of T.30 signals and data.
- 5) Packet networks, where the packets of G.711 coded data (with T.30 signals and data embedded) can be transported via RTP.

The Extended Simple Mail Transport Protocol messaging environment over packet, that can be used alone or in conjunction with any of the environments above, where T.37 [19] specify the methods for transporting image/tiff files using the same compression methods as specified for use in T.30. For information it can be noted that RFC 2301-2305 and RFCs 2530-2532 specify these transport mechanisms.

Interworking between these forms of fax can be achieved through the use of gateways with packages defined here.

F.10.5.2 Process of Adding IP Fax Capable Terminations

The MGs are responsible for detecting fax tones and relaying the related events to the MGC. The MGC should conduct Call Discrimination as defined within the Call Type Discrimination Package in order to determine whether a fax or other mode is applicable. The MGC may choose to skip this if the MG is not capable of the Call Type Discrimination Package. Once the MGC evaluates the tones and determines that the incoming call is fax, the MGC shall execute appropriate Modify commands to place the IP fax capable termination into a "Negotiating" state.

F.10.5.3 Process of Ending a Fax Call

The MGs are responsible for detecting events that would cause the interruption of a fax call. The MGC is responsible for making the determination if this switch can be made and instruct the MGs to switch. It is also responsible for switching it back to fax.

The MGC should receive indication that the fax call ends from the MG before receiving typical call termination indications.

F.10.5.4 Informative Example

One possible instruction from an MGC to an MG to modify an existing context to a T.38 media stream:

- 44 -COM 16-126-E

```
MGC to MG:
MEGACO/1.0 [123.123.123.4]:55555
Transaction = 14 {
Context = 2000 {
 Modify = RTP/1 {
  Media {
   Stream = 1 {
    Local {
v=0
c=IN IP4 124.124.124.222
m=image 1111 udptl t38
a=T38FaxRateManagement:transferredTCF
a=T38UdpEC:t38UDPFEC
    }
   }
  }
 }
 }
}
```