

**Technical Specification Group, Radio Access Network
Meeting #2, Fort Lauderdale, 2-4 March 1999**

TSGR#2(99)009

Source:

**Title: UMTS Terrestrial Radio Access Network (UTRAN);
UTRAN Functions, Examples on Signalling Procedures
(UMTS ZZ.02 version 1.0.0)**

Document for:

Agenda Item:



**UMTS Terrestrial Radio Access Network (UTRAN);
UTRAN Functions, Examples on Signalling Procedures
(UMTS ZZ.02 version 1.0.0)**

UMTS

Universal Mobile
Telecommunications System



Reference

DTR/SMG-02zz02U (00o00i04.PDF)

Keywords

Digital cellular telecommunications system,
Universal Mobile Telecommunication System
(UMTS), UTRAN

ETSI

Postal address

F-06921 Sophia Antipolis Cedex - FRANCE

Office address

650 Route des Lucioles - Sophia Antipolis
Valbonne - FRANCE
Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16
Siret N° 348 623 562 00017 - NAF 742 C
Association à but non lucratif enregistrée à la
Sous-Préfecture de Grasse (06) N° 7803/88

Internet

secretariat@etsi.fr
Individual copies of this ETSI deliverable
can be downloaded from
<http://www.etsi.org>

Copyright Notification

No part may be reproduced except as authorized by written permission.
The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 1999.
All rights reserved.

Contents

Intellectual Property Rights	6
Foreword	6
1 Scope	6
2 References	6
3 Definitions, abbreviations and notation.....	7
3.1 Definitions.....	7
3.2 Abbreviations	7
3.3 Notation for the signalling procedures	7
4 UTRAN AND UE PROTOCOL ARCHITECTURE	8
4.1 RANAP Procedures & Messages	9
4.2 RNSAP Procedures & Messages	10
4.3 NBAP Procedures & Messages.....	11
4.4 ALCAP	11
4.5 RRC Procedures & Messages	11
4.6 RLC Procedures & Messages.....	12
4.7 MAC Procedures & Messages	12
5 UTRAN Signaling Procedures	13
5.1 Procedures not related to a specific UE (global procedures)	13
5.1.1 System Information Broadcasting	13
5.1.2 Cell Broadcast	13
5.2 Procedures related to a specific UE	13
5.2.1 Paging.....	13
5.2.1.1 Paging for a UE in RRC Idle Mode	13
5.2.1.2 Paging for a UE in RRC Connected Mode	14
5.2.2 NAS Signalling Connection Establishment	15
5.2.2.1 UE Initiated Signalling Connection Establishment.....	15
5.2.2.2 CN Initiated Signalling Connection Establishment.....	16
5.2.3 RRC Connection Establishment	16
5.2.3.1 DCH Establishment	16
5.2.3.2 CCH Establishment.....	17
5.2.4 RRC Connection Release	17
5.2.4.1 DCH Release	17
5.2.4.2 CCH Release.....	17
5.2.5 RRC Connection Re-establishment	18
5.2.5.1 DCH Re-establishment	18
5.2.5.2 CCH Re-establishment.....	18
5.2.6 Radio Access Bearer Establishment	18
5.2.6.1 DCH - DCH Establishment.....	18
5.2.6.2 CCH - DCH Establishment	20
5.2.6.3 DCH - CCH Establishment	20
5.2.6.4 CCH - CCH Establishment	20
5.2.7 Radio Access Bearer Release	20
5.2.7.1 DCH - DCH Release.....	21
5.2.7.2 DCH - CCH Release	22
5.2.7.3 CCH - DCH Release	22
5.2.7.4 CCH - CCH Release	22
5.2.8 Radio Access Bearer Re-establishment	22
5.2.8.1 DCH - DCH Re-establishment.....	22
5.2.8.2 CCH - DCH Re-establishment	22
5.2.8.3 DCH - CCH Re-establishment	22
5.2.8.4 CCH - CCH Re-establishment	23
5.2.9 Radio Access Bearer Modification.....	23
5.2.9.1 DCH Modification	23

5.2.9.2	CCH Modification	23
5.2.10	Channel Type Switching.....	23
5.2.10.1	PCH to RACH/FACH.....	23
5.2.10.2	RACH/FACH to PCH.....	23
5.2.10.3	RACH/FACH to DCH.....	23
5.2.10.4	DCH to RACH/FACH.....	23
5.2.11	Soft Handover	23
5.2.11.1	Radio Link Addition (Branch Addition).....	23
5.2.11.2	Radio link Deletion (Branch Deletion).....	25
5.2.11.3	Radio link Addition & Deletion (Branch Addition & Deletion - simultaneously).....	25
5.2.12	Hard Handover.....	26
5.2.12.1	Intra-RNS Hard Handover	26
5.2.12.2	Inter-RNS Hard Handover	27
5.2.12.2.1	Inter-RNS Hard Handover via Iur.....	27
5.2.12.2.2	Inter-RNS Hard Handover with switching in the CN.....	27
5.2.12.2.2.1	Inter-RNS Hard Handover with switching in the CN (UE connected to a single CN).....	27
5.2.12.2.2.2	Inter-RNS Hard Handover with switching in the CN (UE connected to two CN nodes).....	29
5.2.13	Cell Update.....	31
5.2.13.1	Intra-RNS Cell Update.....	31
5.2.13.2	Inter-RNS Cell Update with switching in the CN.....	31
5.2.14	URA Update.....	31
5.2.14.1	Intra-RNS URA Update.....	31
5.2.14.2	Inter-RNS URA Update with switching in the CN	31
5.2.15	SRNS Relocation.....	32
5.2.15.1	SRNC Relocation (UE connected to a single CN node).....	32
5.2.15.2	SRNC Relocation (UE connected to two CN nodes).....	32
5.2.16	HO between UTRAN and GSM/BSS.....	33
5.2.16.1	UTRAN ⇒ GSM/BSS via IWF.....	33
5.2.16.2	UTRAN ⇒ GSM/BSS via MAP/E interface.....	34
5.2.16.3	GSM/BSS ⇒ UTRAN via IWF.....	36
5.2.16.4	GSM/BSS ⇒ UTRAN via MAP/E interface.....	37
5.2.17	Load Indication	38
5.2.18	Ciphering.....	38
History		39

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in SR 000 314: "*Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards*", which is available **free of charge** from the ETSI Secretariat. Latest updates are available on the ETSI Web server (<http://www.etsi.org/ipr>).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Report (TR) has been produced by the Special Mobile Group (SMG) of the European Telecommunications Standards Institute (ETSI).

This TS defines the stage-2 overall architecture for the UTRAN.

The contents of this TS are subject to continuing work within TC-SMG and may change following formal TC-SMG approval.

1 Scope

This document describes the UTRAN functions by means of signalling procedure examples (Message Sequence Charts). The signalling procedure examples show the interaction between the UE, the different UTRAN nodes and the CN to perform system functions. This gives an overall understanding of how the UTRAN works in example scenarios

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies.
- A non-specific reference to an ETS shall also be taken to refer to later versions published as an EN with the same number.

- [1] UMTS 23.01 General UMTS Architecture
- [2] UMTS 23.10 UMTS Access Stratum - Services and Functions
- [3] UMTS 23.30
- [4] ETSI SMG2 UMTS-L23 Working Assumptions on Radio Access Bearers
- [5] UMTS XX.XX UTRAN Architecture Description
- [6] UMTS ZZ.XX Description of I_u Interface
- [7] UMTS ZZ.01 Description of I_{ur} Interface
- [8] UMTS ZZ.13 Description of I_{ub} Interface

[9]	UMTS	Manifestations of Handover and Streamlining
[10]	UMTS YY.01	MS-UTRAN Radio Interface Protocol Architecture
[11]	UMTS YY.02	Layer 1: General Requirements and Services
[12]	UMTS YY.03	Description of UE States and Procedures in Connected Mode
[13]	UMTS YY.04	Description of Procedures in Idle Mode
[14]	UMTS YY.31	Description of RRC protocol
[15]	UMTS YY.22	Description of RLC protocol
[16]	UMTS YY.21	Description of MAC protocol

3 Definitions, abbreviations and notation

3.1 Definitions

Refer to [5].

3.2 Abbreviations

For the purposes of this specification the following abbreviations apply.

ALCAP	Access Link Control Application Part
AS	Access Stratum
BSSMAP	Base Station System Management Application Part
CCH	Common Channel
CN	Core Network
CRNC	Controlling RNC
DCH	Dedicated Channel
DRNS	Drift RNS
L1	Layer 1
MAC	Medium Access Control
MSC	Message Sequence Chart
NAS	Non Access Stratum
NBAP	Node B Application Protocol
PCH	Paging Channel
RAB	Radio Access Bearer
RACH	Random Access Channel
RANAP	Radio Access Network Application Part
RLC	Radio Link Control
RNC	Radio Network Controller
RNS	Radio Network Subsystem
RNSAP	Radio Network Subsystem Application Part
RRC	Radio Resource Control
SRNS	Serving RNS
UE	User Equipment
UMTS	Universal Mobile Telecommunication System
UTRAN	UMTS Terrestrial Radio Access Network

3.3 Notation for the signalling procedures

Complex signalling procedures may involve several protocols in different nodes.

In order to facilitate the understanding of these procedures, the following rules in the drawing of Message Sequence Chart (MSC) are applied:

- Messages are always exchanged between nodes, i.e. the sender and the receiver of a message are nodes and not single protocol entities;
- The protocol entity inside a node that is sending/receiving a message is represented by means of an ellipse, containing the protocol entity name;
- Each message is numbered, so that a numbered list with explanations can be added below the figure;
- Message parameters may be specified as shown in Figure 1 only when required for a clear understanding of the procedures;
- Explicit signalling is represented by means of continuous arrows.
- Inband signalling is represented by means of dotted arrows.
- A description of the relevant actions may be included as shown in Figure 1.
- The Setup and Release of Iub/Iur and Iu Data Transport Bearer with the ALCAP protocol is represented as shown in Figure 1.
- The transport channel used by the MAC protocol or the logical channel used by the RLC and RRC protocols may be indicated before the message name as shown in Figure 1.

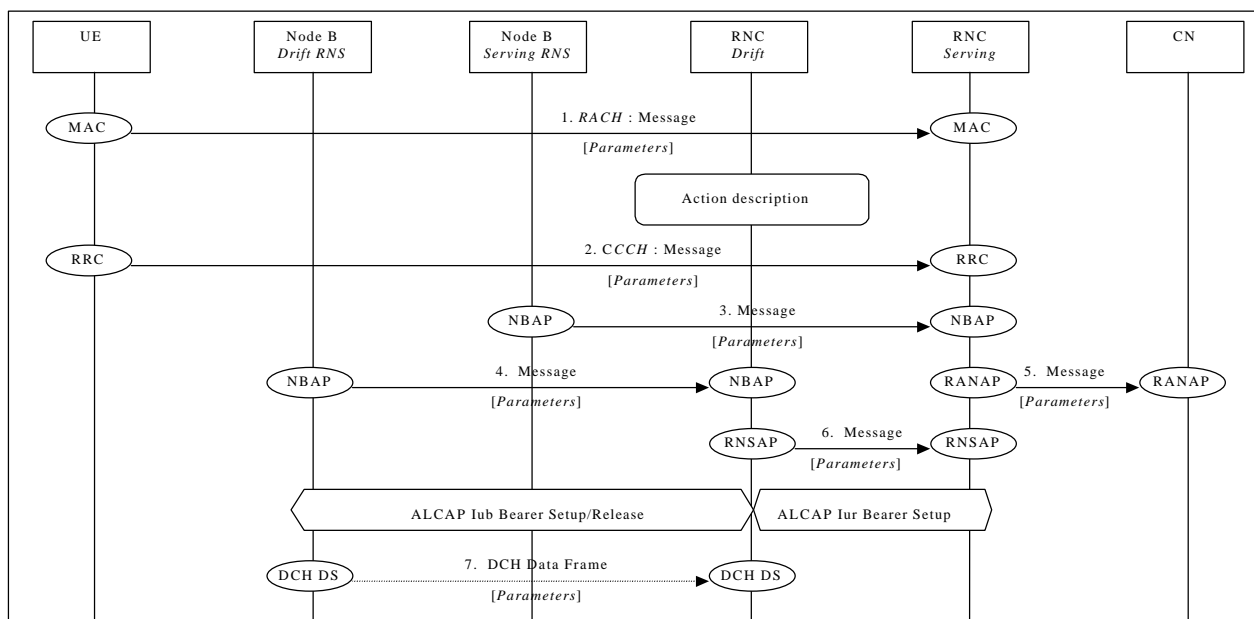


Figure 1: Example of signalling procedure notation

4 UTRAN AND UE PROTOCOL ARCHITECTURE

The complete UTRAN and UE protocol architecture for the control plane (including the transport layers) is shown in Figure 3 (idle mode) and Figure 5 (connected mode). For a detailed description of the UTRAN Protocol Architecture and of the Radio Protocol Architecture refer to [5] and [10] respectively.

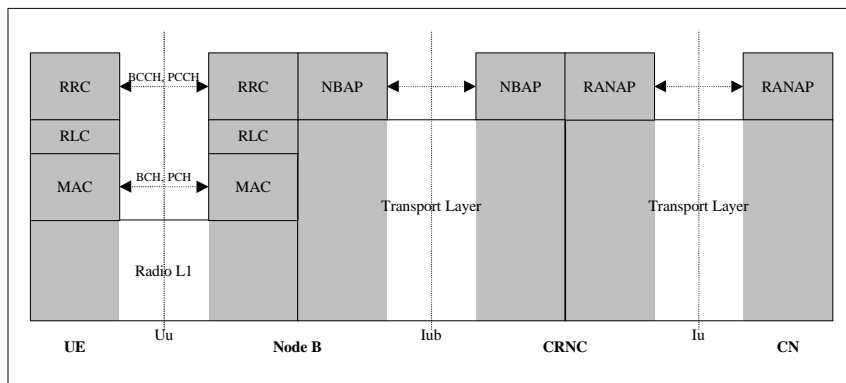


Figure 3: UTRAN and UE control plane protocol architecture (idle mode)

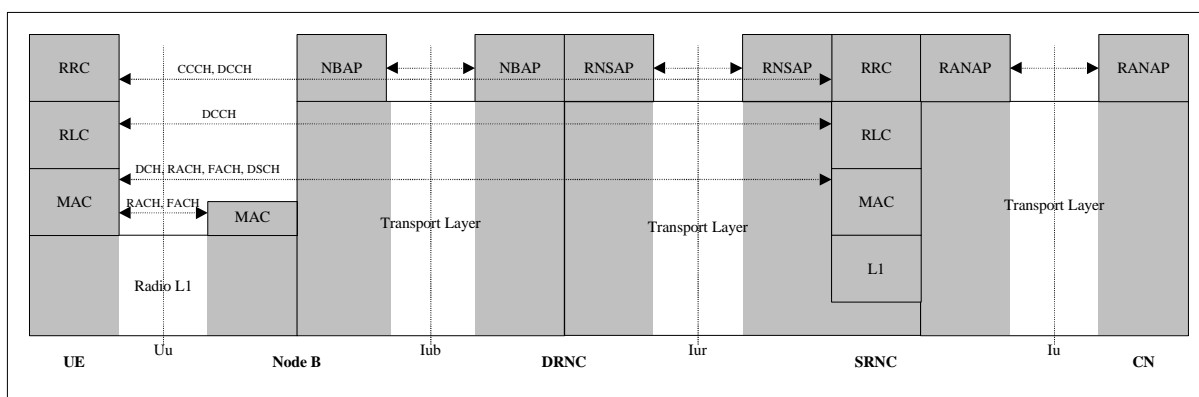


Figure 5: UTRAN and UE control plane protocol architecture (connected mode)

Editor note: this figure still to be modified in order to cope with the agreed decision that MAC-c was in the Controlling RNC for the FACH and DSCH. MAC layer is therefore still missing in the DRNC

4.1 RANAP Procedures & Messages

For a detailed description of RANAP procedures and messages refer to [6].

Message Name	UTRAN Procedure	Direction
Initial UE Message	NAS Signalling Connection Establish.	SRNC ⇒ CN
RAB Assignment Request	RAB Establishment RAB Release Inter-RNS HO with switching in the CN	CN ⇒ SRNC CN ⇒ SRNC CN ⇒ SRNC
RAB Assignment Complete	RAB Establishment RAB Release Inter-RNS HO with switching in the CN	SRNC ⇒ CN SRNC ⇒ CN SRNC ⇒ CN
Hard Handover Required	Inter-RNS HO with switching in the CN UTRAN ⇒ GSM/BSS handover	SRNC ⇒ CN SRNC ⇒ CN
Hard Handover Request	GSM/BSS ⇒ UTRAN handover	CN ⇒ SRNC
Hard Handover Command	Inter-RNS HO with switching in the CN UTRAN ⇒ GSM/BSS handover	CN ⇒ SRNC CN ⇒ SRNC
Hard Handover Proceeding 1	Inter-RNS HO with switching in the CN GSM/BSS ⇒ UTRAN handover	Target RNC ⇒ CN SRNC ⇒ CN
Hard Handover Proceeding 2	UTRAN -> GSM/BSS handover via MAP/E interface	CN ⇒ SRNC
Hard Handover Detect	Inter-RNS HO with switching in the CN	Target RNC ⇒ CN
Hard Handover Complete	Inter-RNS HO with switching in the CN GSM/BSS ⇒ UTRAN handover	Target RNC ⇒ CN SRNC ⇒ CN
Hard Handover Failure	Inter-RNS HO with switching in the CN	RNC ⇒ CN
SRNC Relocation Required	SRNC Relocation	Source RNC ⇒ CN
SRNC Relocation Request	SRNC Relocation	CN ⇒ Target RNC
SRNC Relocation Proceeding 1	SRNC Relocation	Target RNC ⇒ CN
SRNC Relocation Proceeding 2	SRNC Relocation	CN ⇒ Source RNC
SRNC Relocation Complete	SRNC Relocation	Target RNC ⇒ CN
SRNC Relocation Failure	SRNC Relocation	RNC ⇒ CN
Iu Release Command	Inter-RNS HO with switching in the CN SRNC Relocation UTRAN ⇒ GSM/BSS handover	CN ⇒ Source RNC CN ⇒ Source RNC CN ⇒ SRNC
Iu Release Complete	Inter-RNS HO with switching in the CN SRNC Relocation UTRAN ⇒ GSM/BSS handover	Source RNC ⇒ CN Source RNC ⇒ CN SRNC ⇒ CN
Paging Request	Paging	CN ⇒ SRNC

4.2 RNSAP Procedures & Messages

For a detailed description of RNSAP procedures and messages refer to [7].

Message Name	UTRAN Procedure	Direction
Radio Link Reconfiguration Request	RAB Establishment RAB Release	SRNC ⇒ DRNC SRNC ⇒ DRNC
Radio Link Reconfiguration Proceed	RAB Establishment RAB Release	DRNC ⇒ SRNC DRNC ⇒ SRNC
Radio Link Reconfiguration Command	RAB Establishment RAB Release	SRNC ⇒ DRNC SRNC ⇒ DRNC
Radio Link Addition Request	Soft Handover	SRNC ⇒ DRNC
Radio Link Addition Proceed	Soft Handover	DRNC ⇒ SRNC
Radio Link Deletion Request	Soft Handover	SRNC ⇒ DRNC
Radio Link Deletion Proceed	Soft Handover	DRNC ⇒ SRNC
SRNC Relocation Command	SRNC Relocation	Source RNC ⇒ Target RNC

4.3 NBAP Procedures & Messages

For a detailed description of NBAP procedures and messages refer to [8].

Message Name	UTRAN Procedure	Direction
Radio Link Setup Request	RRC Connection Establishment Hard Handover Soft Handover	RNC ⇒ Node B RNC ⇒ Node B RNC ⇒ Node B
Radio Link Setup Proceed	RRC Connection Establishment Hard Handover Soft Handover	Node B ⇒ RNC Node B ⇒ RNC Node B ⇒ RNC
Radio Link Addition Request	Soft Handover	SRNC ⇒ DRNC
Radio Link Addition Proceed	Soft Handover	DRNC ⇒ SRNC
Radio Link Deletion Request	Soft Handover	SRNC ⇒ DRNC
Radio Link Deletion Request	RRC Connection Release Hard Handover Soft Handover	RNC ⇒ Node B RNC ⇒ Node B RNC ⇒ Node B
Radio Link Deletion Proceed	RRC Connection Release Hard Handover Soft Handover	Node B ⇒ RNC Node B ⇒ RNC Node B ⇒ RNC
Radio Link Reconfiguration Request	RAB Establishment RAB Release	RNC ⇒ Node B RNC ⇒ Node B
Radio Link Reconfiguration Proceed	RAB Establishment RAB Release	Node B ⇒ RNC Node B ⇒ RNC
Radio Link Reconfiguration Command	RAB Establishment RAB Release	RNC ⇒ Node B RNC ⇒ Node B
Paging Request	Paging	RNC ⇒ Node B

4.4 ALCAP

ALCAP is a generic name to indicate the protocol(s) used to establish data transport bearers on the Iu, Iur and Iub interfaces.

The protocol(s) to be used by ALCAP is FFS.

The following should be noted:

- data transport bearers may be dynamically established using ALCAP or preconfigured;
- transport bearers may be established before or after allocation of radio resources.

4.5 RRC Procedures & Messages

For a detailed description of RRC procedures and messages refer to [14].

Message Name	UTRAN Procedure	Direction	Logical Channel
UE Capability Information	NAS Signalling Conn. Est.	UE ⇒ SRNC	DCCH
Transparent Message	NAS Signalling Conn. Est.	UE ↔ SRNC	DCCH
RRC Connection Request	RRC Connection Est.	UE ⇒ SRNC	CCCH
RRC Connection Setup	RRC Connection Est.	SRNC ⇒ UE	CCCH
RAB Setup	RAB Establishment	SRNC ⇒ UE	DCCH
RAB Setup Complete	RAB Establishment	UE ⇒ SRNC	DCCH
RAB Release	RAB Release	SRNC ⇒ UE	DCCH
Handover Command	Hard Handover	SRNC ⇒ UE	DCCH
Handover Complete		UE ⇒ SRNC	DCCH
Active Set Update Command	Soft Handover	SRNC ⇒ UE	DCCH
Active Set Update Complete	Soft Handover	UE ⇒ SRNC	DCCH
Paging Request	Paging for a UE in RRC Connected Mode	SRNC ⇒ UE	DCCH

4.6 RLC Procedures & Messages

For a detailed description of RLC procedures and messages refer to [15].

Message Name	UTRAN Procedure	Direction	Logical Channel
Link Establishment	RRC Connection Establishment	UE ⇒ SRNC	DCCH
Link Establishment Ack.	RRC Connection Establishment	SRNC ⇒ UE	DCCH

4.7 MAC Procedures & Messages

For a detailed description of MAC procedures and messages refer to [16].

Message Name	UTRAN Procedure	Direction	Transport Chan

5 UTRAN Signaling Procedures

The signalling procedures shown in the following sections do not represent the complete set of possibilities, nor do they mandate this kind of operation. The standard will specify a set of elementary procedures for each interface, which may be combined in different ways in an implementation. Therefore these sequences are merely examples of a typical implementation.

Furthermore the list of parameters may not be complete, but should only be seen as examples of possible information carried by the messages.

5.1 Procedures not related to a specific UE (global procedures)

This section presents a number of signaling procedures not related to a specific UE. The protocol stack involved during these procedures is the one shown in Figure 3.

5.1.1 System Information Broadcasting

This example shows an example of System Information broadcasting.

5.1.2 Cell Broadcast

This example shows an example of broadcasting of User Information.

5.2 Procedures related to a specific UE

This section presents a number of signaling procedures related to a specific UE. The protocol stack involved during these procedures is the one shown in Figure 5, with the exception of Paging for a UE in RRC Idle Mode that makes use of the protocol stack shown in Figure 3.

5.2.1 Paging

This section presents two examples of Paging procedures for both the cases of a UE in RRC Idle Mode and RRC Connected Mode.

5.2.1.1 Paging for a UE in RRC Idle Mode

This example shows how paging is performed for a UE in RRC Idle Mode. The UE may be paged for a CS or PS service. Since the UE is in RRC Idle Mode, the location is only known at CN level and therefore paging is distributed over a defined geographical area (e.g. LA).

Note: Example below illustrates scenario where LA spans across 2 RNCs.

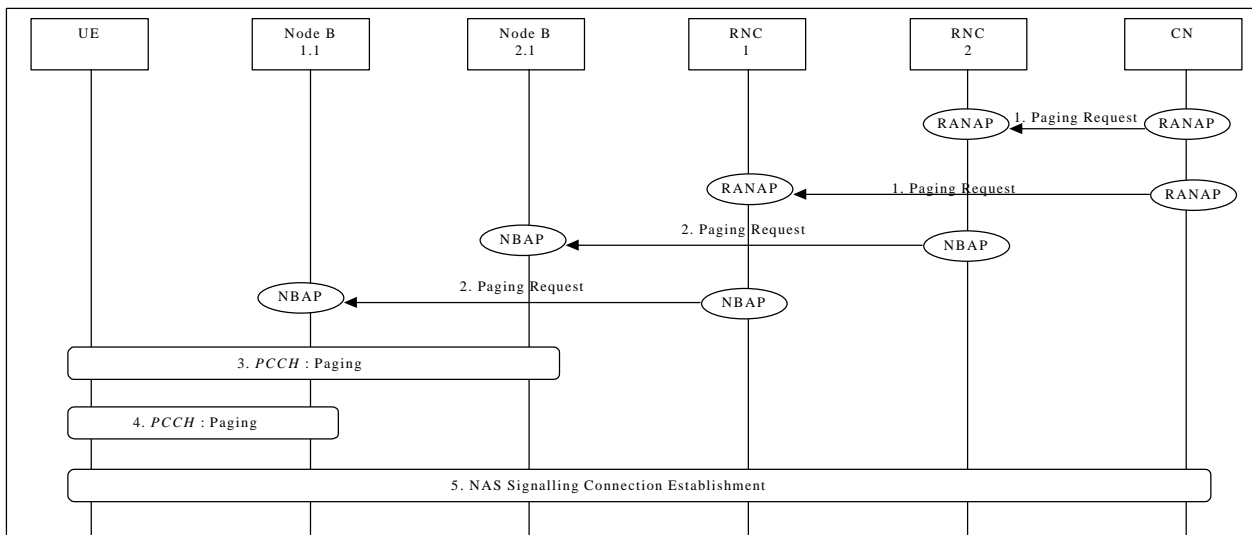


Figure 7: Paging for a UE in RRC Idle Mode

1. CN initiates the paging of a UE over a LA spanning two RNCs (i.e. RNC1 and RNC2) via RANAP message **Paging Request**.

Parameters: UE identifier, Paging Request Type.

2. RNC1 and RNC2 forward **Paging Request** message via NBAP to corresponding Nodes B (for example Node B 1.1, Node B 2.1).

Parameters: UE identifier.

3. Paging of UE performed by cell1
4. Paging of UE performed by cell2
5. UE detects page message from RNC1 and the procedure for NAS signalling connection establishment is followed (see Section 7.2.2)

NAS message transfer over established signalling connection can now be performed.

5.2.1.2 Paging for a UE in RRC Connected Mode

This can occur in case of two core network domains, with the mobility management independent of each other. Two possible solutions exists:

- The UTRAN coordinates the paging request with the existing RRC connection.
- The UE coordinates the paging request with the existing RRC connection.

The following example shows how paging is performed for a UE in RRC Connected Mode when the UTRAN coordinates the paging request with the existing RRC connection using DCCH.

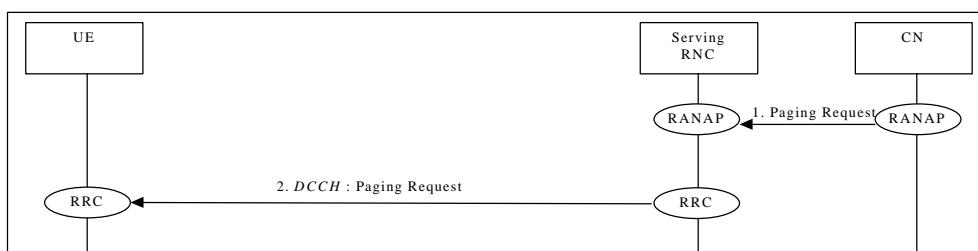


Figure 8: Paging for a UE in RRC Connected Mode when the UTRAN coordinates the paging request with the existing RRC connection using DCCH

1. CN initiates the paging of a UE via RANAP message **Paging Request**.

Parameters: UE identifier, Paging Request Type.

2. SRNC sends RRC message **Paging Request**.

Parameters: Paging Request Type.

5.2.2 NAS Signalling Connection Establishment

The following examples show establishment of a Signalling Connection either by the UE or by the CN.

5.2.2.1 UE Initiated Signalling Connection Establishment

This example shows establishment of a UE originated NAS Signalling Connection Establishment.

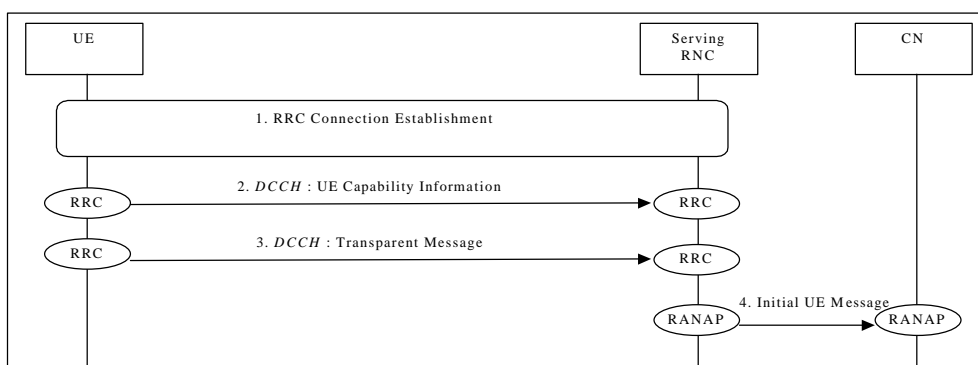


Figure 9: NAS Signalling Connection Establishment

1. RRC Connection is established (see 7.2.3.1 or 7.2.3.2).
2. UE sends RRC message **UE Capability Information** to SRNC.
Parameters: UE Radio Capability (e.g. maximum number of simultaneous radio links, maximum TX power capability, supported radio access types).

Note: To speed up the transfer of the initial NAS message the RRC message **UE Capability Information** could be transferred after the initial NAS message (step 3). This issue is FFS.

3. UE sends RRC **Transparent Message** to SRNC.
Parameters: Initial NAS Message (could for a GSM based CN be e.g. CM Service Request, Location Update Request etc.).

Note: the mechanism to transfer this message on the radio interface is FFS.

4. SRNC initiates signalling connection to CN, and sends the RANAP message **Initial UE Message**.
Parameters: Initial NAS Message (could for a GSM based CN be e.g. CM Service Request, Location Update Request etc.).

The NAS signalling connection between UE and CN can now be used for NAS message transfer.

Note:

- mechanism for selection of CN node type (in case that more than one CN node type is present) is FFS;
- the exact mechanism for the transfer of the initial NAS message on the radio interface is FFS.

5.2.2.2 CN Initiated Signalling Connection Establishment

This example shows establishment of a CN originated NAS Signalling Connection Establishment.

5.2.3 RRC Connection Establishment

The following examples show establishment of a RRC connection either on a dedicated channel (DCH) or on a common channel (CCH).

5.2.3.1 DCH Establishment

This example shows establishment of an RRC connection on a dedicated channel (DCH).

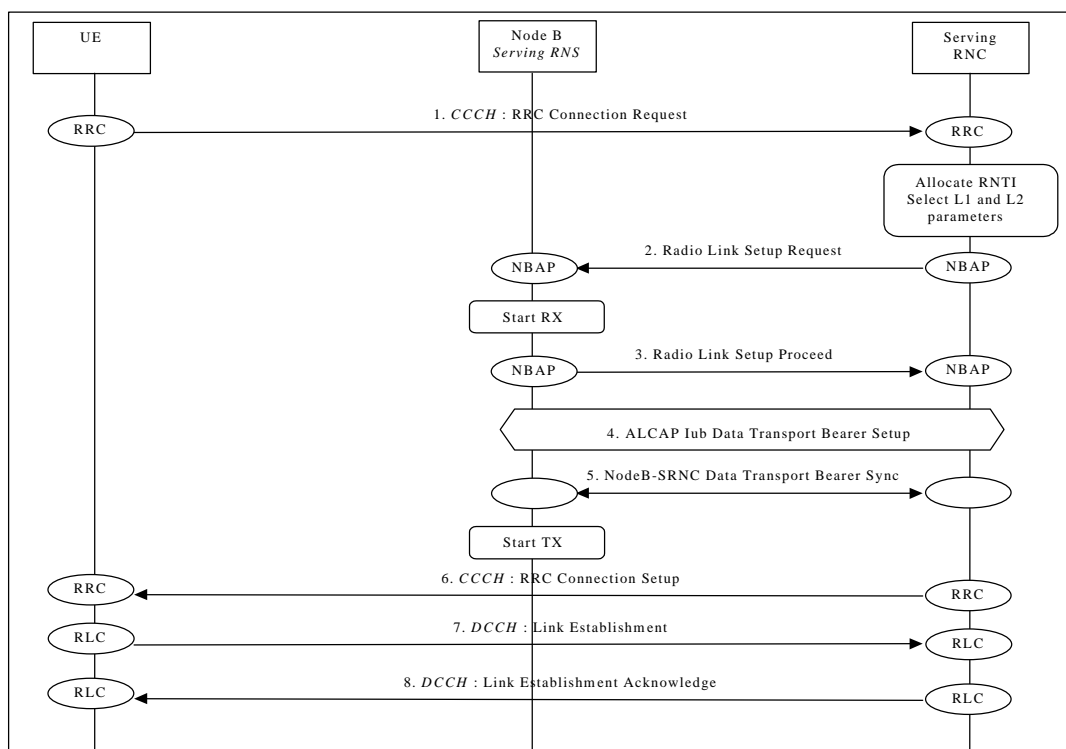


Figure 10: RRC Connection Establishment - DCH Establishment

1. The UE initiates set-up of an RRC connection by sending RRC message **Connection Request** on CCCH.
Parameters: UE identification, reason for RRC connection.
Note: Type of UE identification and Layer 1 Node B Acknowledge on RACH (CCCH) are FFS.
2. The SRNC decides to use a DCH for this RRC connection, allocates RNTI and radio resources for the RRC connection. When a DCH is to be set-up, NBAP message **Radio Link Setup Request** is sent to Node B.
Parameters: Cell id, Transport Format Set, Transport Format Combination Set, frequency, UL scrambling code, DL channelisation code, Power control information.
3. Node B allocates resources, starts PHY reception, and responds with NBAP message **Radio Link Setup Proceed**.
Parameters: Signalling link termination, , Transport layer addressing information (AAL2 address, AAL2 Binding Identity) for the Iub Data Transport Bearer.
4. SRNC initiates set-up of Iub Data Transport bearer using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iub Data Transport Bearer to the DCH. The request for set-up of Iub Data Transport bearer is acknowledged by Node B.
5. Node B and SRNC establish synchronism for the Iub Data Transport Bearer. Then Node B starts DL transmission.

6. Message **RRC Connection Setup** is sent on CCCH from SRNC to UE.
Parameters: UE identification, RNTI, Transport Format Set, Transport Format Combination Set, frequency, DL scrambling code, DL channelisation code, Power control information.
7. UE initiates establishment of RLC link on DCCH (**Link Establishment**).
8. RLC link establishment is acknowledged by SRNC (**Link Establishment Acknowledge**).

5.2.3.2 CCH Establishment

This example shows establishment of an RRC connection on a common channel (CCH). A prerequisite for this example is that the necessary Iub Data Transport bearer for the CCH is established prior to this procedure.

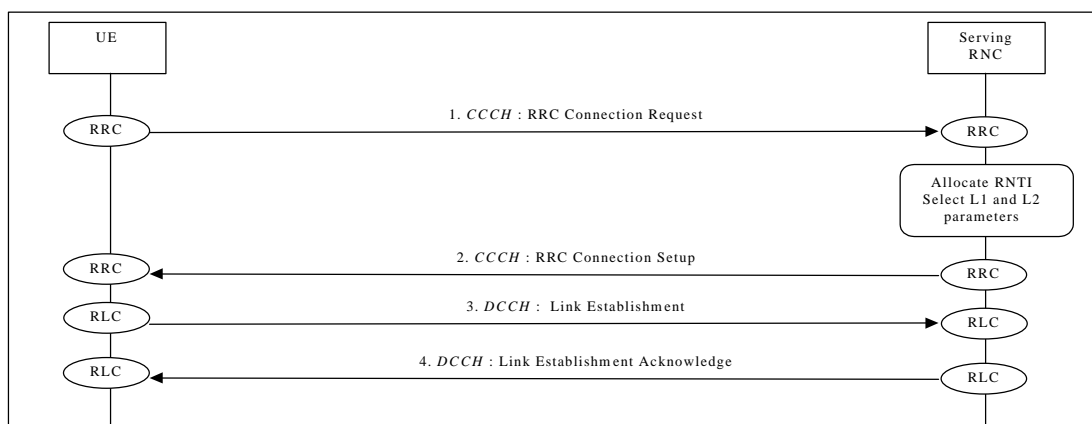


Figure 11: RRC Connection Establishment - CCH Establishment

1. The UE initiates set-up of an RRC connection by sending **RRC Connection Request** message on CCCH.
Parameters: UE identification, reason for RRC connection.
Note: Type of UE identification and Layer 1 Node B Acknowledge on RACH (CCCH) are FFS.
2. The SRNC decides to use a CCH for this RRC connection, allocates RNTI and radio resources for the RRC connection. **RRC Connection Setup** message is sent on CCCH from SRNC to UE.
Parameters: UE identification, RNTI, other parameters are FFS
3. UE initiates establishment of RLC link on DCCH (**Link Establishment**).
4. RLC link establishment is acknowledged by SRNC (**Link Establishment Acknowledge**).

5.2.4 RRC Connection Release

The following examples show RRC connection release either of a dedicated channel (DCH) or of a common channel (CCH).

5.2.4.1 DCH Release

This example shows RRC Connection release of a dedicated channel.

5.2.4.2 CCH Release

This example shows RRC Connection release of a common channel.

5.2.5 RRC Connection Re-establishment

The following examples show re-establishment of a RRC connection either on a dedicated channel (DCH) or on a common channel (CCH).

5.2.5.1 DCH Re-establishment

This example shows re-establishment of a RRC connection on a dedicated channel (DCH).

5.2.5.2 CCH Re-establishment

This example shows re-establishment of a RRC connection on a common channel (CCH).

5.2.6 Radio Access Bearer Establishment

The following examples show establishment of a radio access bearer on a dedicated channel (DCH) or on a common channel (CCH) when the RRC connection already support a radio access bearer either on a dedicated channel (DCH) or on a common channel (CCH).

5.2.6.1 DCH - DCH Establishment

This example shows establishment of a radio access bearer on a dedicated channel (DCH) when the RRC connection already uses a dedicated channel (DCH). The UE communicates via two Nodes B. One Node B is controlled by SRNC, one Node B is controlled by DRNC.

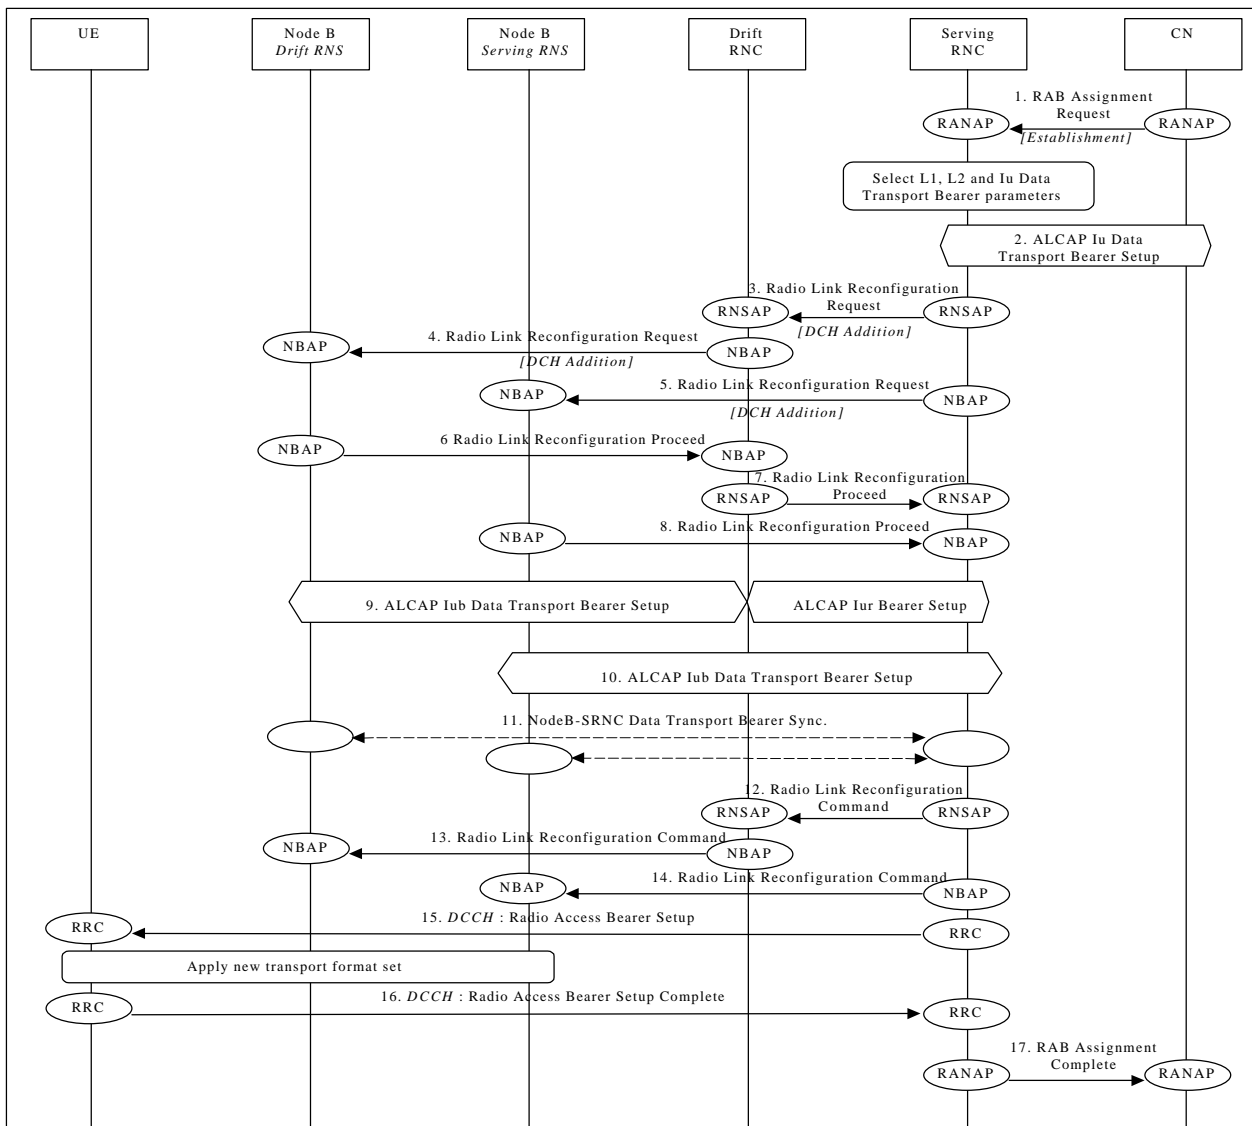


Figure 12: Radio Access Bearer Establishment - DCH - DCH Establishment

1. CN initiates establishment of the radio access bearer with RANAP message **RAB Assignment Request**.
Parameters: RAB QoS parameters, Transport layer addressing information (AAL2 address, AAL2 Binding Identity) for Iu Data Transport Bearer SRNC decides the requirements on L1, L2 and Iu Data Transport Bearer.
2. SRNC initiates set-up of Iu Data Transport bearer using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iu Data Transport Bearer to the Radio Access Bearer.
3. SRNC requests DRNC to prepare establishment of DCH to carry the RAB (**Radio Link Reconfiguration Request**).
Parameters: Transport Format Set, Transport Format Combination Set, Power control information, instructions for DCH mapping on Iub Data Transport Bearers.
4. DRNC requests its Node B to prepare establishment of DCH to carry the RAB (**Radio Link Reconfiguration Request**).
Parameters: Transport Format Set, Transport Format Combination Set, Power control information, , DL channelisation code.
5. SRNC requests its Node B to prepare establishment of DCH to carry the RAB (**Radio Link Reconfiguration Request**).
Parameters: Transport Format Set, Transport Format Combination Set, Power control information, DL channelisation code.

6. Node B allocates resources and notifies DRNC that the preparation is ready (**Radio Link Reconfiguration Proceed**).
Parameters: Transport layer addressing information (AAL2 address, AAL2 Binding Id) for Iub Data Transport Bearer.
7. DRNC notifies SRNC that the preparation is ready (**Radio Link Reconfiguration Proceed**).
Parameters: Transport layer addressing information (AAL2 address, AAL2 Binding Id) for Iub Data Transport Bearer.
8. Node B allocates resources and notifies SRNC that the preparation is ready (**Radio Link Reconfiguration Proceed**).
Parameters: Transport layer addressing information (AAL2 address, AAL2 Binding Id) for Iub Data Transport Bearer.
9. SRNC initiates setup of Iur/Iub Data Transport Bearer using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iur/Iub Data Transport Bearer to DCH.
10. SRNC initiates setup of Iub Data Transport Bearer using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iub Data Transport Bearer to DCH.
11. The Nodes B and SRNC establish synchronism for the Iub and Iur Data Transport Bearer.
12. RNSAP message **Radio Link Reconfiguration Command** is sent from SRNC to DRNC.
Parameters:
13. NBAP message **Radio Link Reconfiguration Command** is sent from DRNC to Node B.
Parameters:
14. NBAP message **Radio Link Reconfiguration Command** is sent from SRNC to Node B.
Parameters:
15. RRC message **Radio Access Bearer Setup** is sent by SRNC to UE.
Parameters: Transport Format Set, Transport Format Combination Set, DL channelisation code per cell.
16. UE sends RRC message **Radio Access Bearer Setup Complete** to SRNC.
17. SRNC sends RANAP message **RAB Assignment Complete** to CN.

5.2.6.2 CCH - DCH Establishment

This example shows establishment of a radio access bearer on a dedicated channel (DCH) when the RRC connection already uses a common channel (CCH).

5.2.6.3 DCH - CCH Establishment

This example shows establishment of a radio access bearer on a common channel (CCH) when the RRC connection already uses a dedicated channel (DCH).

5.2.6.4 CCH - CCH Establishment

This example shows establishment of a radio access bearer on a common channel (CCH) when the RRC connection already uses a common channel (CCH).

5.2.7 Radio Access Bearer Release

The following examples show release of a radio access bearer either on a dedicated channel (DCH) or on a common channel (CCH) when the RRC connection already uses a dedicated channel (DCH) or a common channel (CCH).

5.2.7.1 DCH - DCH Release

This example shows release of a radio access bearer on a dedicated channel (DCH) when the RRC connection still uses a dedicated channel (DCH) after the release. The UE communicates via two Nodes B. One Node B is controlled the SRNC, one Node B is controlled by DRNC.

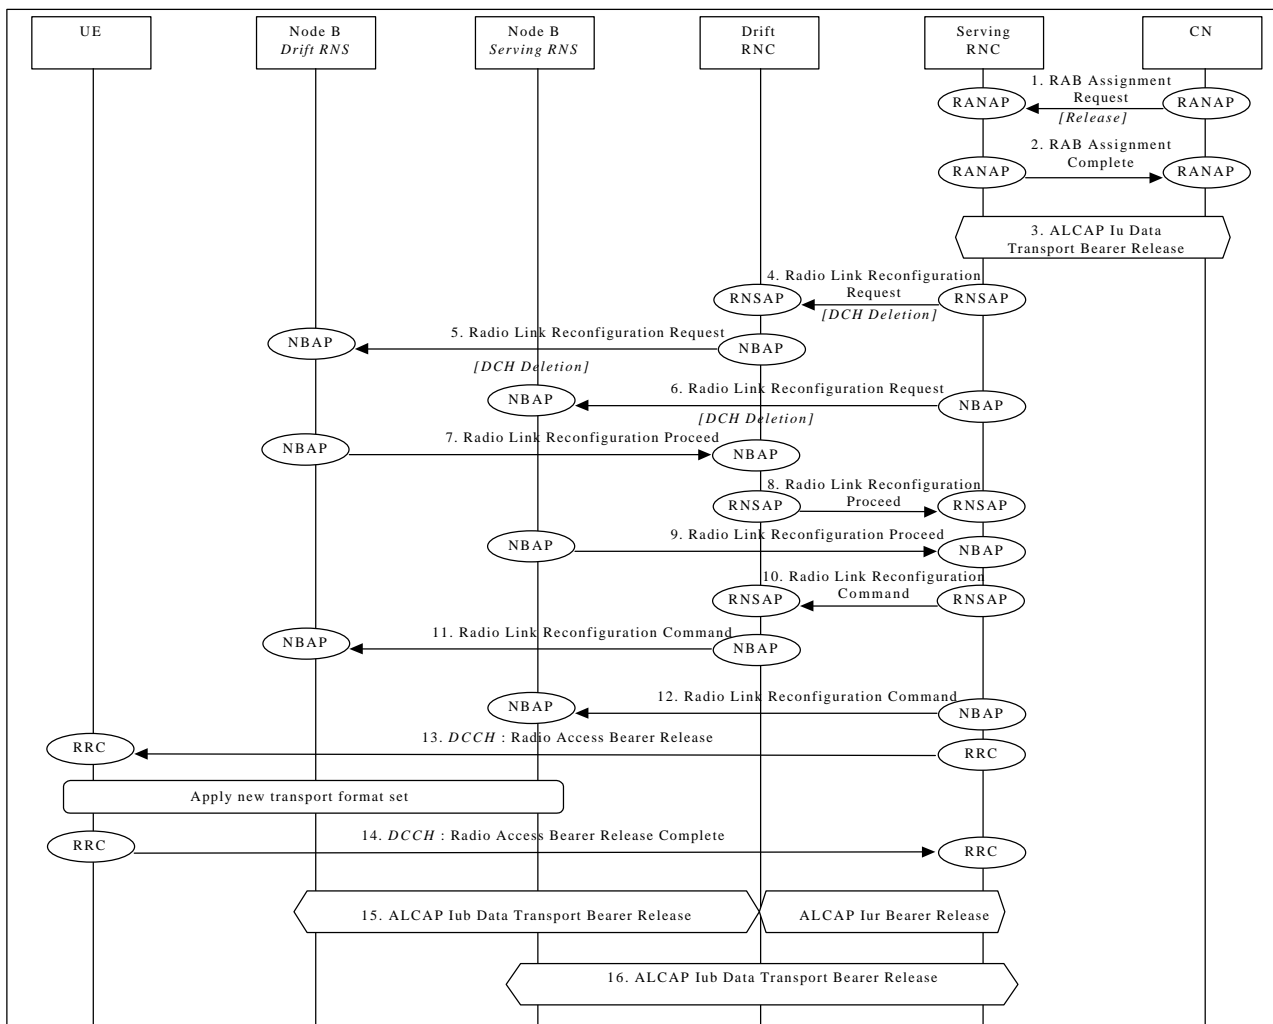


Figure 13: Radio Access Bearer Release - DCH - DCH Release

1. CN initiates release of the radio access bearer with RANAP message **RAB Assignment Request**.
2. SRNC acknowledges the release of radio access bearer (**RAB Assignment Complete**).
3. SRNC initiates release of the Iu Data Transport bearer between the CN and the SRNC using the ALCAP protocol.
4. SRNC requests DRNC to prepare release of DCH carrying the RAB (**Radio Link Reconfiguration Request**).
Parameters: Transport Format Combination Set, UL scrambling code..
5. DRNC requests its Node B to prepare release of DCH carrying the RAB (**Radio Link Reconfiguration Request**).
Parameters: Transport Format Combination Set, UL scrambling code, DL channelisation code.
6. SRNC requests its Node B to prepare release of DCH carrying the RAB (**Radio Link Reconfiguration Request**).
Parameters: Transport Format Combination Set, UL scrambling code, DL channelisation code.
7. Node B notifies DRNC that release preparation is ready (**Radio Link Reconfiguration Proceed**).

8. DRNC notifies SRNC that release preparation is ready (**Radio Link Reconfiguration Proceed**).
9. Node B notifies SRNC that release preparation is ready (**Radio Link Reconfiguration Proceed**).
10. RNSAP message **Radio Link Reconfiguration Command** is sent from SRNC to DRNC.
Parameters:
11. NBAP message **Radio Link Reconfiguration Command** is sent from DRNC to Node B.
Parameters:
12. NBAP message **Radio Link Reconfiguration Command** is sent from SRNC to Node B.
Parameters:
13. RRC message **Radio Access Bearer Release** is sent by SRNC to UE.
Parameters: Transport Format Set, Transport Format Combination Set, DL channelisation code per cell.
14. UE sends RRC message **Radio Access Bearer Release Complete** to SRNC.
15. Not used resources in SRNC, DRNC and Node B are released. SRNC initiates release of Iur Data Transport bearer using ALCAP protocol.

5.2.7.2 DCH - CCH Release

This example shows release of a radio access bearer on a common channel (CCH) when the RRC connection still uses a dedicated channel (DCH) after the release.

5.2.7.3 CCH - DCH Release

This example shows release of a radio access bearer on a dedicated channel (DCH) when the RRC connection still uses a common channel (CCH) after the release.

5.2.7.4 CCH - CCH Release

This example shows release of a radio access bearer on a common channel (CCH) when the RRC connection still uses a common channel (CCH) after the release.

5.2.8 Radio Access Bearer Re-establishment

The following examples show re-establishment of a radio access bearer either on a dedicated channel (DCH) or on a common channel (CCH) when the RRC connection already uses a dedicated channel (DCH) or a common channel (CCH).

5.2.8.1 DCH - DCH Re-establishment

This example shows re-establishment of a radio access bearer on a dedicated channel (DCH) when the RRC connection already uses a dedicated channel (DCH).

5.2.8.2 CCH - DCH Re-establishment

This example shows re-establishment of a radio access bearer on a dedicated channel (DCH) when the RRC connection already uses a common channel (CCH).

5.2.8.3 DCH - CCH Re-establishment

This example shows re-establishment of a radio access bearer on a common channel (CCH) when the RRC connection already uses a dedicated channel (DCH).

5.2.8.4 CCH - CCH Re-establishment

This example shows re-establishment of a radio access bearer on a common channel (CCH) when the RRC connection already uses a common channel (CCH).

5.2.9 Radio Access Bearer Modification

The following examples show modification of a radio access bearer established either on a dedicated channel (DCH) or on a common channel (CCH).

5.2.9.1 DCH Modification

This example shows modification of a radio access bearer on a dedicated channel (DCH)

5.2.9.2 CCH Modification

This example shows modification of a radio access bearer on a common channel (CCH).

5.2.10 Channel Type Switching

The following examples show switching from one channel type to another.

5.2.10.1 PCH to RACH/FACH

This example shows channel switching from PCH to RACH/FACH.

5.2.10.2 RACH/FACH to PCH

This example shows channel switching from RACH/FACH to PCH

5.2.10.3 RACH/FACH to DCH

This example shows channel switching from RACH/FACH to DCH

5.2.10.4 DCH to RACH/FACH

This example shows channel switching from DCH to RACH/FACH

5.2.11 Soft Handover

This section presents some examples of soft handover procedures. The following cases are considered:

- Radio Link Addition (Branch Addition);
- Radio link Deletion (Branch Deletion);
- Radio link Addition & Deletion (Branch Addition & Deletion - simultaneously).

Note that Soft Handover applies only to FDD mode.

5.2.11.1 Radio Link Addition (Branch Addition)

This example shows establishment of a radio link via a Node B controlled by another RNC than the serving RNC. This is the first radio link to be established via this RNS, thus macro-diversity combining/splitting with already existing radio links within DRNS is not possible.

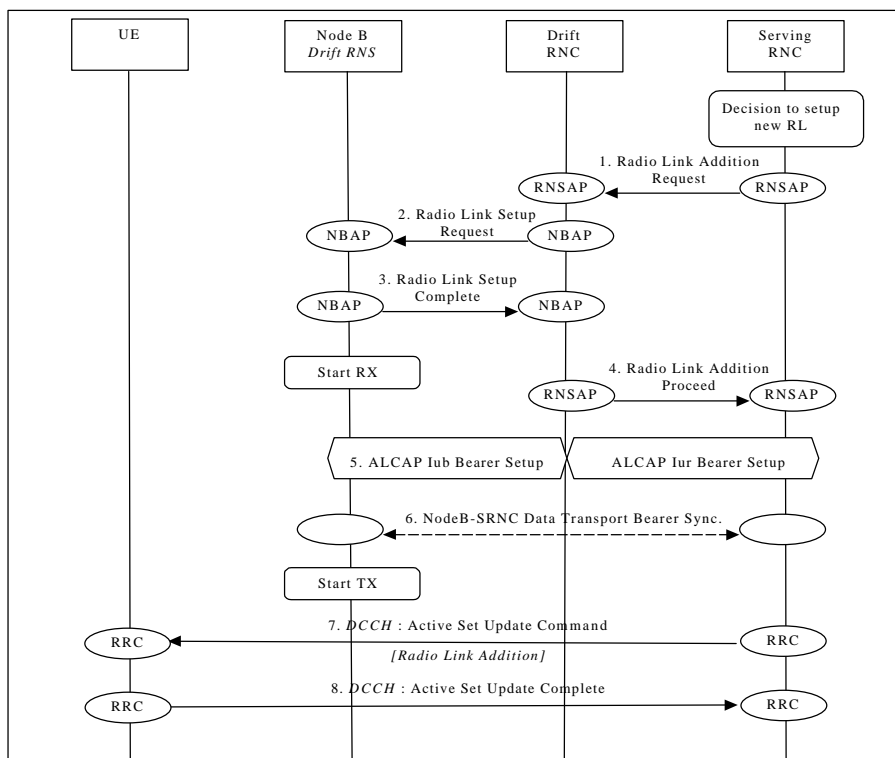


Figure 14: Soft Handover - Radio Link Addition (Branch Addition)

1. SRNC decides to setup a radio link via a new cell controlled by another RNC. SRNC requests DRNC for radio resources by sending RNSAP message **Radio Link Addition Request**. If this is the first radio link via the DRNC for this UE, a new Iur signalling connection is established. This Iur signalling connection will be used for all RNSAP signalling related to this UE.

Parameters: Cell id, Transport Format Set per DCH, Transport Format Combination Set, frequency, UL scrambling code.

2. If requested resources are available, DRNC sends NBAP message **Radio Link Setup Request** to Node B.
Parameters: Cell id, Transport Format Set per DCH, Transport Format Combination Set, frequency, UL scrambling code, DL channelisation code.
3. Node B allocates requested resources. Successful outcome is reported in NBAP message **Radio Link Setup Complete**.
Parameters: Signalling link termination, Transport layer addressing information (AAL2 address, AAL2 Binding Identity(s)) for Data Transport Bearer(s).

Then Node B starts the UL reception.

4. DRNC sends RNSAP message **Radio Link Addition Proceed** to SRNC.
Parameters: DL channelisation code, Transport layer addressing information (AAL2 address, AAL2 Binding Identity) for Data Transport Bearer(s), Neighbouring cell information.
5. SRNC initiates setup of Iur/Iub Data Transport Bearer using ALCAP protocol. This request contains the AAL2 Binding Identity to bind the Iub Data Transport Bearer to DCH. This may be repeated for each Iur/Iub Data Transport Bearer to be setup.
6. Node B and SRNC establish synchronism for the Data Transport Bearer(s), relative already existing radio link(s). Then Node B starts DL transmission.
7. SRNC sends RRC message **Active Set Update Command (Radio Link Addition)** to UE on DCCH.
Parameters: Update type, Cell id, DL scrambling code, DL channelisation code, Power control information, Ncell information.
8. UE acknowledges with RRC message **Active Set Update Complete**.

5.2.11.2 Radio link Deletion (Branch Deletion)

This example shows deletion of a radio link belonging to a Node B controlled by another RNC than the serving RNC.

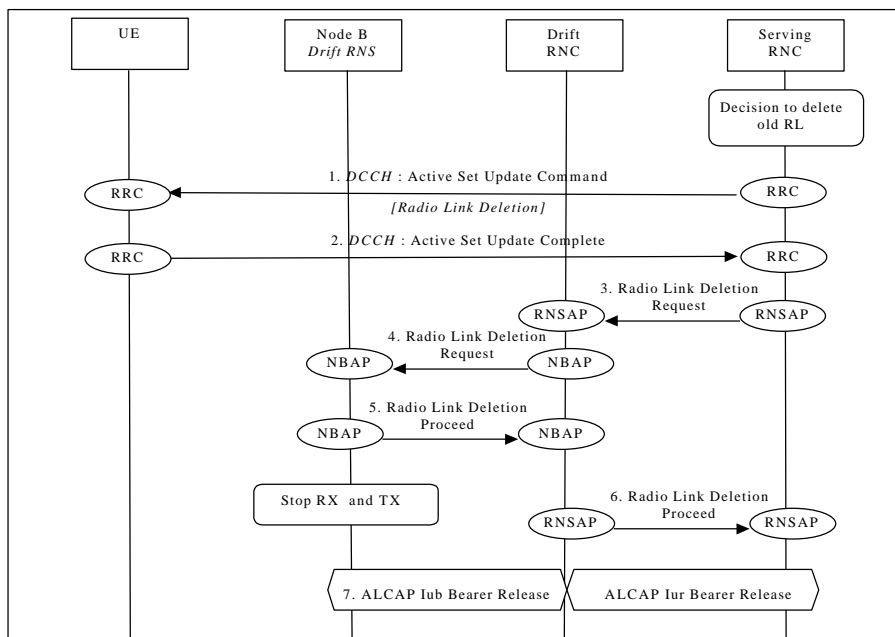


Figure 15: Soft Handover - Radio Link Deletion (Branch Deletion)

- SRNC decides to remove a radio link via an old cell controlled by another RNC. SRNC sends RRC message **Active Set Update Command (Radio Link Deletion)** to UE on DCCH.
Parameters: Update type, Cell id.
- UE deactivates DL reception via old branch, and acknowledges with RRC message **Active Set Update Complete**.
- SRNC requests DRNC to deallocate radio resources by sending RNSAP message **Radio Link Deletion Request**.
Parameters: Cell id, Transport layer addressing information.
- DRNC sends NBAP message **Radio Link Deletion Request** to Node B.
Parameters: Cell id, Transport layer addressing information.
- Node B deallocates radio resources. Successful outcome is reported in NBAP message **Radio Link Deletion Proceed**.
- DRNC sends RNSAP message **Radio Link Deletion Proceed** to SRNC.
- SRNC initiates release of Iur/Iub Data Transport Bearer using ALCAP protocol.

5.2.11.3 Radio link Addition & Deletion (Branch Addition & Deletion - simultaneously)

This example shows simultaneous deletion of a radio link belonging to a Node B controlled by the serving RNC and the establishment of a radio link via a Node B controlled by another RNC than the serving RNC. This is the first radio link to be established via this RNS, thus macro-diversity combining/splitting with already existing radio links within DRNS is not possible.

This procedure is needed when the maximum number of branches allowed for the macrodiversity set has already been reached.

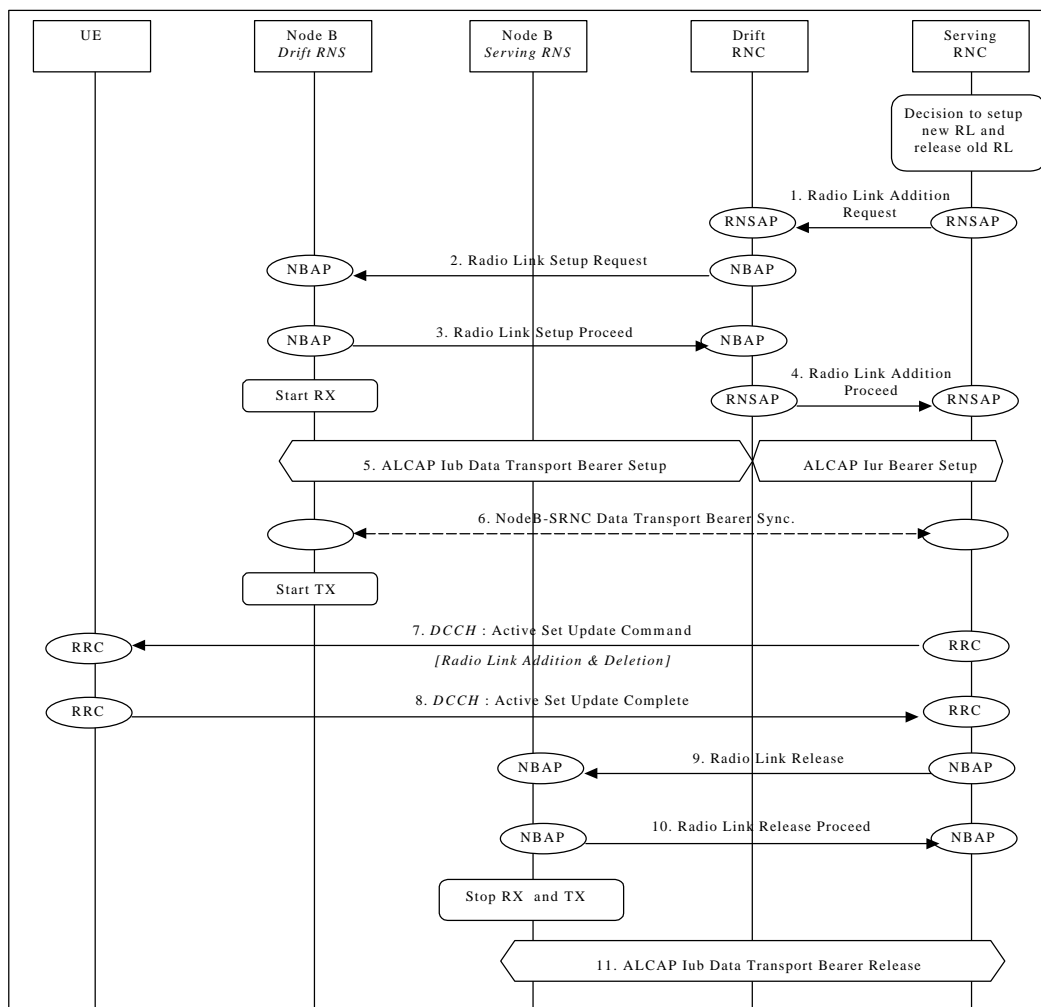


Figure 16: Soft Handover - Radio link Addition & Deletion (Branch Addition & Deletion - simultaneously)

1. ⇒ 6. See description 1. ⇒ 6. in Section 7.2.11.1.
2. SRNC sends RRC message **Active Set Update Command (Radio Link Addition & Deletion)** to UE on DCCH. Parameters: Update type, Cell id, DL scrambling code, DL channelisation code, Power control information, Ncell information.
3. UE deactivates DL reception via old branch, activates DL reception via new branch and acknowledges with RRC message **Active Set Update Complete**.
4. ⇒ 11. See description 3. ⇒ 7. in Section 7.2.11.2

5.2.12 Hard Handover

This section presents some examples of hard handover procedures. These procedures may be applied in the following cases:

- intra-frequency Hard Handover (TDD mode);
- inter-frequency Hard Handover (FDD and TDD mode).

5.2.12.1 Intra-RNS Hard Handover

This example shows Intra-RNS Hard Handover.

5.2.12.2 Inter-RNS Hard Handover

This section presents some examples of Inter-RNS Hard Handover. In the first sub-section the case of Inter-RNS Hard Handover via Iur interface is considered.

In the second sub-section two examples of Inter-RNS Hard Handover with switch in CN are presented.

In this second case the Iur interface is not used and the SRNC role is relocated to the new RNC, here denoted Target RNC. This could be the case of an Inter-PLMN Handover.

5.2.12.2.1 Inter-RNS Hard Handover via Iur

This section shows an example of Inter-RNS Hard Handover via Iur.

5.2.12.2.2 Inter-RNS Hard Handover with switching in the CN

This section shows two examples of Inter-RNS Hard Handover with switch in CN. In the first case it is assumed that the UE is connected to a single CN node, while in the second case it is assumed that the UE is connected to two CN nodes simultaneously.

Note that CN scenarios are still under discussion in SMG12.

5.2.12.2.2.1 Inter-RNS Hard Handover with switching in the CN (UE connected to a single CN)

This example shows Inter-RNS Hard Handover with switch in CN, in a situation in which the UE is connected to a single CN node.

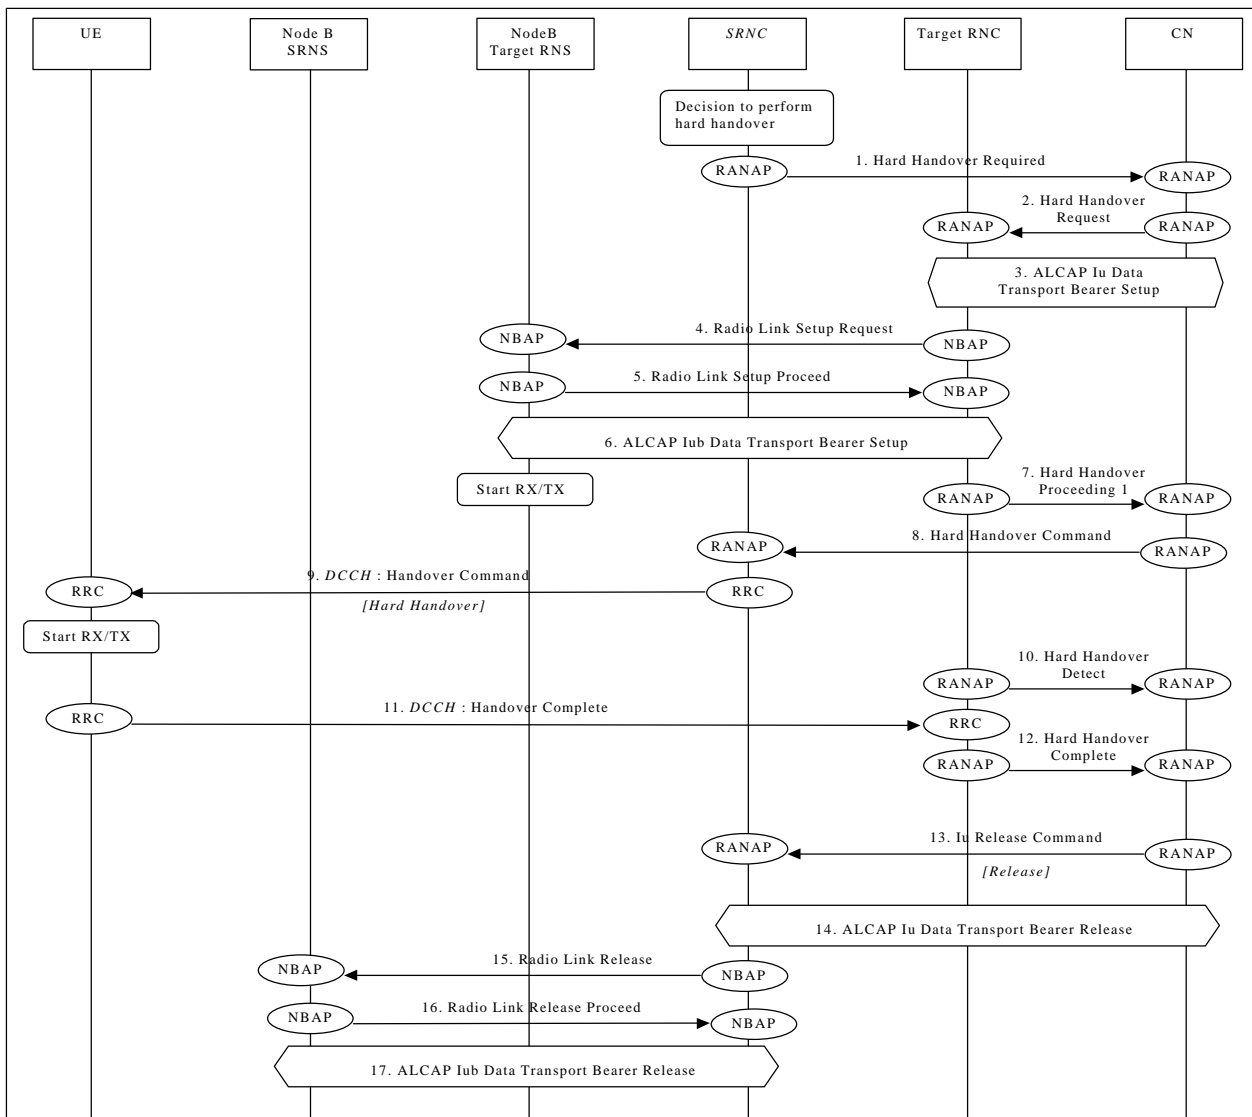


Figure 17: Inter-RNS Hard Handover with switching in the CN (UE connected to a single CN node)

1. SRNS initiates the preparation of Inter-RNS Handover with switch in CN by sending RANAP message **Hard Handover Required** to CN. After reception of this message, CN will not initiate RANAP procedures such as RAB Assignment.
Parameters: Target RNC identification
Information sent transparently to Target RNC (UE identification, Cell Identity, UE Capability Information, UL scrambling code)
 The list of RANAP procedures not allowed to be initiated after CN reception of RANAP message **Hard Handover Required** is FFS. Whether it should be possible to specify a set of cell identities, i.e. setup more than one radio link at hard handover, is FFS.
2. CN requests Target RNC to prepare for Inter-RNS Hard Handover (**Hard Handover Request**)
Parameters: RAB QoS parameters for each RAB, Transport Layer addressing information and binding information per RAB
 Information sent transparently from SRNC via CN to Target RNC (UE identification, Cell Identity, UE Capability Information, UL scrambling code)
3. Target RNC initiates setup of Iu data transport bearer using ALCAP protocol. This request contains binding identity to bind the Iu data transport bearer to RAB.
 This may be repeated for each Iu data transport bearer to be setup.
4. Target RNC initiates setup of radio link in cell (**Radio Link Setup Request**)
Parameters: Cell identity, Transport Format Set per DCH, Transport Format Combination Set, frequency, UL scrambling code.

5. Node B allocates requested resources. Successful outcome is reported in NBAP message **Radio Link Setup Proceed**.
Parameters: DL channelisation code, Transport Layer addressing information and binding information for Iub data transport bearer(s).
6. Target RNC initiates setup of Iub data transport bearer using ALCAP protocol. This request contains Binding Identity to bind the Iub data transport bearer to the DCH.
This may be repeated for each Iub data transport bearer to be setup.
7. RNC sends message **Hard Handover Proceeding 1** to CN. At reception of this message in CN, CN suspends NAS message sending towards UE.
Parameters: Information to be sent transparently via CN and SRNC to UE (RRC message Handover Command, including e.g. Transport Format Set per DCH, Transport Format Combination Set, frequency, DL channelisation code)
8. CN sends RANAP message **Hard Handover Command** to SRNC.
Parameters: e.g. Transport Format Set per DCH, Transport Format Combination Set, frequency, DL channelisation code.
9. SRNC sends RRC message **Handover Command (Hard Handover)** to UE.
Parameters: Handover type.
10. Upon detection of PHY synchronisation, Target RNC starts acting as SRNC for the UE, and RANAP message **Hard Handover Detect** is sent from Target RNC to CN. CN may use this message as trigger point for switch of Iu data transport bearers.

The PHY synchronisation detection mechanism is FFS.
11. After completed handover, UE sends RRC message **Handover Complete** to Target RNC.
12. Target RNC sends RANAP **Hard Handover Complete** to CN. This indicates for CN that activation of RANAP procedures and NAS signalling can be resumed.
13. CN initiates release of resources allocated by the former SRNC (**Iu Release Command**).
14. The former SRNC initiates release of Iu data transport bearer(s) using the ALCAP protocol.
15. The former SRNC requests release of radio link(s) (**Radio Link Deletion Request**).
The request may be repeated if radio links of several Nodes B are to be deleted.
16. Node B acknowledges deletion of Radio Link, and stops RX/TX (**Radio Link Deletion Proceed**).
17. The former SRNC initiates release of Iub data transport bearer(s) using the ALCAP protocol.

5.2.12.2.2 Inter-RNS Hard Handover with switching in the CN (UE connected to two CN nodes)

This example shows Inter-RNS Hard Handover with switch in CN, in a situation in which the UE is connected to two CN nodes simultaneously.

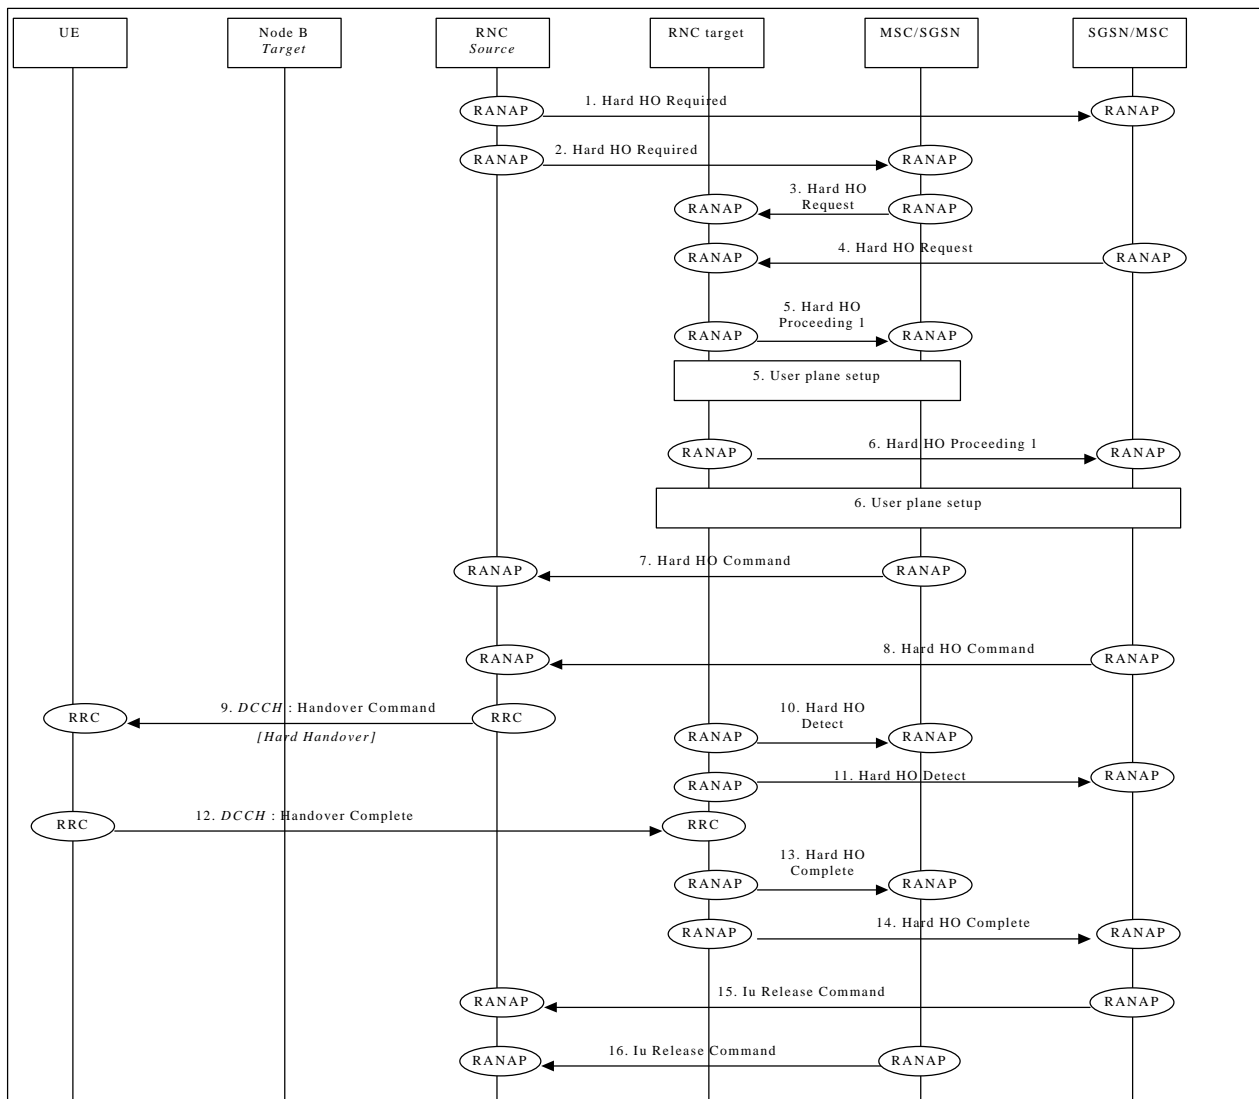


Figure 18: Inter-RNS Hard Handover with switching in the CN (UE connected to two CN nodes)

Serving RNC makes the decision to perform the Hard Handover via CN. Serving RNC also decides into which RNC (Target RNC) the Serving RNC functionality is to be relocated.

- 1./2. SRNC sends **Hard Handover Required** messages to both CN nodes.
Parameters: target RNC identifier, Information field transparent to the CN node and to be transmitted to the target RNC.
 Upon reception of **Hard Handover Required** message CN element prepares itself for the switch and may also suspend data traffic between UE and itself for some bearers.
- 3./4. When preparation is completed CN node conveys a **Hard Handover Request** message to the target RNC.
Parameters: bearer ID's requested to be rerouted towards the CN node, from which the Hard Handover Request originated.
 CN indicates in the message whether it prefers point to multipoint type of connections within CN or hard switch in CN. In this example the latter is assumed.
 Target RNC allocates necessary resources within the UTRAN to support the radio links to be used after completion of the Hard Handover procedure.
- 5./6. Target RNC and CN node establish the new Iu transport bearers for each Radio Access Bearer related to the CN node. When RNC has completed preparation phase, **Hard Handover Proceeding 1** is sent to the CN element.
Parameters: transparent field to the CN which is to be transmitted to the Source RNS.

- 7./8. When CN is ready for the change of SRNC, CN node sends a **Hard Handover Command** to the source RNC. Message contains the transparent field provided by Target RNC.
Parameters: information provided in the Information field from the target RNC.
9. Source RNC sends a RRC message **Handover Command** (*Hard Handover*) to the UE.
Parameters: Handover type.
- 10./11. When target RNC has detected the UE, **Hard Handover Detect** message is sent to the CN nodes. Target RNC switches also the connection towards the new Iu, when UE is detected. After the switch UL traffic from node-B's is routed via the newly established MDC to the new MAC/RLC entities and finally to the correct Iu transport bearer. DL data arriving from the new Iu link is routed to newly established RLC entities, to the MAC and to the MD-splitter and Nodes B.
12. When the RRC connection is established with the target RNC and necessary radio resources have been allocated the UE sends RRC message **Handover complete** to the target RNC.
- 13./14. After a successful switch and resource allocation at target RNC, RNC sends **Hard Handover Complete** messages to the involved CN nodes.

At any phase, before the **Hard Handover Complete** message is sent, the old communication link between the CN and UE is all the time existing and working and the procedure execution can be stopped and original configuration easily restored. If any such unexceptional thing occurs a **Hard Handover Failure** message may be sent instead of any message numbered 3-10 and 13-14 described in this above.
- 15./16. The CN nodes initiates the release of the Iu connections to the source RNC by sending RANAP message **Iu Release Command**.

Upon reception of the release requests from the CN nodes the old SRNC executes all necessary procedures to release all visible UTRAN resources that were related to the RRC connection in question.

5.2.13 Cell Update

This section presents some examples of Cell Update procedures, i.e. those procedures that update the position of the UE when a RRC connection exists and the position of the UE is known on cell level in the UTRAN.

5.2.13.1 Intra-RNS Cell Update

This example shows Intra-RNS Cell Update.

5.2.13.2 Inter-RNS Cell Update with switching in the CN

This example shows Inter-RNS Cell Update with switching in the CN.

5.2.14 URA Update

This section presents some examples of URA Update procedures, i.e. those procedures that update the UTRAN registration area of a UE when a RRC connection exists and the position of the UE is known on URA level in the UTRAN.

5.2.14.1 Intra-RNS URA Update

This example shows Intra-RNS URA Update.

5.2.14.2 Inter-RNS URA Update with switching in the CN

This example shows Inter-RNS URA Update with switching in the CN.

5.2.15 SRNS Relocation

This section shows two examples of SRNS Relocation. In the first case it is assumed that the UE is connected to a single CN node, while in the second case it is assumed that the UE is connected to two CN nodes simultaneously.

Note that CN scenarios are still under discussion in SMG12.

5.2.15.1 SRNC Relocation (UE connected to a single CN node)

This example shows SRNS Relocation, in a situation in which the UE is connected to a single CN node.

5.2.15.2 SRNC Relocation (UE connected to two CN nodes)

This example shows SRNS Relocation, in situation in which the UE is connected to two CN nodes simultaneously. It is assumed that:

- all cells in the active set are in one DRNC;
- the CN performs hard switching of the user traffic.

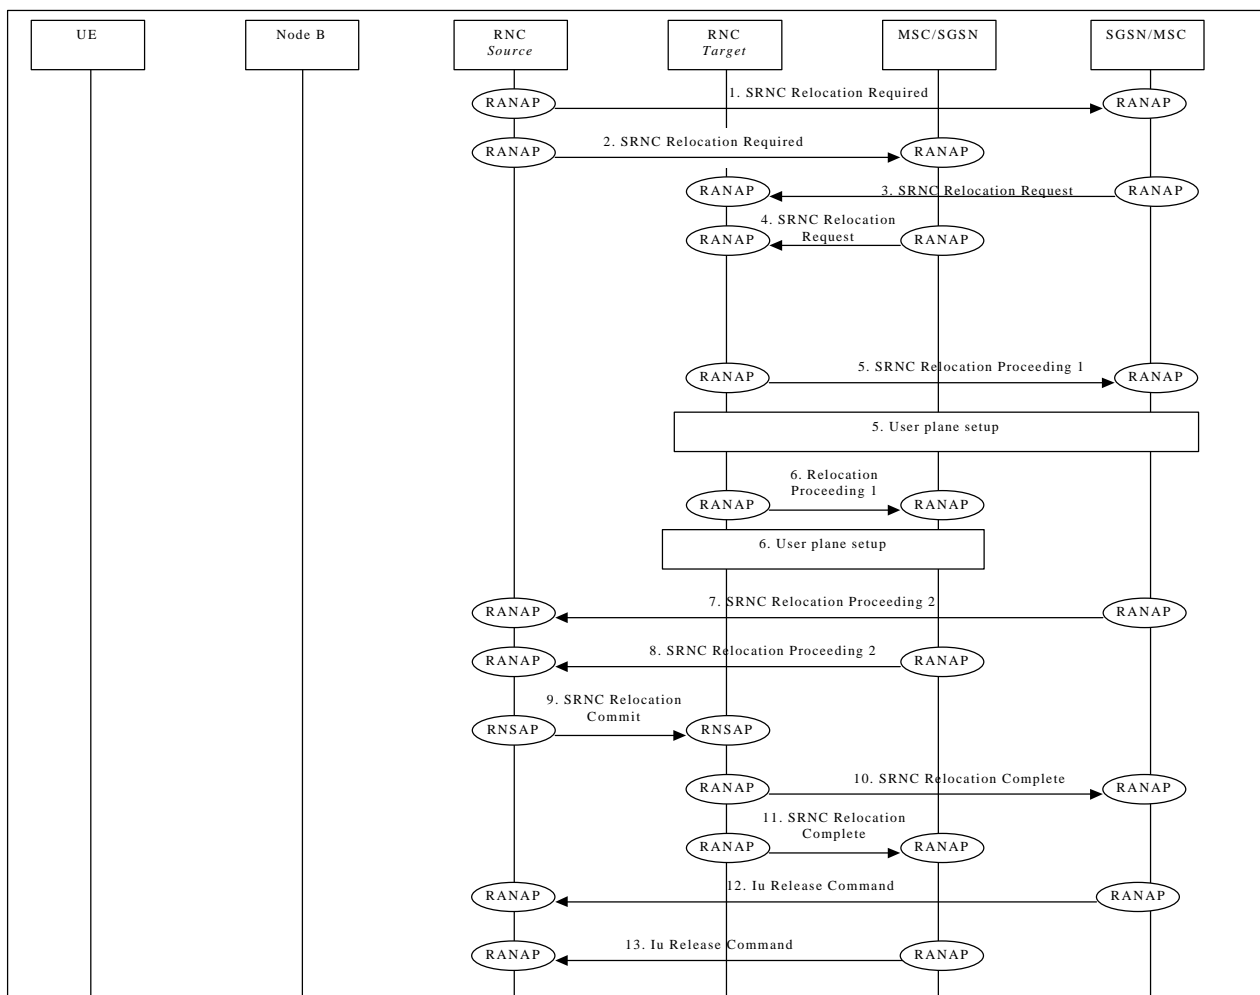


Figure 19: SRNC Relocation (UE connected to two CN nodes)

Note that the SRNC makes the decision to perform the Serving RNC relocation procedure. The Serving RNC also decides into which RNC (Target RNC) the Serving RNC functionality is to be relocated.

1./2. The source SRNC sends **SRNC Relocation Required** messages to both CN nodes.

Parameters: target RNC identifier, Information field that the CN node(s) shall pass transparently to the target RNC. This transparent field contains the UE identifier, number of CN nodes and other TBD data.

Upon reception of **SRNC Relocation Required** message the CN element prepares itself for the switch and may also suspend user data traffic and/or signalling between UE and itself for some bearers.

- 3./4. When preparation is completed the CN node conveys a **SRNC Relocation Request** message to the target RNC.

Parameters: indication of which bearers should be routed towards this CN node, transparent information field sent by the source RNC, UE identifier.

The target RNC uses the UE identifier to link the requests from multiple CN nodes to each other and to the resources (e.g. Iub links) that the UE is currently using.

FFS: The target RNC allocates necessary Iur branches to be used after the SRNC relocation switch will be made.

- 5./6. The target RNC and CN node establish the new Iu transport bearers for each Radio Access Bearer related to that CN node.

When the RNC has completed its preparation phase, **Relocation Proceeding 1** message is sent to CN.

- 7./8. When the CN node is ready for the SRNC move, the CN node indicates the completion of preparation phase at the CN side for the SRNC relocation by sending the **SRNC Relocation Proceeding 2** message. To the source RNC.

9. When the source RNC has received **SRNC Relocation Proceeding 2** messages from all the CN nodes, the source RNC sends a **SRNC Relocation Command** message to the target RNC. The target RNC executes both the DL and UL switch for all bearers at the earliest suitable time instance.

After the switch UL traffic from node-B's is routed via the newly established Macro Diversity Combiner to the new MAC/RLC entities and finally to the correct Iu transport bearer. UL data transmission to the old Iur transport bearer is ceased.

DL data arriving from the new Iu link is routed to newly established RLC entities, to the MAC and to the Macro Diversity Splitter and Nodes B. The DL data received from the old Iur is discarded.

- 10./11. Immediately after a successful switch at RNC, target RNC (=SRNC) sends **SRNC Relocation Complete** messages to the involved CN nodes.

Upon reception of messages 9 and 10, the CN switches from the old Iu transport bearers to the new ones.

- 12./13. After a successful switch at the CN node, the CN node initiates the release of the Iu connection to the source RNC by sending the RANAP message **Iu Release Command**.

Upon reception of the release requests from the CN nodes the old SRNC executes all necessary procedures to release all visible UTRAN resources that were related to the RRC connection in question.

At any phase, before the **SRNC Relocation Complete** message is sent, the old communication link between the CN and UE is all the time existing and working and the procedure execution can be stopped and original configuration easily restored. If any such abnormal thing occurs a **SRNC Relocation Failure** may be sent instead of any message numbered 3-11 described.

5.2.16 HO between UTRAN and GSM/BSS

This section presents some examples of handover procedure from UTRAN to GSM/BSS and vice versa. Both the case of a UTRAN connected to a GSM CN through an IWF (where RANAP is interworked with BSSMAP) and the case a UMTS CN connected to a 2G-MSC (i.e. via MAP/E interface) are considered.

The role of IWF is FFS.

5.2.16.1 UTRAN ⇒ GSM/BSS via IWF

This example shows handover procedure from UTRAN to GSM/BSS via IWF.

Editor's Note: Interactions between the Node B/RNC and BSC/BTS will be added in a later phase.

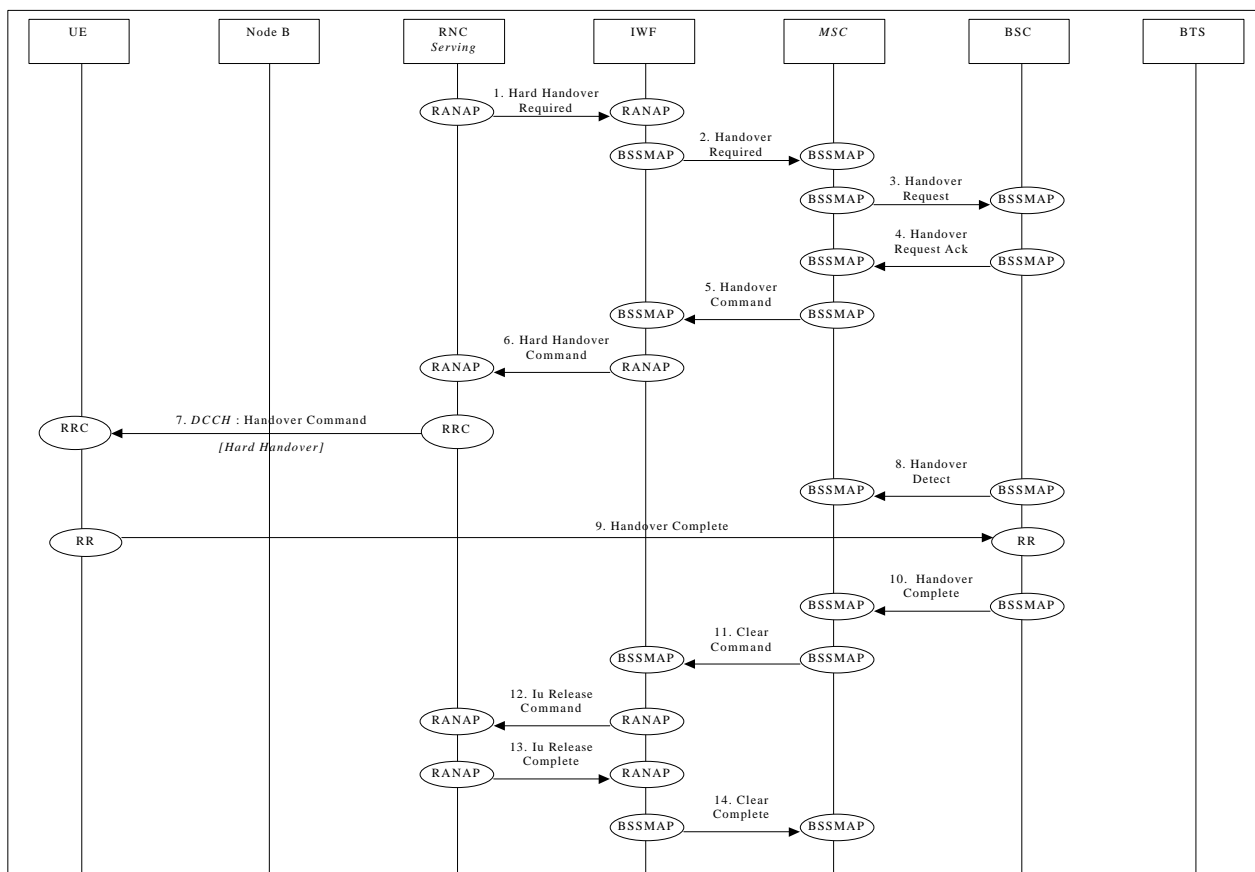


Figure 20: UTRAN ⇒ GSM/BSS handover via IWF

1. Upon detection of a trigger SRNC sends RANAP message **Hard Handover Required** to IWF.
 2. IWF forwards this request to the GSM MSC (**Handover Required**).
- Steps 3&4 follow the normal GSM procedures and are shown only for clarity.
5. GSM MSC responds to the initial request from IWF by sending BSSMAP message **Handover Command** to the IWF.
 6. IWF forwards this request to the SRNC (**Hard Handover Command**).
 7. Serving RNC sends a RRC message **Handover Command (Hard Handover)** to the UE.
Parameters: Handover type.
- Steps 8&10 follow the normal GSM procedures and are shown only for clarity.
11. GSM MSC sends **Clear Command** to IWF to release previously allocated bearer resources.
 12. IWF forwards this request to the SRNC (**Iu Release Command**)
 13. Previously allocated bearer resources are released within UMTS (using RANAP and ALCAP protocols [ALCAP not shown]). SRNC responds with RANAP message **Iu Release Complete**.
 14. IWF forwards this confirmation to the GSM MSC (**Clear Complete**).

5.2.16.2 UTRAN ⇒ GSM/BSS via MAP/E interface

This example shows how handover (Hard Handover) is performed from UTRAN to GSM/BSS via MAP/E interface between a UMTS CN and a 2G-MS.

Editor's Note: Interactions between the Node B/RNC and BSC/BTS will be added in a later phase.

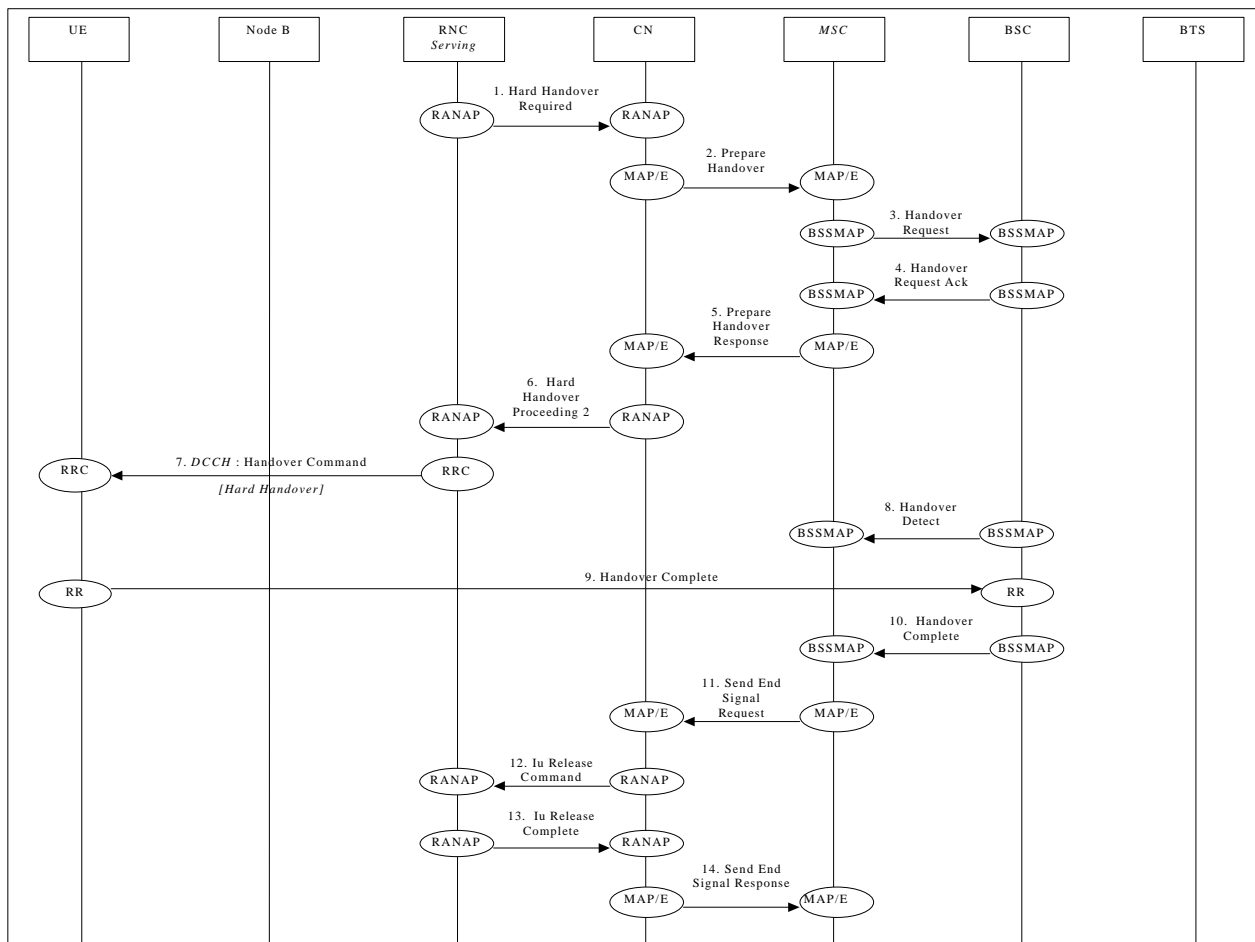


Figure 21: UTRAN ⇒ GSM/BSS handover via MAP/E interface

1. Upon detection of a trigger SRNC sends RANAP message **Hard Handover Required** to the CN.
2. The UMTS CN will forward this request to the GSM MSC (indicated in the received message) over the MAP/E interface (MAP message **Prepare Handover**).

Note: Steps 3&4 follow the normal GSM procedures and are shown only for clarity.

5. Once initial procedures are complete in GSM MSC/BSS the MSC returns MAP/E message **Prepare Handover**.
6. CN responds to the initial request from SRNC by sending RANAP message **Hard Handover Proceeding 2** to the SRNC.
7. Via existing RRC connection, SRNC sends RRC message **Handover Command (Hard Handover)** to the UE.

Parameters: Handover type.

Note: Procedures related to synchronisation etc. to GSM BSS are not shown.

Note: Step 8&10 follow normal GSM procedures and are shown only for clarity.

11. Detection of the UE within the GSM coverage results in the MSC sending MAP/E message **Send End Signal Request** to the CN.
12. CN initiates release of resources allocated by the former SRNC (**Iu Release Command**).
13. Previously allocated bearer resources are released within UMTS (e.g. using RANAP and ALCAP protocols [ALCAP not shown]) (**Iu Release Complete**).
14. Procedure is concluded from UMTS point of view by CN sending MAP/E message **Send End Signal Response** (this message is not sent until the end of the call).

5.2.16.3 GSM/BSS ⇒ UTRAN via IWF

This example shows handover procedure from GSM/BSS to UTRAN.

Editor's Note: Interactions between the Node B/RNC and BSC/BTS will be added in a later phase.

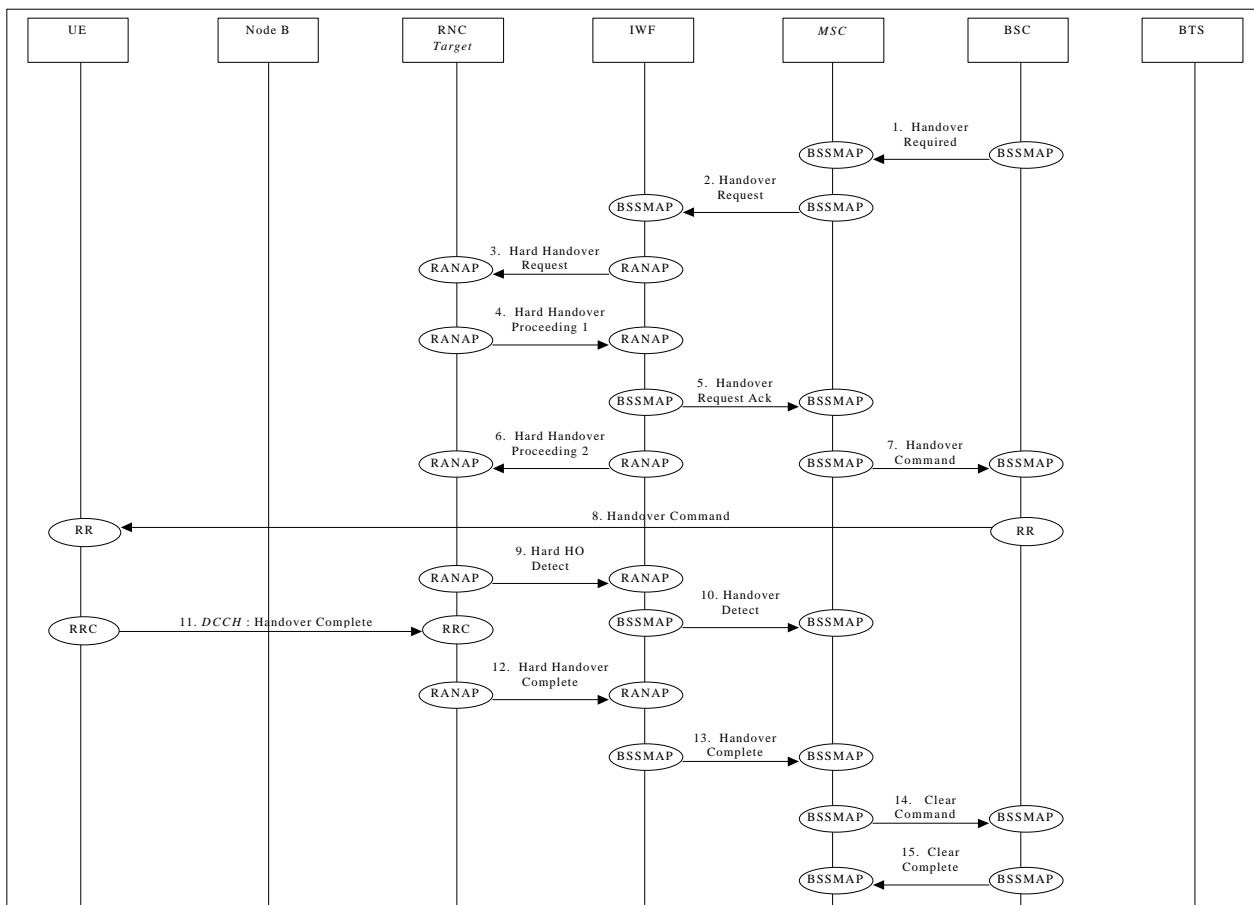


Figure 22: GSM/BSS ⇒ UTRAN handover via IWF

1. The BSC sends **Handover Required** message to the GSM MSC.
2. GSM MSC sends BSSMAP message **Handover Request** to IWF.
3. IWF forwards this request to the target RNC (**Hard Handover Request**).
4. RANAP response **Hard Handover Proceeding 1** is returned to the IWF by the target RNC.
5. IWF forwards this message to the GSM MSC (**Handover Request Ack**).
6. IWF sends RANAP message **Hard Handover Proceeding 2** to the target RNC and the RNC activates reserved resources for the new connection

Note: Step 7&8 follow normal GSM procedures and are shown only for clarity.

9. When target RNC has detected the UE, **Hard Handover Detect** message is sent to the IWF.
10. The IWF forwards the **Handover Detect** message to the MSC.
11. When the RRC connection is established with the target RNC and necessary radio resources have been allocated, the UE sends RRC message **Handover complete** to the target RNC.
12. Once complete the target RNC sends RANAP message **Hard Handover Complete** to the IWF.
13. IWF forwards this message to the GSM MSC (**Handover Complete**).

Steps 14&15 are normal GSM procedures and are shown only for clarity.

5.2.16.4 GSM/BSS ⇒ UTRAN via MAP/E interface

This example shows how handover (Hard Handover) is performed from GSM/BSS to UTRAN via MAP/E interface between a UMTS CN and a 2G-MSC.

Editor's Note: Interactions between the Node B/RNC and BSC/BTS will be added in a later phase.

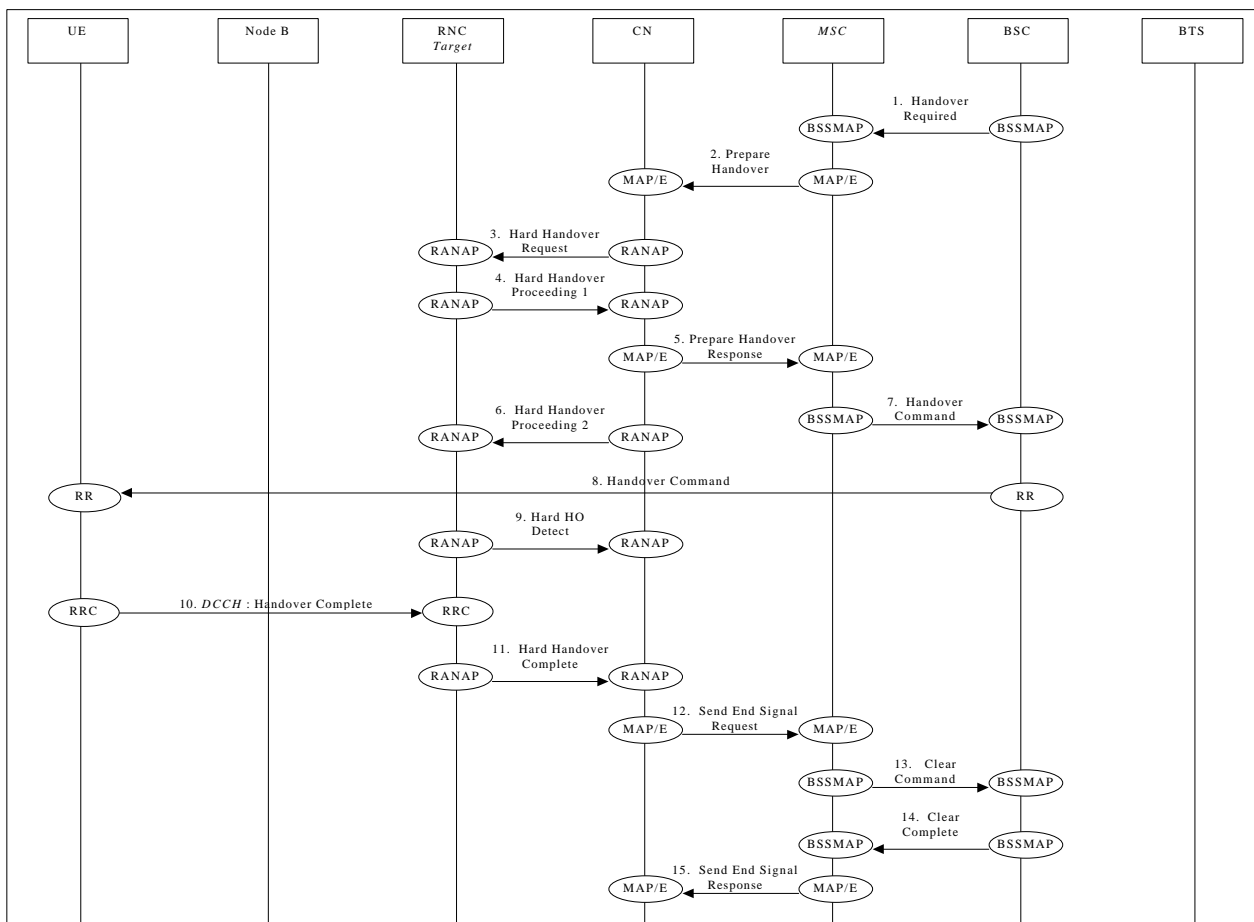


Figure 23: GSM/BSS ⇒ UTRAN handover via MAP/E interface

1. The BSC sends **Handover Required** message to the GSM MSC.
2. The MSC sends MAP/E message **Prepare Handover** to the UMTS CN.
3. The CN sends RANAP message **Hard Handover Request** to the Target RNC.
4. Response **Hard Handover Proceeding 1** is returned to the CN by the target RNC via RANAP.
5. MAP/E message **Prepare Handover Response** is sent by the UMTS CN to the MSC.
6. The CN sends RANAP message **Hard Handover Proceeding 2** to the Target RNC and the RNC activates reserved resources for the new connection.

Note: Step 7&8 follow normal GSM procedures and are shown only for clarity.

9. When target RNC has detected the UE, **Hard Handover Detect** message is sent to the CN node.
10. When the RRC connection is established with the target RNC and necessary radio resources have been allocated the UE sends RRC message **Handover complete** to the target RNC.

11. Once complete the target RNC sends RANAP message **Hard Handover Complete** to the CN.
12. CN sends MAP/E message **Send End Signal Request** to the MSC.
13. The MSC sends **Clear Command** message to the BSC.
14. The BSC responds with **Clear Complete** message to the GSM
15. The MSC sends MAP/E message **Send End Signal Response** to the UMTS CN to conclude the procedure (this message is not sent until the end of the call).

5.2.17 Load Indication

This section shows examples of load indication reporting.

5.2.18 Ciphering

This example shows ciphering procedure.

History

Document history		
Rapporteur for UMTS ZZ.02 is:		
Enrico Scarrone CSELT Tel. : +39 011 228 7084 Fax : +39 011 228 5520 Email : Enrico.Scarrone@cse.lt.it		
This document is written in Microsoft Word version 97.		
October 8 th 1998	0.0.1	First proposal from the editor
October 13 th 1998	0.0.2	Abbreviations added; Figure 2 and 3 modified; Section 7.2.2.1 added; Section 7.2.3.1 added; Section 7.2.3.2 added; Section 7.2.6.1 added; Section 7.2.10.1 added; Section 7.2.10.2 added; Section 7.2.10.3 added; Section 7.2.15.1 added; Section 7.2.15.2 added;
October 15 th 1998	0.0.3	BSAP renamed NBAP; References to Frame Number T in section 7.2.6.1 and 7.2.7.1 removed.
October 28 th 1998	0.0.4	New sub section in section 6 added; Table of protocol messages added in sections 6.1, 6.2, 6.3, 6.4, 6.5 and 6.6.
November 13 th 1998	0.0.5	Notation for the signalling procedures modified; NBAP message DCH Addition renamed Radio Link Reconfiguration; NBAP message DCH Release renamed Radio Link Reconfiguration; Some general text added at the beginning of some procedures; Figure 3 modified according to decision of L2&3 EG. Description of Figure 12 and 13 added by the editor.
December 10 th 1998	0.0.6	Table in Section 6.1 updated; Table in Section 6.2 updated; Table in Section 6.3 updated; Section 7.2.1 added; Section 7.2.12.2 added; Section 7.2.15.2 added; Section 7.2.16.2 added; Section 7.2.16.4 added; Message Bearer Release in section 7.2.16.2 renamed Iu Release Command; Message Bearer Release Complete in section 7.2.16.2 renamed Iu Release Complete;
December 12 th 1998	0.0.7	Logical and Transport Channels added to Figure 2 and 3; Section 7.2.1 split in 2 subsection according to decision during L23 EG meeting #8; Section 7.2.1.2 added according to decision during L23 EG meeting #8 (L23 Tdoc 543); Logical Channels added before RRC messages; Table in Section 6.5 modified; Table in Section 6.6 modified; Table in Section 6.7 modified; Modification of Handover messages in case of Soft Handover according to decision during L23 EG meeting #8.

December 21 th 1998	0.0.8	<p>Following NBAP messages added: Radio Link Addition Request/Proceed/Command; RNSAP messages Branch Reconfiguration renamed as Radio Link Reconfiguration; Following RNSAP and NBAP messages renamed: Prepare ⇒Request; Ready ⇒Proceed; Commit ⇒Command; Following NBAP messages renamed: RL Release ⇒ RL Deletion Request; RL Release Proceed ⇒ RL Deletion Proceed; Section 7.2.2.1 renamed; Section 7.2.2.2 renamed; RRC and RR signalling added to Figure 17 –20.</p>
January 22 th 1999	0.0.9	<p>Figure 5 in section 6 was not yet modified in order to cope with the agreed decision that MAC-c was in the Controlling RNC for the FACH and DSCH. MAC layer is therefore still missing in the DRNC 7.2.6.1: step 3 DL Channelisation codes was removed 7.2.7.1: step 4 DL Channelisation codes was removed 7.2.11.1: RL Setup Proceed was changed to RL Setup Complete to be aligned with UMTS ZZ.13 7.2.12.2.2.1 signal 13 and 14 were changed to "lu Release command"; 7.2.16.2 lu Release command was added before signal 12;</p>
January 1999	1.0.0	Reformatted for presentation for information to SMG#28
Date	Version	Comment